

Type 47900 & 48000 Furnaces

OPERATION MANUAL Series 1165, 1166 & 1205

Single Setpoint Models	F47910, F47910-26, F47910-33, F47914, F47915, F48010, F48010-26, F48010-33, F48014, F48015, F48015-60, F48018
Single Setpoint Models with OTP	F47920, F47920-26, F47920-33, F47924, F47925, F48020, F48020-26, F48020-33, F48024, F48025, F48025-60, F48028
8 Segment Programmable Models with OTP	F47920-80, F47920-26-80, F47920-33-80, F47924-80, F47925-80, F48020-80, F48020-26-80, F48020-33-80, F48024-80, F48025-80, F48025-60-80, F48028-80
4 X 16 Segment Programmable Models with OTP	F47950, F47950-26, F47950-33, F47954, F47955, F48050, F48050-26, F48050-33, F48055, F48055-60, F48058

Table of Contents

Safety Information	3
Alert Signals.....	3
Warnings	3
Introduction.....	5
Intended Use	5
General Usage.....	5
Principles of Operation	5
General Specifications	6
Type F47900 Models	6
Type F48000 Models	6
Environmental Conditions	7
Declaration of Conformity	7
Unpacking	8
Installation	9
Site Selection.....	9
Electrical Connections	9
Operation, All Models	10
Power Switch	10
Cycle Light	10
Door Safety Switch	10
Single Setpoint Models & Single Setpoint Models with OTP	11
Single Ramp & Dwell	16
8 Segment & 4 x 16 Segment Programmable Models with OTP	19
Furnace Loading	39
Preventative Maintenance	40
General Cleaning Instructions	40
Troubleshooting	41
Maintenance and Servicing	44
To Replace a Heating Element	44
To Replace a Chromel/Alumel Thermocouple	45
To Replace Door Switches (Micro-Switch)	46
To Realign Door Switches (Micro-Switch)	47
To Replace the Controller	48
Replacement Parts.....	49
Single Setpoint Models	49
Single Setpoint Models with OTP	49
8 Segment Programmable Models with OTP	50
4 x 16 Segment Programmable Models with OTP	50
Wiring Diagrams.....	51
Ordering Procedures	59
One Year Limited Warranty	60

Safety Information

Alert Signals



Warning

Warnings alert you to a possibility of personal injury.



Caution

Cautions alert you to a possibility of damage to the equipment.



Note

Notes alert you to pertinent facts and conditions.



Hot Surface

Hot surfaces alert you to the possibility of personal injury if you come in contact with a surface during use or for a period of time after use.

Your Barnstead Thermolyne Type 47900 or 48000 Furnace has been designed with function, reliability and safety in mind. It is your responsibility to install it in conformance with local electrical codes. For safe operation, please pay attention to the alert signals throughout the manual.

This manual contains important operating and safety information. You must carefully read and understand the contents of this manual prior to the use of this furnace.

Warnings

To avoid electrical shock, this furnace must:

1. Use a properly grounded electrical outlet of correct voltage and current handling capacity.
2. Be disconnected from the power supply prior to maintenance and servicing.
3. Have the door switch operating properly.

To avoid personal injury:

1. Do not use in the presence of flammable or combustible materials; fire or explosion may result. This device contains components which may ignite such material.
2. Caution: Hot Surface - Avoid Contact. To avoid burns, do not touch the exterior or interior surfaces of this furnace during use or for a period of time after use.
3. Always wear safety glasses or a safety shield and high temperature gloves when loading or unloading the furnace. Long sleeved, fire retardant clothing and a fire retardant apron is also recommended.
4. Refer servicing to qualified personnel.



Warning

Refer Servicing to qualified personnel.

Warning

This warning is presented for compliance with California Proposition 65 and other regulatory agencies and only applies to the insulation in this product. This product contains refractory ceramic, refractory ceramic fiber or fiberglass insulation, which can produce respirable dust or fibers during disassembly. Dust or fibers can cause irritation and can aggravate pre-existing respiratory diseases. Refractory ceramic and refractory ceramic fibers (after reaching 1000°C) contain crystalline silica, which can cause lung damage (silicosis). The International Agency for Research on Cancer (IARC) has classified refractory ceramic fiber and fiberglass as possibly carcinogenic (Group 2B), and crystalline silica as carcinogenic to humans (Group 1).

The insulating materials can be located in the door, the hearth collar, in the chamber of the product or under the hot plate top. Tests performed by the manufacturer indicate that there is no risk of exposure to dust or respirable fibers resulting from operation of this product under normal conditions. However, there may be a risk of exposure to respirable dust or fibers when repairing or maintaining the insulating materials, or when otherwise disturbing them in a manner which causes release of dust or fibers. By using proper handling procedures and protective equipment you can work safely with these insulating materials and minimize any exposure. Refer to the appropriate Material Safety Data Sheets (MSDS) for information regarding proper handling and recommended protective equipment. For additional MSDS copies, or additional information concerning the handling of refractory ceramic products, please contact the Customer Service Department at Barnstead International at 1-800-553-0039.

Introduction



Caution

Do not exceed operating temperatures shown in “General Specifications.” Exceeding these limits will result in severely reduced element life.

Intended Use

The Type F47900 and F48000 furnaces are general purpose laboratory and heat treating furnaces. For optimum element life, Barnstead International recommends observing these temperature ranges: from 100°C (212°F) to 1093°C (2000°F) continuous use or from 1093°C (2000°F) to 1200C (2192°F) for intermittent use. Continuous use is operating the furnace for more than 3 hours and intermittent use is operating the furnace for less than 3 hours.

All furnaces consist of: 1) a vented heating chamber; 2) a temperature controller; and 3) a door safety switch for operator safety.

General Usage

Do not use this product for anything other than its intended usage.

Principles of Operation

The furnace chamber is heated by open coil electric resistance elements and is insulated with ceramic fiber insulation. The controller is located under the furnace chamber and is well insulated from the heat generated in the furnace chamber. A door safety switch removes power to the heating elements whenever the furnace door is opened. The temperature is controlled by one of three types of controllers.

General Specifications

Type F47900 Models

Dimensions in Inches (cm):

Chamber: 5 (12.7) W x 4 (10.2) H x 6 (15.2) D
Overall: 11.25 (28.6) W x 18 (45.7) H x 15.5 (39.4) D

Weight: 37 lb. (16.8 kg)

Electrical Ratings:

Volts:	220-240	100	120
Amps:	4.2	7.5	8.3
Watts:	1000	750	1000
Frequency:	50/60	50/60	50/60
Phase:	1	1	1

Temperature:

Operating Range: 2000°F (1093°C) continuous
2192°F (1200°C) intermittent

Type F48000 Models

Dimensions in Inches (cm):

Chamber: 7 (17.8) W x 5 (12.7) H x 10 (25.4) D
Overall: 13.25 (33.7) W x 19 (48.3) H x 19.5 (49.5) D

Weight: 56 lb. (25.4 kg) (all models except -33)
58 lb. (26.3 kg) (-33 models only)

Electrical Ratings:

Volts:	220-240	120	208	100	220-240*
Amps:	7.5	14.5	15	14.5	6.5*
Watts:	1800	1500	1560	1450	1560*
Frequency:	50/60	50/60	50/60	50/60	50/60*
Phase:	1	1	1	1	1*

* -33 models only

Temperature:

Operating Range: 2000°F (1093°C) continuous
2192°F (1200°C) intermittent

Environmental Conditions

Operating: 17°C to 27°C; 20% to 80% relative humidity, non-condensing. Installation Category II (overvoltage) in accordance with IEC 664. Pollution degree 2 in accordance with IEC 664.

Altitude Limit: 2,000 meters.

Storage: -25°C to 65°C; 20% to 80% relative humidity

Declaration of Conformity

Barnstead International hereby declares under its sole responsibility that this product conforms with the technical requirements of the following standards (220-240 Volt Models Only):

EMC:	EN 50081-1	Generic Emissions Standard
	EN 50082-2	Generic Immunity Standard
Safety:	EN 61010-1	Safety Requirements for Electrical Equipment for Measurement, Control and Laboratory Use; Part I: General Requirements
	EN 61010-2-010	Part II: Particular Requirements for Laboratory Equipment for the Heating of Materials

per the provisions of the Low Voltage Directive 73/23/EEC, as amended by 93/68/EEC.

The authorized representative located within the European Community is:

Electrothermal Engineering Ltd.
419 Sutton Road
Southend On Sea
Essex SS2 5PH
United Kingdom

Copies of the Declaration of Conformity are available upon request.

Unpacking

1. Visually check for any physical damage to the shipping container.
2. Inspect the equipment surfaces that are adjacent to any damaged area.
3. Open the furnace door and remove the packing material from inside the furnace chamber.
4. Vacuum the chamber prior to use to remove the insulation dust due to shipment. (The Type 48000 furnace is supplied with one ceramic shelf.)
5. Retain the original packaging material if reshipment is foreseen or required.

Installation



Caution

Be sure ambient temperature does not exceed 40°C (104°F). The recommended ambient temperature is 17°C - 27°C. Ambients above this level may result in damage to the controller.



Caution

Allow at least six inches of space between the furnace and any combustible surface. This permits the heat from the furnace case to escape so as not to create a possible fire hazard.



Warning

To avoid electrical shock, this furnace must always use a properly grounded outlet of correct voltage and current handling capacity.

Site Selection

Install furnace on a sturdy surface and allow adequate space for ventilation.

Electrical Connections

The electrical ratings are located on the specification plate on the back of the furnace. Consult Barnstead International if your electrical service is different than those listed on the specification plate. Be sure the front power switch is in the OFF position before connecting the furnace to your electrical supply.

Operation, All Models



Warning

To avoid personal injury do not use in the presence of flammable or combustible chemicals; fire or explosion may result. This device contains components which may ignite such materials.



Hot Surface

Caution: Avoid Contact. To avoid burns, this furnace must not be touched on the exterior or interior surfaces during use or for a period of time after use.



Warning

Always wear safety glasses or a safety shield and high temperature gloves when loading or unloading the furnace. Long sleeved, fire retardant clothing and a fire retardant apron is also recommended.



Warning

To avoid electrical shock, the door safety switch must be operating properly.

Power Switch

Both the ON/OFF power switch and the digital display will illuminate when power is switched ON. The furnace will begin to heat to its controller's current setpoint. (See the instructions for your type of controller for information on checking and setting the setpoint.)


Cycle Light

The amber cycle light will illuminate whenever the power is being applied to the heating elements. The cycle light will turn on and off as the furnace reaches the setpoint.

Door Safety Switch

The door safety switch removes power from the heating elements when the door is opened. Open and close the door a few times; note that the amber CYCLE light will switch off when the door is opened. If this condition is not true, consult the Troubleshooting section before proceeding. This check must be done when the furnace is heating and the cycle light is illuminated.

Single Setpoint Models & Single Setpoint Models w/OTP

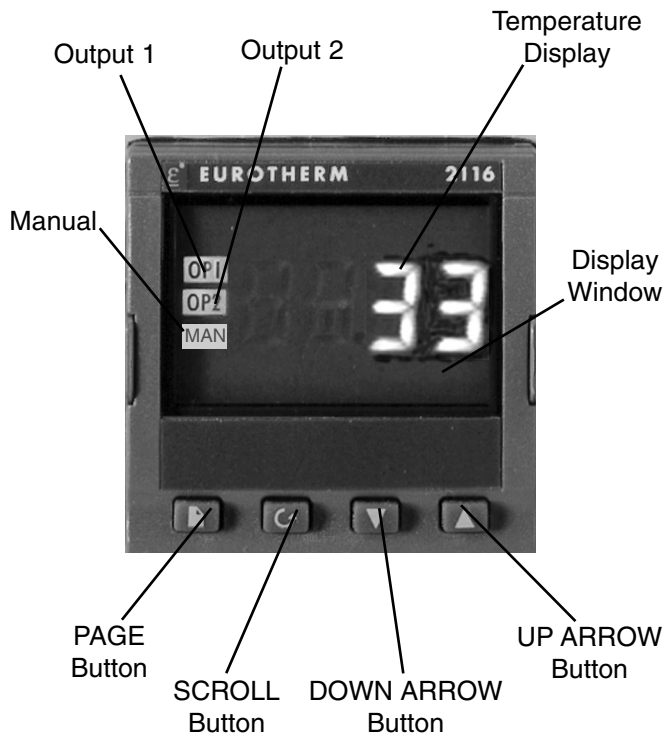

Single Setpoint Models



Note

If at any time you want to return to the HOME DISPLAY, simultaneously press the PAGE and SCROLL buttons.

The **single setpoint model** furnace controller is a single setpoint controller which provides a single digital display to indicate the current chamber temperature or setpoint temperature. This temperature controller features sensor break protection and self-tuning capability.

The **single setpoint model w/ OTP** furnace controller is a single setpoint controller which provides a single digital display to indicate the current chamber temperature or setpoint temperature. This temperature controller features sensor break protection, self-tuning capability and over temperature protection (OTP) with an additional OTP relay device.

Basic Operation

When the controller is turned ON it will perform a short self-test and then display the measured value (process value) in the HOME DISPLAY.

Buttons and Indicators

OP1 (Output 1): Illuminates when the logic output is ON.

OP2 (Output 2): Illuminates when the relay output is ON (will go out during an alarm situation).

PAGE button: Allows you to select a new list of parameters.

SCROLL button: Allows you to select a parameter within a list of parameters.

DOWN button: Allows you to decrease a value.

UP button: Allows you to increase a value.

To View or Change the Setpoint

To view the setpoint, press and release the UP or DOWN buttons. If you want to change the setpoint, continue pressing until the desired setpoint value is displayed and then release the button. A few seconds after the button is released, the controller will accept the new value and revert to the HOME DISPLAY.

To View the Display Units

From the HOME DISPLAY press the SCROLL button. The display will show the temperature units in °C/F/K and then return to the HOME DISPLAY. (Call Customer Service if you require a different temperature unit.)

To View the % Output Power

From the HOME DISPLAY press the SCROLL button twice. Press and release the UP or DOWN button to view the % output power. This value is a read-only value and cannot be changed.

Controller Parameters

Home display

°C: Temperature units in Celsius. Temperature units can not be changed without entering the configuration. Contact Customer Service if a different temperature unit is required.

OP: % output power demand.

IdHi: Deviation high alarm.

AI List

IdHi: Deviation high alarm.

Atun List

tunE: One-shot autotune enable.

Pid List

Pb: Proportional band (in display units).

ti: Integral time in seconds.

td: Derivative time in seconds.

ACCS List Code: Access code (Code needed to enter or change the other configuration parameters which are not normally accessible.) Not accessible.

Alarms

The controller will flash an alarm message in the home display if an alarm condition is detected.

2FSH: Measured value full scale high alarm.

IdHi: Measured value deviation high alarm.

S.br: Sensor break: check that sensor is connected correctly.

L.br: Loop break: check that the heating circuits are working properly.



Note

The following alarm messages are factory default settings and may vary if you have changed the configuration of your controller:

IDHi: = 50°C

2FSH: = 1225°C

Ld.F: Heater Circuit fault: indication of either an open or short solid state relay, a blown fuse, missing supply or open circuit heater.

Sensor Break Protection

This controller provides sensor break protection in the event the thermocouple opens. If an open thermocouple condition occurs, the digital display will blink “S.br” and the power to the heating element will be shut OFF (Cycle light will extinguish).

Over-Temperature Protection (OTP)

The OTP will be in effect during any alarm condition when the temperature of the furnace has deviated beyond the limit. The “Deviation High” alarm is the only alarm value which can be changed. To change it, press the SCROLL button until “ldHi” appears on the display. Press the UP or DOWN button to select the OTP value you desire. We recommend a value of 20° above your working temperature to provide protection for your workload.

In addition to over-temperature protection, units containing a single setpoint controller w/OTP feature a mechanical OTP relay device which disconnects power from the elements in an alarm condition (only in furnaces with OTP relay). See models listed on front page.

Tuning

This controller incorporates a self-tuning feature which determines the optimum control parameters for the best temperature accuracy with your load and setpoint. Use this feature the first time you use your furnace and each time you change either your setpoint or the type of load you are heating.

Barnstead|Thermolyne recommends you use this feature to provide the best temperature accuracy the controller can attain. To use the tuning feature:

1. Adjust the setpoint to your desired value.
2. Press the PAGE button until display reads, "Atun."
3. Press the SCROLL button. Display will read, "tunE."
4. Press the UP or DOWN button to select, "on."
5. Simultaneously press the PAGE and SCROLL buttons to return to the HOME DISPLAY. The display will alternately flash between "tunE" and the HOME DISPLAY while tuning is in progress.
6. The controller will then turn the heating on and off to induce an oscillation. When the measured value reaches the required setpoint the first cycle will end.
7. Tuning will be complete after two oscillation cycles and then the tuner will turn itself off.
8. Normal control function will resume after the controller calculates tuning parameters.



Note

Furnace must be at ambient temperature before starting a tune.



Note


Tune has completed when "tunE" stops flashing on display.

Single Ramp & Dwell




Note


These instructions are used with the Single Setpoint models with OTP only (See models listed on front page).

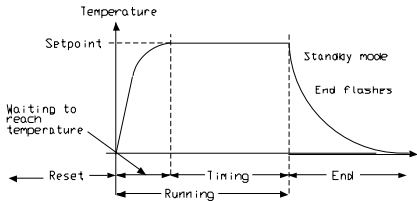


Mode 1 (Opt. 1)

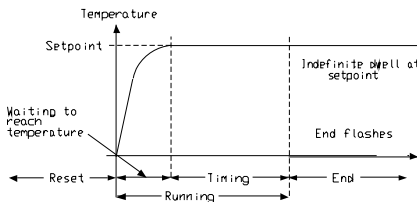


Mode 2 (Opt. 2)

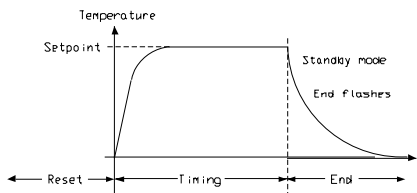

Mode 3 (Opt. 3)

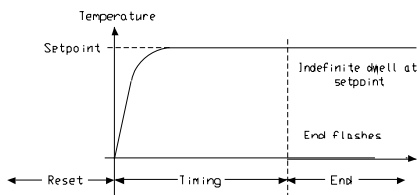

Mode 4 (Opt. 4)

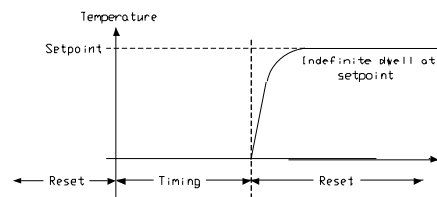

Mode 5 (Opt. 5)

Functions

This type of controller has single ramp and dwell programming capabilities. The Ramp and Dwell can be configured to five different modes.

1. Mode 1 (Opt. 1) is a Ramp (if needed) to the Setpoint temperature, a Dwell, and then a cool down.
2. Mode 2 (Opt. 2) is the same as mode 1, except the controller continues to heat at the Setpoint after the Dwell has completed. (This mode does not cool down.)
3. Mode 3 (Opt. 3) is the same as mode 1, except the Dwell time includes the Ramp (if needed).
4. Mode 4 (Opt. 4) is the same as mode 2, except the Dwell time includes the Ramp (if needed).
5. Mode 5 (Opt. 5) is a Dwell (delay time) before the controller Ramps (if needed) to the Setpoint temperature.

Setting Variables

- The Manual or Automatic modes can be set by changing "m-A" variable to "mAn" or "Auto." (The Manual mode will keep the controller from heating without setting the Setpoint temperature below the Actual temperature. The Automatic mode will allow the controller to heat to the Setpoint temperature. (The controller should be left in the Automatic mode except when programming.)
- A program mode can be set by changing the "tm.OP" variable to "Opt. 1, Opt. 2, Opt. 3, Opt. 4, or Opt. 5.

- A Ramp rate may be set by changing the “SPrr” variable to a value. The Ramp rate units are in degrees per minute.
- The Dwell time can be set by changing the “dwEll” variable to the desired value. Dwell time units are in minutes.
- The program Status can be set by changing the “StAt” variable to “run” or “oFF.” This variable will start or stop the program.



Note

The program must be stopped and the controller must be displaying the actual temperature before beginning the Setup.

Program Setup

1. Press the SCROLL button until “m-A” is displayed, then set to “mAn” with the UP or DOWN buttons.
2. Press the PAGE button once, set the desired Setpoint temperature with the UP or DOWN buttons.
3. Press the PAGE button until the “SP” is displayed.
4. Press the SCROLL button once, “SPrr” (Ramp Rate) will be displayed, set the desired Ramp rate with the UP or DOWN buttons, if the ramp to setpoint feature is needed. If the Ramp rate is not needed, then set to “OFF” with the UP or DOWN buttons.
5. Press the SCROLL button once, “tm.OP” (Ramp & Dwell mode) will be displayed, select the desired mode with the UP or DOWN buttons. (Opt. 1, Opt. 2, Opt. 3, Opt. 4, Opt. 5)
6. Press the SCROLL button once, “dwEll” will be displayed, set the desired Dwell time with the UP or DOWN buttons. (Dwell in minutes.)
7. Press the PAGE button until the Actual temperature is displayed.

Running the Program

1. Press the SCROLL button until “StAt” is displayed, set to “run” with the UP or DOWN buttons.
2. Press the PAGE button to display Actual temperature.

Stopping the Program

Press the SCROLL button until “StAt” is displayed, set to “oFF” with the UP or DOWN buttons.

Clearing the Flashing End

Press the PAGE and SCROLL buttons at the same time.

Switching from Manual Mode to Auto Mode

Press the SCROLL button until “m-A” is displayed. Press the UP or DOWN buttons to set to “Auto.” Press PAGE button to display Actual temperature.

Verifying a Running Program

Press the SCROLL button until “StAt” is displayed. The display will show “run” if the program is running, or “oFF” if it is not running. Press the PAGE button to display Actual temperature.

8 Segment & 4x16 Segment Programmable Models w/OTP



Note

The controller will return to the HOME DISPLAY if left idle for more than a few seconds.




Note

Once the desired parameter has been selected, depressing either the UP or DOWN button will change the parameter value. In all cases, the value shown on the display is the current working value of that parameter.

The **8 segment programmable** controller consists of a microprocessor based three-mode PID (Proportional, Integral, Derivative), programmable temperature controller with over-temperature protection and appropriate output switching devices to control the furnace. The digital readout continuously displays chamber (upper display) and setpoint (lower display) temperatures unless the SCROLL or PAGE button is depressed. The programmable controller can be used as a single setpoint controller or as a programmable controller. The 8 segment digital model enables eight segments of programming.

The **4x16 segment programmable** controller consists of a microprocessor based three-mode PID (Proportional, Integral, Derivative), programmable temperature controller with over-temperature protection and appropriate output switching devices to control the furnace. The digital readout continuously displays chamber (upper display) and setpoint (lower display) temperatures unless the SCROLL or PAGE button is depressed. The programmable controller can be used as a single setpoint controller or as a programmable controller. The 4 program controller has four 16 segment programs.

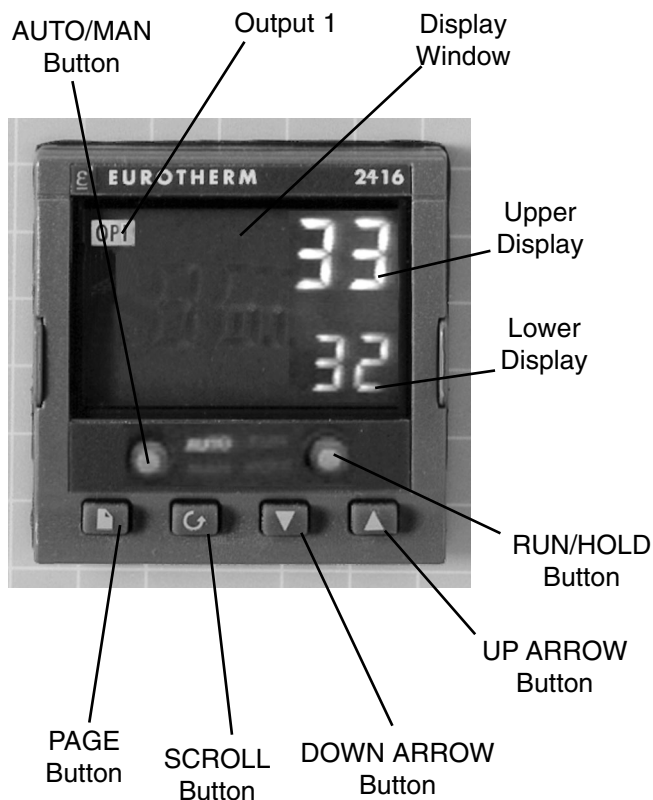

Basic Operation

When the controller is turned ON, it will perform a short self-test and then change to the HOME DISPLAY. The HOME DISPLAY shows the measured temperature (process value) in the upper display and the desired value (setpoint) in the lower display.

To Change the Setpoint

If you want to change the setpoint, press the UP or DOWN button until the desired setpoint value is displayed in the lower display and then release the button.

To View Display Units

From the HOME DISPLAY press the SCROLL button. The display will briefly show the temperature units in °C/F/K and then return to the HOME DISPLAY. (If you require a different temperature unit call Barnstead|Thermolyne Customer Service.)

To View the % Output Power

From the HOME DISPLAY press the SCROLL button twice. This value is a read-only value and cannot be changed.

Buttons and Indicators

OP1 (Output 1): illuminates when the heating output of the temperature controller is on.

AUTO/MAN: (Auto/Manual Mode): when the controller is in the automatic mode the output automatically adjusts to keep the temperature or process value at the setpoint. The “AUTO” light will illuminate. The manual mode has been disabled through factory configuration. Call Customer Service for further information.

RUN/HOLD (Run/Hold button):

- Starts a program when pressed once—RUN light illuminates.

- Holds a program when pressed again—HOLD light illuminates.
- Cancels hold and continues running when pressed again—HOLD light is off and RUN light illuminates.
- Exits a program when the button is held down for two seconds—RUN and HOLD lights are off.
- At the end of a program the RUN light will flash.
- During holdback the HOLD light will flash.

PAGE button: allows you to choose a parameter from a list of parameters.

SCROLL button: allows you to choose a parameter within a list of parameters.

UP button: allows you to increase the value in the lower display.

DOWN button: allows you to decrease the value in the lower display.

Controller Parameters

Home Display

°C: measured temperature in Celsius.

Temperature units can not be changed without entering the configuration. Contact Customer Service if a different temperature unit is required.

OP: % output power demand; displayed in lower display (cannot be changed).

C.id: Controller identification number.

PrG: Program number (displayed when a program is running; 4x16 programmable models only.)

IdHi: Deviation High Alarm

tunE: One-shot autotune enable.

run LiSt (Program Run List)

PrG: Currently running program (only used on 4x16 programmable models)

StAt: Displays the program status [OFF, run (running active program), hoLd (program on hold), HbAc (waiting for process to catch up), End (program completed)] in the lower display. The controller will default to “OFF.”

FASt: Fast run through program (no/YES). The controller will default to “no.”

SEG.d: Flash active segment type in the lower display of the home display (no/YES). The controller will default to “no.”

ProG LiSt (Program Edit List)

PrG.n: Press the UP or DOWN ARROW to select the program number (program number will be displayed in lower display on 4x16 programmable models only.)

Hb: Press the UP or DOWN ARROW to select the holdback type [OFF (disables holdback), Lo (deviation low holdback), Hi (deviation high holdback) or bAnd (deviation band holdback)] for the entire program. The controller will default to “OFF.”

Hb.U: Press the UP or DOWN ARROW to select the holdback value (in display units).

rmP.U: Press the UP or DOWN ARROW to toggle between ramp units (SEc, min or Hour). Controller will default to “SEc.”

dwL.U: Press the UP or DOWN ARROW to toggle between dwell units (SEc, min or Hour). Controller will default to “SEc.”

Cyc.n: Press the UP or DOWN ARROW to set the number of program cycles (1 to 999 or cont). The controller will default to “cont.”

SEG.n: Press the UP or DOWN ARROW to select the segment number (1-8 in 8 segment models, 1-16 in 4x16 models).

tYPE: Press the UP or DOWN ARROW to select the segment type [End (end of program), rmP.r = ramp rate (ramp to a specified setpoint at a set rate), rmp.t = ramp time (ramp to a specified temperature in a set time), dwELL (to maintain a constant temperature for a set time), StEP (climb instantaneously from current to specified temperature), cALL (to call a program as a subroutine, available only on 4x16 programmable models)]. The controller will default to “End.” Other parameters used with tYPE include; tGt target setpoint), Rate (rate of temperature increase) and dur (time to target setpoint or time to dwell).

End.t: End segment type: dwELL (dwell continuous), rSEt (reset) and S OP (End Segment Output power level).

AL LiSt (Alarm List)

ldHi: Deviation High Alarm.

Atun LiSt: (Autotune List)

tunE: One-shot autotune enable.

drA: Adaptive tune enable.

drA.t: Adaptive tune trigger level in display units. Range = 1 9999.

Pid LiSt

G.SP (Gain Setpoint): Is the temperature at which the controller switches from the (SEt1) PID values to the (SEt 2) PID values.

Pb: Proportional band in display units. (SEt 1)

ti: Integral time in seconds. (SEt 1)

td: Derivative time in seconds. (SEt 1)

Pb2: Proportional band. (SEt 2)

ti2: Integral time in seconds. (SEt 2)

td2: Derivative time in seconds. (SEt 2)

ACCS LiSt (Access List)

Access Code (Code needed to enter or change the other configuration parameters which are not normally accessible.) Not accessible.



Note

The following alarm messages are factory default settings and may vary if you have changed the configuration of your controller:

IDHi: = 50°C

2FSH: = 1225°C

Alarms

The controller will flash an alarm message in the home display if an alarm condition is detected.

IdHi: PV deviation high alarm.

2FSH: PV full scale high alarm.

LCr: load current low alarm.

HCr: load current high alarm.

S.br: Sensor break: check that sensor is connected correctly.

L.br: Loop Break: Check that the heating circuits are working properly.

Ld.F: Heater Circuit Fault: indication of either an open or short solid state relay, a blown fuse, missing supply or open circuit heater.

SSr.F: Solid state relay failure indications in a solid state relay: indicates either an open or short circuit in the SSR.

Htr.F: Heater failure: Indication that there is a fault in the heating circuit: indicates either a blown fuse, missing supply or open circuit heater.

Sensor Break Protection

This controller provides sensor break protection in the event the thermocouple opens. If an open thermocouple condition occurs, the digital display will Blink "S.br" and the power to the heating element will be shut OFF (Cycle light will extinguish).

Over-Temperature Protection (OTP)

The OTP will be in effect during any alarm condition when the temperature of the furnace has deviated beyond the limit. The "Deviation

High” alarm is the only alarm value which can be changed. To change it, press the SCROLL button until “idHi” appears on the display. Press the UP or DOWN button to select the OTP value you desire. We recommend a value of 20° above your working temperature to provide protection for your workload.

To Operate the Controller as a Single Setpoint Controller

1. Switch the circuit breaker to the “ON” position. The setpoint temperature presently set in the controller will appear in the lower display. (The upper display indicates the actual chamber temperature.)
2. To change the setpoint, press the UP or DOWN button until the desired setpoint value is displayed; then release the button.
3. The furnace will begin to heat if the new setpoint temperature is higher than the present chamber temperature.

Programming the Controller

The controller is capable of varying temperature or process value with time through programming. A program is stored as a series of segments and can be run once, repeated a set number of times or run continuously. To create a customized program using the controller parameters listed under “Controller

Parameters” at the beginning of this section, follow the procedures outlined in the preceding sections of this manual.

Creating a New Program or Editing an Existing Program (4x16 Segment Programmable Models Only)

The same steps are used when creating a new program and editing an existing program with the exception being that a new program starts with all its segments set to End in the tYPE parameter. Temporary changes can be made to these parameters when the program is in the hold state but permanent changes must be made in the reset state. Follow the steps below to create or edit a program.

1. Press the PAGE button until you reach the program list (ProG LiSt).
2. Press the SCROLL button until display reads, “PrG.n.”
3. Press the UP or DOWN button to select a number for a new program or to edit an existing program.

Hb: Holdback

Holdback consists of a value and a type. If the measured value lags behind the setpoint by an undesirable amount during a ramp or dwell, the holdback feature can be used to freeze the program at its current state (the HOLD light will flash). The program will resume when the error comes within the holdback value.

OFF: holdback is disabled.

Lo (Deviation Low Holdback): holds the program back when process variable deviates below the setpoint by more than the holdback value.

Hi (Deviation High Holdback): holds the program back when process variable deviates above the setpoint by more than the holdback value.

bAnd (Deviation Band Holdback): combines the features of the high and low deviation holdback in that it holds the program back when the process variable deviates above or below the setpoint by more than the holdback value.



Note

The value set in this parameter is always for the entire program.

To set the holdback type:

1. Press the PAGE button until you reach the program list (ProG LiSt).
2. Press the SCROLL button until display reads, "Hb."
3. Press the UP or DOWN button to toggle between "bAnd, Hi, Lo and OFF."

Hb U: Holdback Value

To set the holdback value:

1. Press the PAGE button until you reach the program list (ProG LiSt).
2. Press the SCROLL button until display reads, "Hb.U."
3. Press the UP or DOWN button to enter a holdback value.

rmP.U: Setting Ramp Units

Ramp units are time units which are used in

“rmP.r” segments (ramp to a setpoint at degrees per second, minute or hour) and “rmP.t” segments (ramp to setpoint in a specific amount of time). See “Setting the Segment Type” for an explanation on how to set a ramp segment.

1. Press the PAGE button until you reach the program list (ProG LiSt).
2. Press the SCROLL button until display reads, “rmP.U.”
3. Press the UP or DOWN button to toggle between seconds, minutes and hours.

dwL.U: Setting Dwell Units

Dwell units are time units which are used in “dwELL” segments (amount of time to remain at a specific temperature). See “Setting the Segment Type” for an explanation on how to set a dwell segment.

1. Press the PAGE button until you reach the program list (ProG LiSt).
2. Press the SCROLL button until display reads, “dwL.U.”
3. Press the UP or DOWN button to toggle between seconds, minutes and hours.

CYC.n: Setting the Number of Cycles

Set the number of times a group of segments or programs are to be repeated by following the steps listed below.

1. Press the PAGE button until you reach the program list (ProG LiSt).

2. Press the SCROLL button until display reads, "CYC.n."
3. Press the UP or DOWN button to select the number of cycles you want to run or, press the DOWN button to select "cont." so the program will run continuously.



Note

The program ramp rate is designed to reduce the heatup rate or cooling rate that the furnace normally exhibits. When not using this feature, the furnace will operate at its maximum heating and cooling capability.



Note

When the program ramp has ended or has been reset, the furnace will continue to maintain setpoint temperature. It will not cool to ambient temperature unless the setpoint is set to ambient temperature by the program or by the operator.

Setting the Segment Type

There are five segment types. Proceed with the following steps according to the type of segment you have selected.

rmP.r (Ramp)

To ramp linearly at a set rate to a specified temperature:

1. Press the PAGE button until you reach the program list (ProG LiSt).
2. Press the SCROLL button until display reads, "tYPE."
3. Press the UP or DOWN button until display reads, "rmP.r."

Steps 4 and 5 are used in the 4 program model only. If you are using an 8 segment program, skip to step 6.

4. Press the SCROLL button until display reads "Hb."
5. Press the UP or DOWN button to toggle between "bAnd, Hi, Lo and OFF."
6. Press the SCROLL button until display reads, "tGt."
7. Press the UP or DOWN button to set a target setpoint.
8. Press the SCROLL button until display

reads, "rAtE."

9. Press the UP or DOWN button to select a value in ramp units (seconds, minutes or hours; set in the "rmP.U" parameter).

rmP.t

To ramp to a specified temperature at a set time:

1. Press the PAGE button until you reach the program list (ProG LiSt).
2. Press the SCROLL button until display reads, "tYPE."
3. Press the UP or DOWN button until display reads, "rmP.t."
4. Press the SCROLL button until display reads, "tGt."
5. Press the UP or DOWN button to set a target setpoint.
6. Press the SCROLL button until display reads, "dur."
7. Press the UP or DOWN button to select a time in ramp units (seconds, minutes or hours; set in the "rmP.U" parameter).

dwEII

To maintain a constant temperature for a specified time:

1. Press the PAGE button until you reach the program list (ProG LiSt).
2. Press the SCROLL button until display reads, "tYPE."
3. Press the UP or DOWN button until display reads, "dwEII."

4. Press the SCROLL button until display reads, “dur.”
5. Press the UP or DOWN button to select a time in dwell units (seconds, minutes or hours; set in the “dwL.U” parameter).

StEP

To climb instantaneously from the current temperature to a specified temperature.

1. Press the PAGE button until you reach the program list (ProG LiSt).
2. Press the SCROLL button until display reads, tYPE.”
3. Press the UP or DOWN button until the display reads, “StEP.”
4. Press the SCROLL button until display reads, “tGt.”
5. Press the UP or DOWN button to set a target setpoint.

cALL (Running Multiple Programs; 4x16 Segment Programmable Models Only)

To call a program as a subroutine:

If you want to run multiple programs, you can program the controller to “call” or link one program to another. This makes it possible to run one program at any time during another program and also return to the original program if desired.

1. Press the PAGE button until you reach the program list (ProG LiSt).
2. Press the SCROLL button until display reads, “tYPE.”

3. Press the UP or DOWN button until display reads, "cALL."
4. Press the SCROLL button until display reads, "PrG.n."
5. Press the UP or DOWN button to select a program number to be linked.
6. Press the SCROLL button until display reads, "CYC.n."
7. Press the UP or DOWN button to select the number of cycles the linked program is to be run.

End

To end or repeat a program:

1. Press the PAGE button until you reach the program list (ProG LiSt).
2. Press the SCROLL button until display reads, "tYPE."
3. Press the UP or DOWN button until display reads, "End."
4. Press the SCROLL button until display reads, "End.t."
5. Press the UP or DOWN button to toggle between "dwell" (an indefinite dwell), "S OP" (End Segment Output Power) and "rSET" (reset).

Setting the Target Setpoint (4x16

Segment Programmable Models Only)

1. Press the PAGE button until you reach the program list (ProG LiSt).

2. Press the SCROLL button until display reads, "tGt."
3. Press the UP or DOWN button to set the target setpoint temperature.

Running a Program (8 Segment Programmable Models)

To run a program, press the RUN/HOLD button. (The RUN light will illuminate.)

Running a Program (4x16 Segment Programmable Models)

To run a program, press the RUN/HOLD button. (The RUN light will illuminate) or:

1. Press the PAGE button until you reach the run list (run LiSt).
2. Press the SCROLL button until display reads, "PrG."
3. Press the UP or DOWN button to select the program number you want to run.
4. Press the RUN/HOLD button once to start the program. (The RUN light will illuminate.)



Note

Display will flash “tu.ER” if an error occurs during tuning. To clear the error and restart tuning, simultaneously press the PAGE and SCROLL buttons and follow the steps outlined in “Autotuning.”



Note

To stop the tuning function, simultaneously press the PAGE and SCROLL buttons.

Holding a Program

To put a running program on hold, press the RUN/HOLD button. (The HOLD light will illuminate.)

Cancelling a Program

To cancel a program, hold the RUN/HOLD button down until the RUN and HOLD lights go off.

Tuning your Furnace

The purpose of tuning your furnace is to match the characteristics of your controller to the characteristics of the process being controlled. Good control is evidenced by: stable, straight-line control of the setpoint temperature with no fluctuations; No overshoot or undershoot of the setpoint temperature; rapid restoration of the setpoint temperature when external disturbances cause deviations from the setpoint.

This controller has automatic tuning features which install optimum tuning parameters to give the best temperature accuracy. No manual loading of tuning parameters is needed. We recommend that you tune the furnace to your specific application to obtain the best results. To provide the best temperature accuracy possible, use these features when you install your furnace and whenever you change your application or procedure.

Tuning Error

The display will flash “tu.ER” if an error occurs during tuning. To clear the error and restart tuning, simultaneously press the PAGE and SCROLL buttons and follow the steps outlined in “Autotuning.”

Gain Scheduling

G.SP: Gain Scheduling

Gain scheduling is the automatic transfer of control between two sets of PID values. The 2416 controller does this at a presettable process value. Gain scheduling is used for difficult control processes which show large changes in their response time or sensitivity at high or low temperatures, or when heating or cooling.

The G.SP gain schedule setpoint is factory set at 700° C. The G.SP must be adjusted to 200°C from the desired setpoint temperature when tuning.

Setting the Transfer Point

If gain scheduling has been enabled, “G.SP will appear at the top of the PID list. This sets the value at which the transfer will occur. When the process value is below this level, PID1 will be active and when it is above, Pid2 will be active. Set a value between the control regions that show the greatest change to achieve the best point of transfer.

Tuning

The two sets of PID values can be manually set or automatically tuned. To tune automatically you must tune above and below the transfer point G.SP. If the process value is below the transfer point G.SP, the calculated values will automatically be inserted into the (SEt 1) set and if the process value is above G.SP, the calculated values will automatically be inserted into the (SEt 2).

Autotuning

The Autotune feature automatically sets up the PID values in the control parameters to suit new process conditions.

To tune your furnace using autotuning:

1. Load your furnace with a load similar to your normal load and close the door.
2. Set the setpoint temperature.
3. Press the PAGE button until the display reads, "Atun LiSt."
4. Press the SCROLL button until "tunE OFF" is displayed.
5. Press the UP or DOWN button to select "on."
6. Simultaneously press the PAGE and SCROLL buttons to return to the HOME DISPLAY. The display will flash "tunE" while tuning is in progress.

Adaptive Tuning

Adaptive tuning continuously evaluates tuning parameters. Adaptive tuning automatically installs new values if better accuracy is possible. Adaptive tuning should be used when the characteristics of a process change due to load or setpoint changes or, in a process that can not handle the oscillation caused by a one-shot tune.

To tune your furnace using adaptive tuning:

1. Load your furnace with a load characteristic of those you intend to heat in it.
2. Press the PAGE button until display

reads, "Atun LiSt."

3. Press the SCROLL button until "drA OFF" is displayed.
4. Press the UP or DOWN button to select "on."
5. Press the SCROLL button until "drA.t" is displayed.
6. Press the UP or DOWN button until the desired trigger value is achieved.


Furnace Loading



Caution

Do not overload your furnace chamber. If the load is to be heated uniformly, it should not occupy more than two-thirds of the furnace chamber. Maintain at least a 3/4" gap between the load and elements. Failure to observe this caution could result in damage to the furnace components.

- For best results, use only the center two-thirds of the furnace chamber.
- If you are heating a number of small parts, spread them throughout the center two-thirds of the furnace chamber.
- Keep objects away from the thermocouple.
- Use insulated tongs and mittens when loading and unloading the furnace.
- Always wear safety glasses.
- Never come into contact with the heating elements. Hitting the elements with tongs or laying the load against them will cause the elements to burn out prematurely.

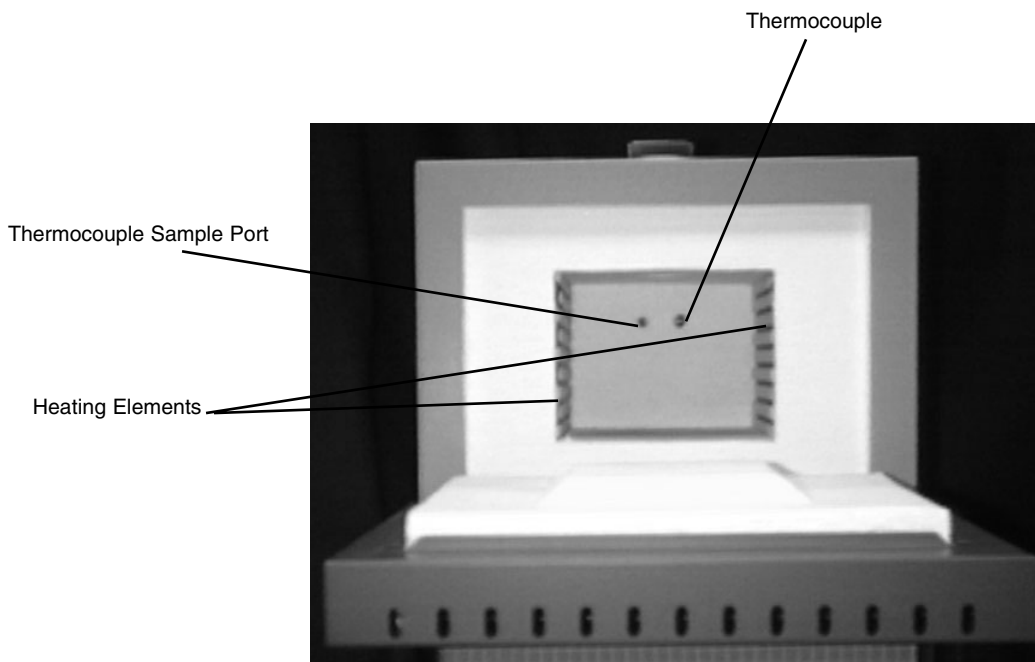

Preventive Maintenance

This unit is equipped with a venting system on the top of the furnace. This is for the removal of fumes from the chamber of the unit.

Contamination is a major cause of element failure, therefore, remove all fume forming material before heating. (e.g. clean cutting oil from tool steel).

Housekeeping is vital to your electric furnace – KEEP IT CLEAN. Run your furnace up to 871°C (1600°F) empty occasionally to burn off the contamination that may exist on the insulation and elements. Maintain 871°C (1600°F) for at least 4 hours to ensure complete ashing of foreign materials.

Element life is reduced somewhat by repeated heating and cooling. If the furnace is to be used again within a few hours, it is best to keep it at the operating temperature or at a reduced level such as 260°C (500°F). We highly recommend that you replace the thermocouple periodically (once every six months) to ensure temperature accuracy.

General Cleaning Instructions

Wipe exterior surfaces with a lightly dampened cloth containing a mild soap solution.

Troubleshooting

The Troubleshooting section is intended to aid in defining and correcting possible service problems. When using the chart, select the problem category that resembles the malfunction. Then proceed to the possible causes category and take necessary corrective action.

Problem	Possible Causes	Corrective Action
Cycle light does not illuminate.	The furnace is not connected to power supply.	Reconnect furnace to power supply.
	Incorrect power source.	Connect to correct power source.
	ON and OFF power switch defective.	Replace power switch.
	Defective cycle light.	Replace cycle light.
	Door switch malfunction.	Realign or replace furnace door safety switch.
Furnace does not heat.	No power.	Check power source and fuses or breakers.
	Defective electrical hookup.	Repair electrical hookup.
	Thermocouple has oxidized and opened the circuit.	Replace thermocouple.
	Controller malfunction.	Replace controller.
	Heating elements burned out.	Replace defective elements.
	Door switch malfunction.	Realign or replace door safety switch.
	Defective OTP relay.	Replace relay.
	Defective solid state relay.	Replace relay.

TROUBLESHOOTING

Door switch does not cut power to heating elements.	Door switch not functioning.	Realign or replace door safety switch.
Controller over-temp. does not cut power to furnace chamber.	Alarm output device malfunction.	Replace controller.
	OTP relay malfunction.	Replace relay.
	Element shorted to ground.	Replace faulty element.
Slow heatup.	Low line voltage.	Install line of sufficient size and voltage (isolate furnace from other electrical loads).
	Heavy load in chamber.	Lighten load in chamber to allow heat to circulate.
	Wrong heating element.	Install proper element.
	Heating element burned out.	Replace element.
Repeated element burnout.	Overheating furnace.	Keep furnace under maximum temperature. Closer supervision of control setting.
	Heating harmful materials.	Enclose material in container. Clean up spills in and on chamber. Ventilate chamber by leaving top vent slightly open when heating known harmful reagents.
	Contamination from previous burnout.	Replace insulation material.

Inaccurate temp. readout.	Oxidized or contaminated thermocouple.	Replace thermocouple.
	Poor thermocouple connection.	Tighten connections.
	Improper loading procedures.	Use proper loading procedures.
	Poor ventilation of control.	Clear area around furnace control.
	Thermocouple connections reversed.	Reconnect thermocouple correctly.

Maintenance and Servicing



Warning

To avoid electrical shock, this furnace must always be disconnected from the power supply prior to maintenance and service.

Perform only maintenance described in this manual. Contact an authorized dealer or our factory for parts and assistance.

Refer servicing to qualified personnel.



Note

The ceramic hearth collar may crack. This is a normal condition and will not affect the performance of the hearth collar.

To Replace a Heating Element

1. Disconnect the furnace from the power supply.
2. Remove the back terminal cover of the furnace. (Note placement and connection of wires.)
3. Loosen the nuts on the terminal points of the four heating element lead wires and remove the element wires from the terminals.
4. Loosen the thermocouple hold-down clip and carefully remove the thermocouple from the rear of the furnace chamber.
5. Remove both the back of the furnace and the blanket insulation.
6. Grasp the element lead wires and pull out both elements and the back chamber insulation.
7. Replace the defective element.
8. Reverse the disassembly procedure, making sure you thread all element lead wires through the insulating porcelain bushings on the back of the furnace and cut off any excess element lead wire after securing the leads to the terminal points.
9. Reconnect the furnace to the power supply.
10. Test the operation of the furnace.

To Replace a Chromel/Alumel Thermocouple (All Furnaces)

1. Disconnect the furnace from the power supply.
2. Remove both back covers. (Note placement and connection of wires.)
3. Remove the clip holding the thermocouple in place (1 screw), and remove the two screws on the thermocouple terminals.
4. Remove the thermocouple. (Note: first pull the thermocouple straight out of the hole in the chamber to avoid damage to the insulation.)
5. Guide the looped ends of the new thermocouple through the plastic bushings with the red (-) lead to the right as you face the back of the furnace.
6. Insert the thermocouple straight through the hole in the chamber.
7. Secure the thermocouple with clip and screw. Connect the looped ends of the thermocouple to the terminals with "+" to "+" (yellow) and "-" to "-" (red) wires. A polarity test of the thermocouple and lead wire is easily made with the use of a magnet. On a Chromel/Alumel thermocouple and lead wire, the non-magnetic wire is positive (+) and the magnetic wire is negative (-).

8. Replace both back covers.
9. Reconnect to the power supply.
10. Test the operation of the furnace.

To Replace Door Switches (Micro-Switch)

1. Disconnect the furnace from the power supply.
2. Remove the screws on the front dial and the screws and lock washers on the back cover.
3. Slide the control section forward. (Note: do not pull excessively on the internal wires.)
4. Disconnect the wires from the door switch. (Note the connection placement of the wires to the micro-switch.)
5. Remove the screws and nuts from the micro-switch.
6. Insert new micro-switches and secure with the screws and nuts removed in step 5.
7. Reconnect the wires to the new door switch.
8. To realign the door switches, see the following section, "To Realign Door Switches."
9. Slide the control section back and replace the screws and lock washers

described in step 2.

10. Reconnect to the power supply.
11. Test the operation of the door switches. (See next section, step 8.)

To Realign Door Switches (Micro-Switch):

1. Disconnect the furnace from the power supply.
2. Remove the lower rear cover.
3. With the door closed, loosen the screws on the micro-switch bracket and gently push the switch bracket forward until you hear a click.
4. Open and close the door; the switch should click when the door is opened approximately 3" and 1" to 2" before the door is closed. Slide the switches backward to increase the distance, forward to decrease the distance.
5. Tighten the two screws to secure the switches. Check the operation of the switch as described in step 4 after tightening the screws.
6. Replace the back cover.
7. Reconnect to power supply.
8. To test the operation of the door switch: move the power switch on, set the control to a setting high enough to keep the control from cycling, open

and close the door; the cycle light should turn OFF when the door is opened approximately 3" and turn back ON 1" to 2" before the door is closed.

To Replace the Controller

The controller plugs into a panel mounting sleeve which should be left permanently installed in the furnace housing. To remove the controller, release the side clips and slide the controller out. Do not attempt to dismantle this unit further; replace it with a Thermolyne loaner or a new unit.

Replacement Parts



Warning

Replace fuses with same type and rating.

Single Setpoint Models

F47910, F47910-26, F47910-33, F47914, F47915, F48010, F48010-26, F48010-33, F48014, F48015, F48015-60, F48018

<u>Part number</u>	<u>Description</u>	<u>QTY.</u>	<u>Notes</u>
CN71X96	Controller	1	F48010-33 only
CN71X73	Controller	1	All Models except F48010-33
CAX94	Line Filter	1	"-33" models only.
EL479X1A	Element	2	120 & 240 volt F47900 models only.
EL479X2A	Element	2	100 volt F47900 models only.
EL480X1A	Element	2	120 & 240 volt F48000 models only, except "-33" models.
EL480X2A	Element	2	100 & 208 volt F48000 models only.
EL1205X1	Element	2	"-33" F48000 models only.
FZX30	Line Fuse	2	"-33" models only.
PLX76	Pilot Light	1	100 & 120 volt models only.
PLX82	Pilot Light	1	208 & 240 volt models only.
RYX34	S.S. Relay	1	All Models
SWX163	Door Switch	2	All Models
SWX143	Power Switch	1	100 & 120 volt models only
SWX144	Power Switch	1	208 & 240 volt models only.
TRX136	Terminal Block	1	All Models
TC1165X1	Thermocouple	1	All Models

Single Setpoint Models with OTP

F47920, F47920-26, F47920-33, F47924, F47925, F48020, F48020-26, F48020-33, F48024, F48025, F48025-60, F48028

<u>Part number</u>	<u>Description</u>	<u>QTY.</u>	<u>Notes</u>
CN71X100	Controller	1	F48020-33 only
CN71X99	Controller	1	All Models except F48020-33
CAX94	Line Filter	1	"-33 models only.
EL479X1A	Element	2	120 & 240 volt F47900 models only.
EL479X2A	Element	2	100 volt F47900 models only.
EL480X1A	Element	2	120 & 240 volt F48000 models only, except "-33" models.
EL480X2A	Element	2	100 & 208 volt F48000 models only.
EL1205 X1	Element	2	"-33" F48000 models only.
FZX30	Line Fuse	2	"-33" models only.
PLX76	Pilot Light	1	100 & 120 volt models only.
PLX82	Pilot Light	1	208 & 240 volt models only.
RYX34	S.S. Relay	1	All Models
RYX56	Mechanical Relay	1	100 & 120 volt models only.
RYX57	Mechanical Relay	1	208 & 240 volt models only.
SWX163	Door Switch	2	All Models
SWX143	Power Switch	1	100 & 120 volt models only
SWX144	Power Switch	1	208 & 240 volt models only.
TRX136	Terminal Block	1	All Models
TC1165X1	Thermocouple	1	All Models

REPLACEMENT PARTS

8 Segment Programmable Models with OTP

F47920-80, F47920-26-80, F47920-33-80, F47924-80, F47925-80, F48020-80, F48020-26-80, F48020-33-80, F48024-80, F48025-80, F48025-60-80, F48028-80

<u>Part number</u>	<u>Description</u>	<u>QTY.</u>	<u>Notes</u>
CN71X97	Controller	1	-33 models only
CN71X74	Controller	1	All models except -33 models
CAX94	Line Filter	1	"-33" models only.
EL479X1A	Element	2	120 & 240 volt F47900 models only.
EL479X2A	Element	2	100 volt F47900 models only.
EL480X1A	Element	2	120 & 240 volt F48000 models only, except "-33" models.
EL480X2A	Element	2	100 & 208 volt F48000 models only.
EL1205X1	Element	2	"-33" F48000 models only.
FZX30	Line Fuse	2	"-33" models only.
PLX76	Pilot Light	1	100 & 120 volt models only.
PLX82	Pilot Light	1	208 & 240 volt models only.
RYX34	S.S. Relay	1	All Models
RYX56	Mechanical Relay	1	100 & 120 volt models only.
RYX57	Mechanical Relay	1	208 & 240 volt models only.
SWX163	Door Switch	2	All Models
SWX143	Power Switch	1	100 & 120 volt models only
SWX144	Power Switch	1	208 & 240 volt models only.
TRX136	Terminal Block	1	All Models
TC1165X1	Thermocouple	1	All Models

4 X 16 Segment Programmable Models with OTP

F47950, F47950-26, F47950-33, F47954, F47955, F48050, F48050-26, F48050-33, F48055, F48055-60, F48058


<u>Part number</u>	<u>Description</u>	<u>QTY.</u>	<u>Notes</u>
CN71X98	Controller	1	-33 models only
CN71X75	Controller	1	All models except -33 models
CAX94	Line Filter	1	"-33 models only.
EL479X1A	Element	2	120 & 240 volt F47900 models only.
EL479X2A	Element	2	100 volt F47900 models only.
EL480X1A	Element	2	120 & 240 volt F48000 models only, except "-33" models.
EL480X2A	Element	2	100 & 208 volt F48000 models only.
EL1205X1	Element	2	"-33" F48000 models only.
FZX30	Line Fuse	2	"-33" models only.
PLX76	Pilot Light	1	100 & 120 volt models only.
PLX82	Pilot Light	1	208 & 240 volt models only.
RYX34	S.S. Relay	1	All Models
RYX56	Mechanical Relay	1	100 & 120 volt models only.
RYX57	Mechanical Relay	1	208 & 240 volt models only.
SWX163	Door Switch	2	All Models
SWX143	Power Switch	1	100 & 120 volt models only
SWX144	Power Switch	1	208 & 240 volt models only.
TRX136	Terminal Block	1	All Models
TC1165X1	Thermocouple	1	All Models

Wiring Diagrams

SINGLE SETPOINT CONTROL

DIAGRAM COMPONENT LIST

REF. NO.	DESCRIPTION	MODEL NO. AND OUR PART NO. (s)	F47910	F47910-26	F47910-33	F47914	F47915
CN1	CONTROL	CN71X73	CN71X73	CN71X73	CN71X73	CN71X73	CN71X73
DS1	PILOT LIGHT	PLX104	PLX104	PLX104	PLX103	PLX103	PLX103
F1	FUSE			FZX30			
F2	FUSE			FZX30			
FL1	FILTER			CAX98			
H1	HEATING ELEMENT	EL479X1A	EL479X1A	EL480X1A	EL479X2A	EL479X1A	EL479X1A
H2	HEATING ELEMENT	EL479X1A	EL479X1A	EL480X1A	EL479X2A	EL479X1A	EL479X1A
RY1	RELAY, SOLID STATE	RYX34	RYX34	RYX34	RYX34	RYX34	RYX34
S1	SWITCH, POWER	SWX144	SWX144	SWX144	SWX143	SWX143	SWX143
S2	SWITCH, DOOR	SWX163	SWX163	SWX163	SWX163	SWX163	SWX163
S3	SWITCH, DOOR	SWX163	SWX163	SWX163	SWX163	SWX163	SWX163
TB1	TERMINAL BLOCK	TRX136	TRX136	TRX136	TRX136	TRX136	TRX136
TC1	THERMOCOUPLE	TC1165X1	TC1165X1	TC1165X1	TC1165X1	TC1165X1	TC1165X1

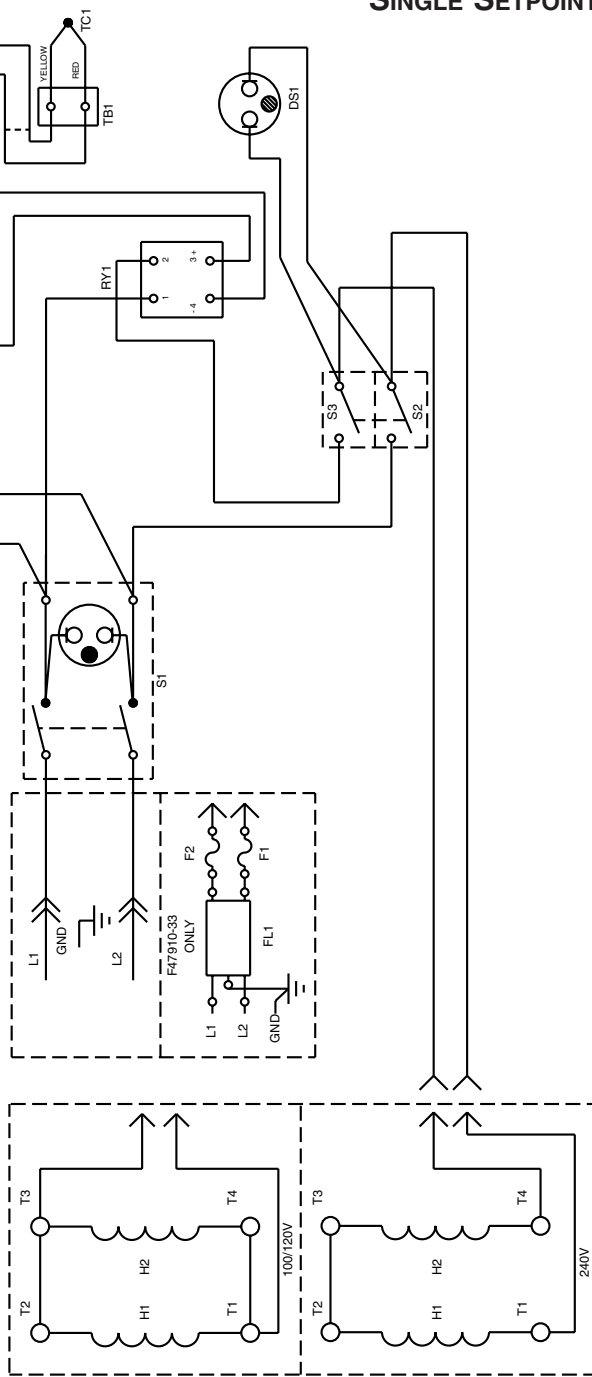


WIRING DIAGRAMS

SINGLE SETPOINT CONTROL W/OTP

DIAGRAM COMPONENT LIST

REF. NO.	DESCRIPTION	MODEL NO. AND OUR PART NO.(s)
CN1	CONTROL	F47920 CN71X99 F47920-26 CN71X99 F47920-33 CN71X99 F47924 CN71X99 F47925 CN71X99
DS1	PILOT LIGHT, NEON	PLX82
F1	FUSE	FZX30
F2	FUSE	FZX30
FL1	FILTER, EMI	CAX94
H1	HEATING ELEMENT	EL479X1A
H2	HEATING ELEMENT	EL479X1A
RY1	RELAY, DPST, N.O.	RYX57
RY2	SOLID STATE RELAY	RYX34
S1	SWITCH	SWX144
S2	DOOR SWITCH	SWX163
S3	DOOR SWITCH	SWX163
TB1	TERMINAL BLOCK	TRX136
TC1	THERMOCOUPLE	TC1165X1

WIRING DIAGRAM

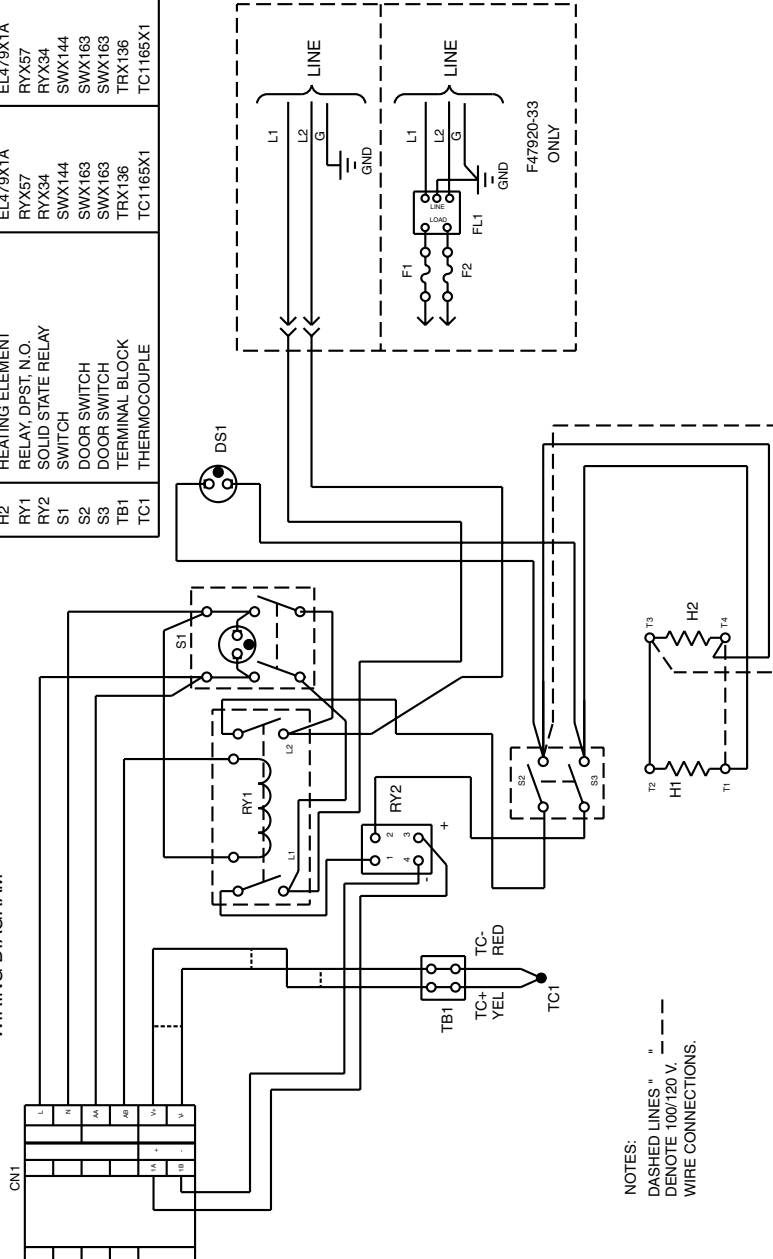

NOTES:
 DASHED LINES " " DENOTE 100/120 V. WIRE CONNECTIONS.


WIRING DIAGRAMS

8 SEGMENT PROGRAMMABLE CONTROL

WIRING DIAGRAM

DIAGRAM COMPONENT LIST

REF. NO.	DESCRIPTION	F47920-80	F47920-26-80	F47920-33-80	F47924-80	F47925-80
CN1	CONTROL	CN71X74	CN71X74	CN71X74	CN71X74	CN71X74
DS1	PILOT LIGHT, NEON	PLX82	PLX82	PLX82	PLX76	PLX76
F1	FUSE			FZX30		
F2	FUSE			FZX30		
FL1	FILTER, EMI			CAX94		
H1	HEATING ELEMENT	EL479X1A	EL479X1A	EL479X1A	EL479X2A	EL479X1A
H2	HEATING ELEMENT	EL479X1A	EL479X1A	EL479X1A	EL479X2A	EL479X1A
RY1	RELAY, DPST, N.O.	RYX57	RYX57	RYX57	RYX56	RYX56
RY2	SOLID STATE RELAY	RYX34	RYX34	RYX34	RYX34	RYX34
S1	SWITCH	SWX144	SWX144	SWX144	SWX143	SWX143
S2	DOOR SWITCH	SWX163	SWX163	SWX163	SWX163	SWX163
S3	DOOR SWITCH	SWX163	SWX163	SWX163	SWX163	SWX163
TB1	TERMINAL BLOCK	TRX136	TRX136	TRX136	TRX136	TRX136
TC1	THERMOCOUPLE	TC1165X1	TC1165X1	TC1165X1	TC1165X1	TC1165X1

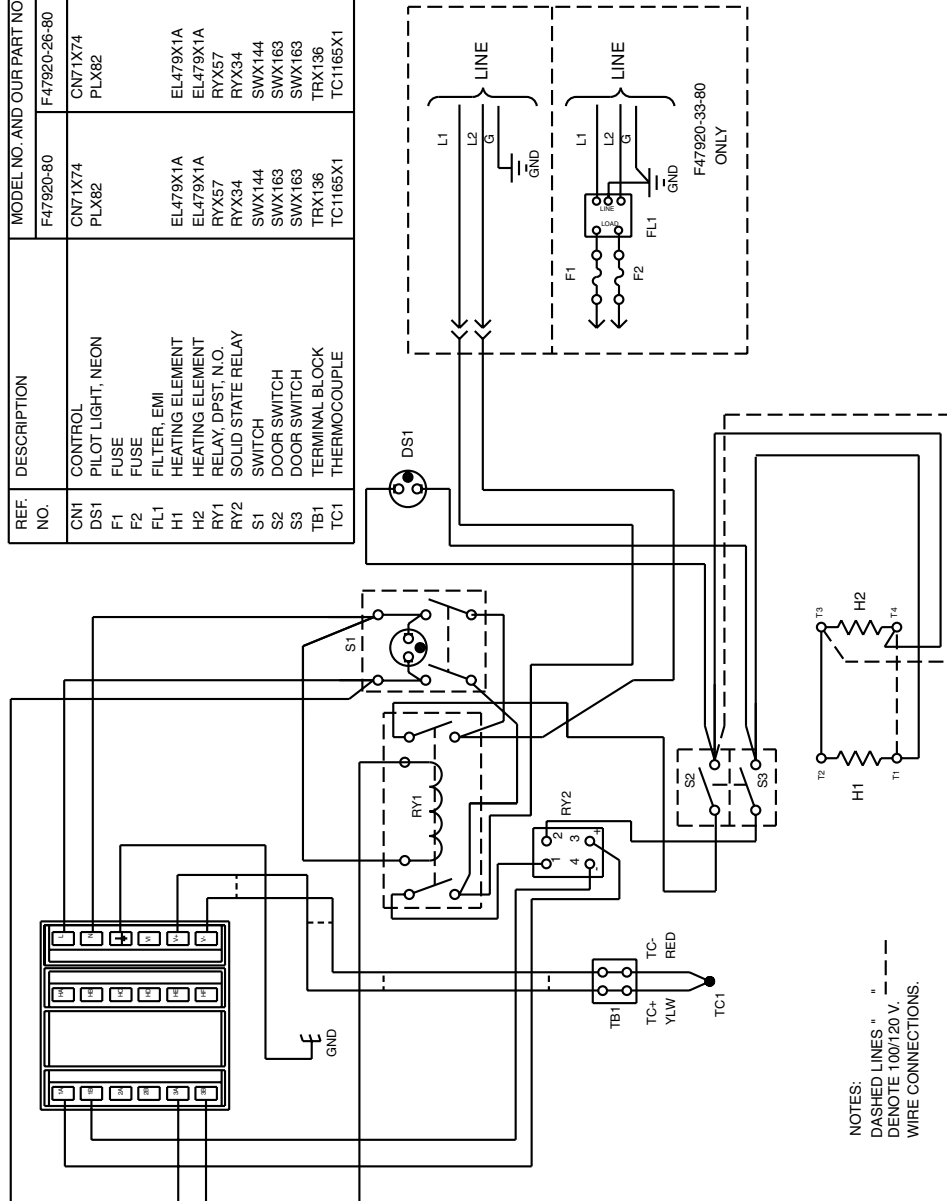


NOTES:
 DASHED LINES * DENOTE 100/120 V WIRE CONNECTIONS.

WIRING DIAGRAMS

4 x 16 SEGMENT PROGRAMMABLE CONTROL

DIAGRAM COMPONENT LIST

REF. NO.	DESCRIPTION	MODEL NO. AND OUR PART NO.(S)				
		F47950	F47950-26	F47950-33	F47954	F47955
CN1	CONTROL	CN71X75	CN71X75	CN71X75	CN71X75	CN71X75
DS1	PILOT LIGHT, NEON	PLX82	PLX82	PLX82	PLX76	PLX76
F1	FUSE			FZX30		
F2	FUSE			FZX30		
FL1	FILTER, EMI			CAX94		
H1	HEATING ELEMENT	EL479X1A	EL479X1A	EL479X1A	EL479X2A	EL479X1A
H2	HEATING ELEMENT	EL479X1A	EL479X1A	EL479X1A	EL479X2A	EL479X1A
RY1	RELAY, DPST, N.O.	RXX57	RXX57	RXX57	RXX56	RXX56
RY2	SOLID STATE RELAY	RXX34	RXX34	RXX34	RXX34	RXX34
S1	DOOR SWITCH	SWX144	SWX144	SWX144	SWX143	SWX143
S2	DOOR SWITCH	SWX163	SWX163	SWX163	SWX163	SWX163
S3	DOOR SWITCH	SWX163	SWX163	SWX163	SWX163	SWX163
TB1	TERMINAL BLOCK	TRX136	TRX136	TRX136	TRX136	TRX136
TC1	THERMALCOUPLE	TC1165X1	TC1165X1	TC1165X1	TC1165X1	TC1165X1

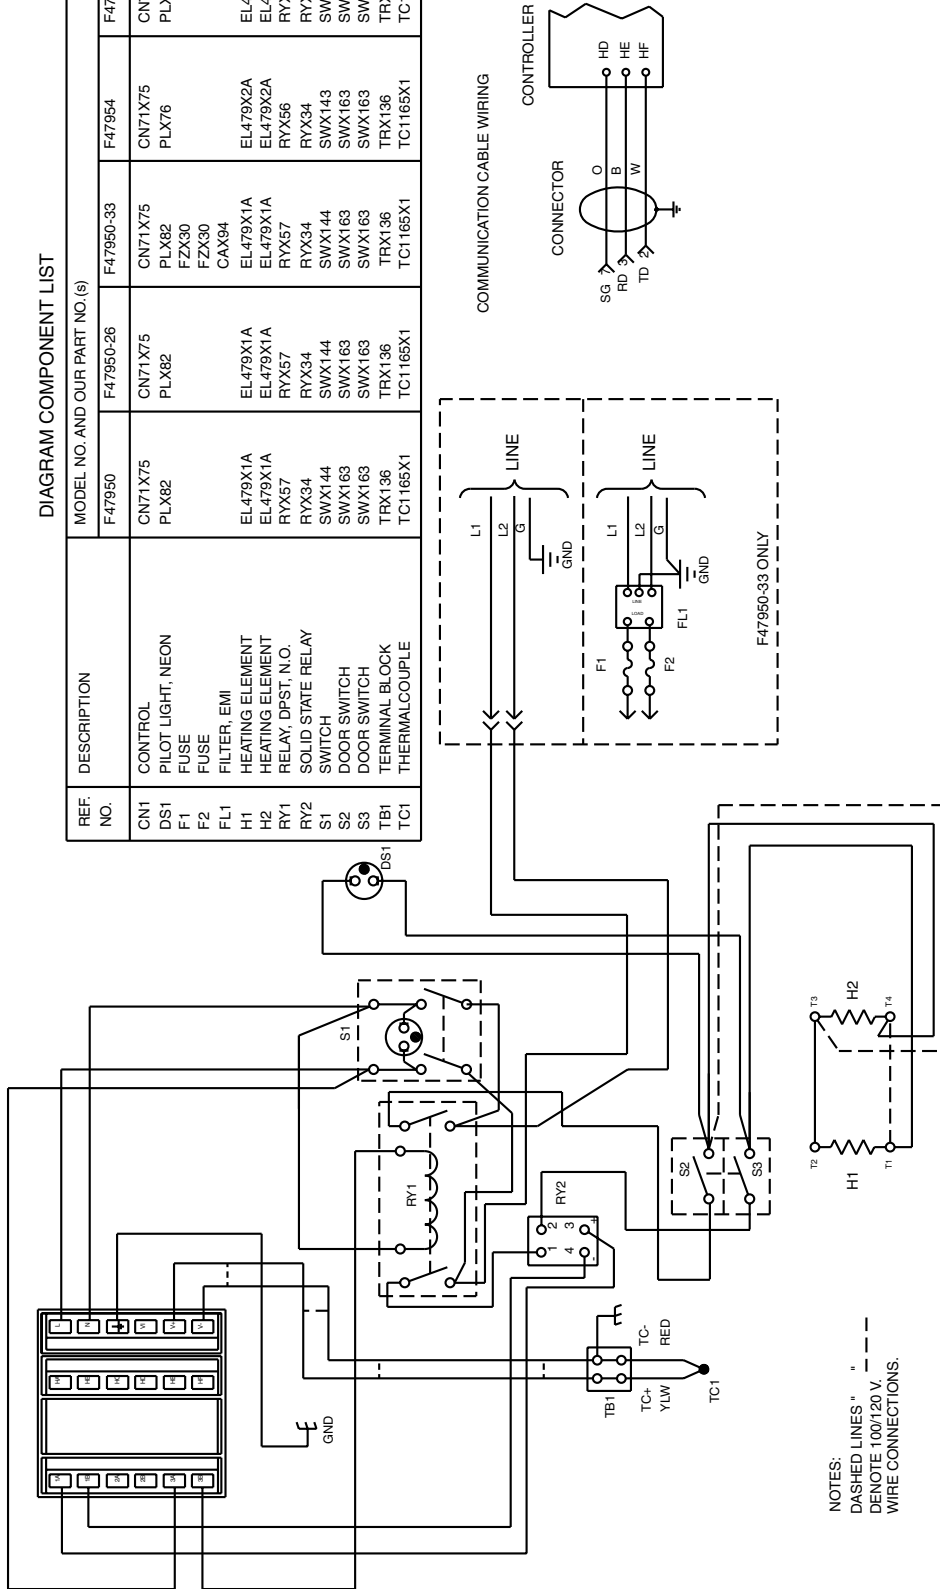


NOTES:
 DASHED LINES " " DENOTE 100/120 V. WIRE CONNECTIONS.

WIRING DIAGRAMS SINGLE SETPOINT CONTROL

DIAGRAM COMPONENT LIST

REF. NO.	DESCRIPTION	MODEL NO. AND OUR PART NO.(S)
CN1	CONTROL	F48010-33 F48014
DS1	PILOT LIGHT	F48010-26 F48015-60 F48018
F1	FUSE	CN71X73 PLX82
F2	FUSE	FZX30 FZX30
FL1	FILTER	CAX98
H1	HEATING ELEMENT	EL480X1A EL1205X1
H2	HEATING ELEMENT	EL480X1A EL1205X1
RY1	RELAY, SOLID STATE	RYX34 RYX34
S1	SWITCH, POWER	SWX144 SWX144
S2	SWITCH, DOOR	SWX163 SWX163
S3	SWITCH, DOOR	SWX163 SWX163
TB1	TERMINAL BLOCK	TRX136 TRX136
TC1	THERMOCOUPLE	TC1165X1 TC1165X1

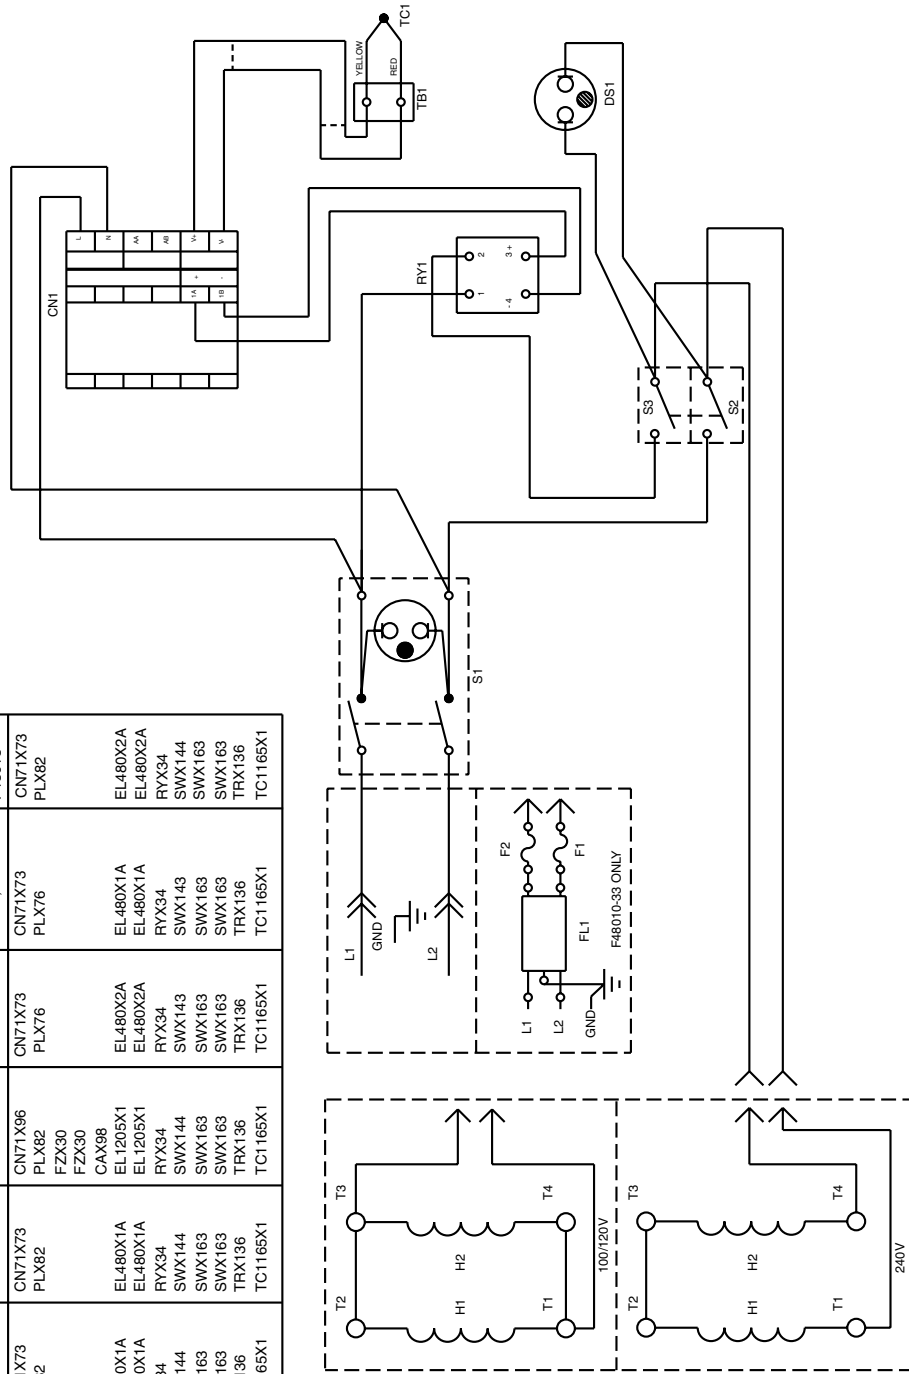


WIRING DIAGRAMS

SINGLE SETPOINT CONTROL W/OTP

DIAGRAM COMPONENT LIST

REF. NO.	DESCRIPTION	F48020	F48020-26	F48020-33	F48024	F48025, F48025-60	F48028
CN1	CONTROL	CN71X99	CN71X99	CN71X100	CN71X99	CN71X99	CN71X99
DS1	PILOT LIGHT, NEON	PLX82	PLX82	PLX82	PLX76	PLX76	PLX82
F1	FUSE	EL480X1A	EL480X1A	EL1205X1	EL480X2A	EL480X1A	EL480X2A
F2	FUSE	EL480X1A	EL480X1A	EL1205X1	EL480X2A	EL480X1A	EL480X2A
FL1	FILTER, EMI	RYX57	RYX57	RYX57	RYX56	RYX56	RYX57
H1	HEATING ELEMENT	RYX34	RYX34	RYX34	RYX34	RYX34	RYX34
H2	HEATING ELEMENT	SWX144	SWX144	SWX144	SWX143	SWX143	SWX144
RY1	RELAY, DPST, N.O.	SWX163	SWX163	SWX163	SWX163	SWX163	SWX163
RY2	SOLID STATE RELAY	TRX136	TRX136	TRX136	TRX136	TRX136	TRX136
S1	SWITCH	TC1165X1	TC1165X1	TC1165X1	TC1165X1	TC1165X1	TC1165X1
S2	DOOR SWITCH						
S3	DOOR SWITCH						
TB1	TERMINAL BLOCK						
TC1	THERMOCOUPLE						

WIRING DIAGRAM

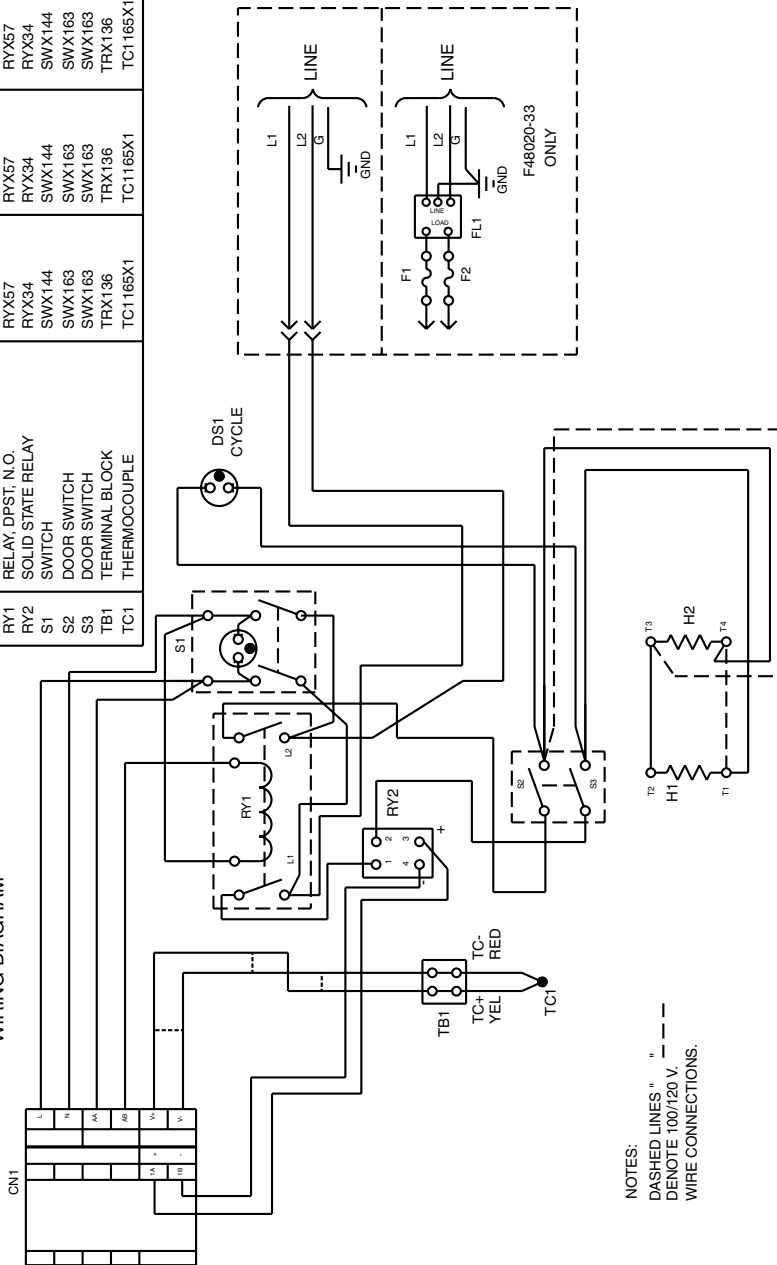


NOTES:
 DASHED LINES " " DENOTE 100/120 V. WIRE CONNECTIONS.

WIRING DIAGRAMS

4 x 16 SEGMENT PROGRAMMABLE CONTROL

DIAGRAM COMPONENT LIST

REF. NO.	DESCRIPTION	MODEL NO. AND OUR PART NO.(S)			
		F48050	F48050-26	F48050-33	F48055, F48055-60
CN1	CONTROL	CN71X75 PLX82	CN71X75 PLX82	CN71X98 PLX82	CN71X75 PLX76
DS1	PILOT LIGHT, NEON				
F1	FUSE				
F2	FUSE				
FL1	FILTER, EMI				
H1	HEATING ELEMENT	EL480X1A	EL480X1A	EL480X1A	EL480X1A
H2	HEATING ELEMENT	EL480X1A	EL480X1A	EL480X1A	EL480X2A
RY1	RELAY, DPST, N.O.	RYX57	RYX57	RYX57	RYX57
RY2	SOLID STATE RELAY	RYX34	RYX34	RYX34	RYX34
S1	SWITCH	SWX144	SWX144	SWX144	SWX144
S2	DOOR SWITCH	SWX163	SWX163	SWX163	SWX163
S3	DOOR SWITCH	SWX163	SWX163	SWX163	SWX163
TB1	TERMINAL BLOCK	TRX136	TRX136	TRX136	TRX136
TC1	THERMAL COUPLE	TC1165X1	TC1165X1	TC1165XA	TC1165X1

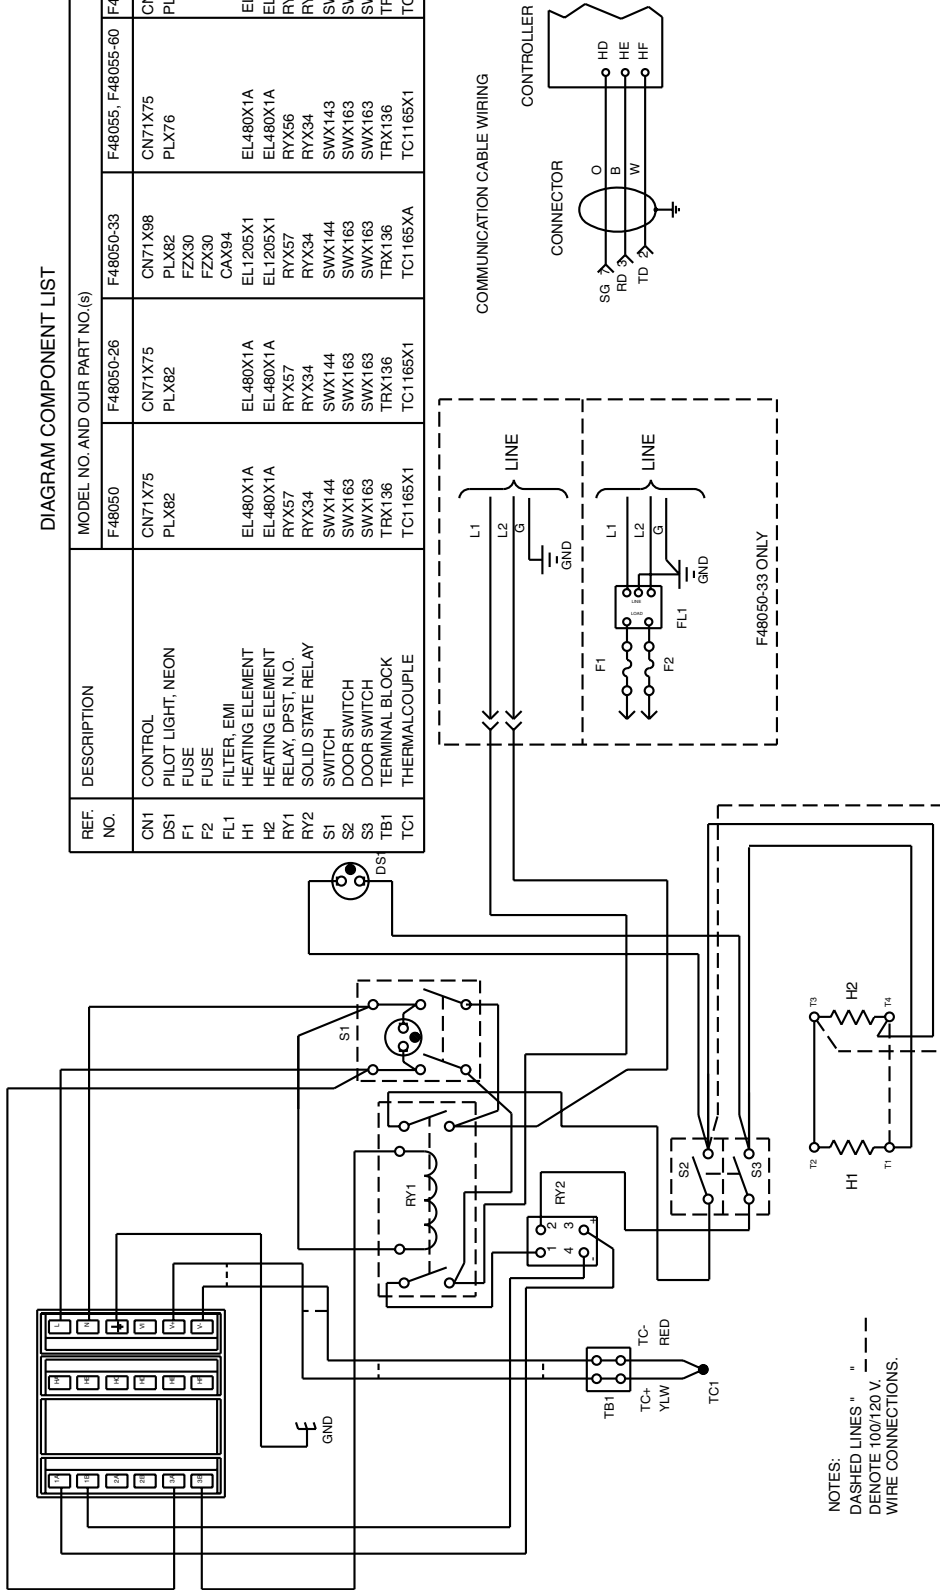

NOTES:
 DASHED LINES " " DENOTE 100/120 V WIRE CONNECTIONS.

Ordering Procedures

Please refer to the Specification Plate for the complete model number, serial number, and series number when requesting service, replacement parts or in any correspondence concerning this unit.

All parts listed herein may be ordered from the **Barnstead International** dealer from whom you purchased this unit or can be obtained promptly from the factory. When service or replacement parts are needed we ask that you check first with your dealer. If the dealer cannot handle your request, then contact our Customer Service Department at 563-556-2241 or 800-553-0039.

Prior to returning any materials to **Barnstead International**, please contact our Customer Service Department for a "Return Goods Authorization" number (RGA). Material Returned without an RGA number will be returned.

One Year Limited Warranty

BARNSTEAD INTERNATIONAL (“BARNSTEAD”) warrants that if a product manufactured by Barnstead shall be free of defects in materials and workmanship for one (1) year from the first to occur of (i) the date the product is sold by BARNSTEAD or (ii) the date the product is purchased by the original retail customer (the “Commencement Date”). Except as expressly stated above, BARNSTEAD MAKES NO OTHER WARRANTY, EXPRESSED OR IMPLIED, WITH RESPECT TO THE PRODUCTS AND EXPRESSLY DISCLAIMS ANY AND ALL WARRANTIES, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF DESIGN, MERCHANT ABILITY AND FITNESS FOR A PARTICULAR PURPOSE.



An authorized representative of BARNSTEAD must perform all warranty inspections. In the event of a defect covered by BARNSTEAD’s warranty, BARNSTEAD shall, as its sole obligation and exclusive remedy, provide free replacement parts to remedy the defective product. In addition, for products sold by BARNSTEAD within the continental United States or Canada, BARNSTEAD shall provide free labor to repair the products with the replacement parts, but only for a period of ninety (90) days from the Commencement Date.

BARNSTEAD’s warranty provided hereunder shall be null and void and without further force or effect if there is any (i) repair made to the product by a party other than BARNSTEAD or its duly authorized service representative, (ii) misuse (including use inconsistent with written operating instructions for the product), mishandling, contamination, overheating, modification or alteration of the product by any customer or third party or (iii) use of replacement parts that are obtained from a party who is not an authorized dealer of BARNSTEAD.

Heating elements, because of their susceptibility to overheating and contamination, must be returned to the BARNSTEAD factory and if, upon inspection, it is concluded that failure is due to factors other than excessive high temperature or contamination, BARNSTEAD will provide warranty replacement. As a condition to the return of any product, or any constituent part thereof, to BARNSTEAD’s factory, it shall be sent prepaid and a prior written authorization from BARNSTEAD assigning a Return Goods Number to the product or part shall be obtained.

IN NO EVENT SHALL BARNSTEAD BE LIABLE TO ANY PARTY FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, OR FOR ANY DAMAGES RESULTING FROM LOSS OF USE OR PROFITS, ANTICIPATED OR OTHERWISE, ARISING OUT OF OR IN CONNECTION WITH THE SALE, USE OR PERFORMANCE OF ANY PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, TORT (INCLUDING NEGLIGENCE), ANY THEORY OF STRICT LIABILITY OR REGULATORY ACTION.

The name of the authorized Barnstead International dealer nearest you may be obtained by calling 1-800-446-6060 (563-556-2241) or writing to:

 **Barnstead International** 
an Apogent company *Your Lab Starts Here*

2555 Kerper Boulevard
P.O. Box 797
Dubuque, Iowa 52001-0797
Phone: 563-556-2241 or 800-553-0039
Fax: 563-589-0516
E-mail: mkt@barnstead.com
www.barnstead.com

MODEL 2416 PID CONTROLLER

INSTALLATION AND OPERATION HANDBOOK

Contents	Page
Chapter 1	INSTALLATION 1-1
Chapter 2	OPERATION 2-1
Chapter 3	ACCESS LEVELS 3-1
Chapter 4	TUNING 4-1
Chapter 5	PROGRAMMER OPERATION 5-1
Chapter 6	CONFIGURATION 6-1
Chapter 7	USER CALIBRATION 7-1
Appendix A	UNDERSTANDING THE ORDERING CODE A-1
Appendix B	SAFETY and EMC INFORMATION B-1
Appendix C	TECHNICAL SPECIFICATION C-1
Appendix D	UK OFFICE ADDRESSES D-1
Appendix E	LOAD CURRENT MONITORING AND DIAGNOSTICS... E-1

“This product is covered by one or more of the following US Patents:

5,484,206; Additional patents pending.

PDSIO and INSTANT ACCURACY are trademarks of Eurotherm.”

Chapter 1 INSTALLATION

The 2416 controller is a versatile, high stability temperature or process controller, with self and adaptive tuning, in 1/16 DIN size (48 x 48mm). It has a modular hardware construction, which accepts up to three plug-in output modules and one communications module, to satisfy a wide range of control requirements. All 2416 controllers have a basic 8-segment programmer built-in as standard.

The 2416 is available as either a:

- | | | |
|--|--------|---------------------|
| • standard controller: | Model | 2416/CC |
| • setpoint programming controller: | Models | 2416/CP and 2416/P4 |
| • motorised valve controller: | Model | 2416/VC |
| • setpoint programming motorised valve controller: | Models | 2416/VP and 2416/V4 |

This chapter consists of two parts:

- MECHANICAL INSTALLATION
- ELECTRICAL INSTALLATION.

Before proceeding, please read the chapter called, *Safety and EMC Information*.

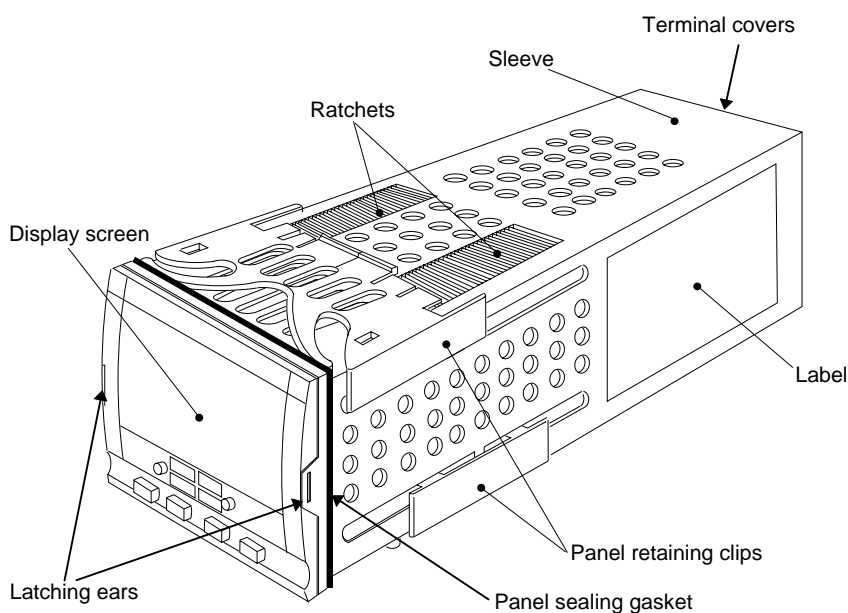


Figure 1-1 2416 1/16 DIN controller

WARNING

You must ensure that the controller is correctly configured for your application. Incorrect configuration could result in damage to the process being controlled, and/or personal injury. It is your responsibility as the installer to ensure that the configuration is correct. The controller may either have been configured when ordered, or may need configuring now. See Chapter 6, *Configuration*.

MECHANICAL INSTALLATION**Controller labels**

The labels on the sides of the controller identify the ordering code, the serial number, and the wiring connections.

Appendix A, *Understanding the Ordering Code* explains the hardware and software configuration of your particular controller.

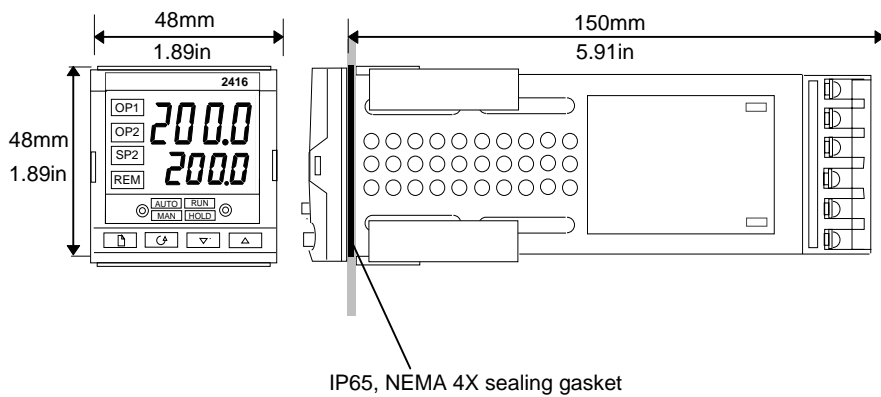
Outline dimensions

Figure 1-2 Outline dimensions

The electronic assembly of the controller plugs into a rigid plastic sleeve, which in turn fits into the standard DIN size panel cut-out shown in Figure 1-3.

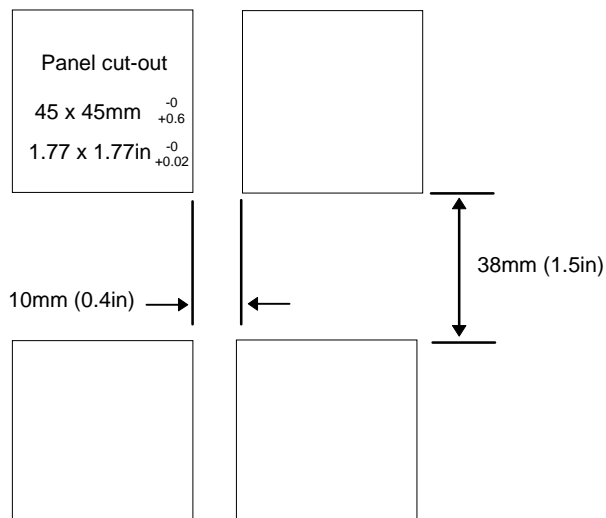
Panel cut-out and recommended minimum spacing of controllers

Figure 1-3 Panel cut-outs and minimum spacing

To install the controller

1. Prepare the control panel cut-out to the size shown in Figure 1-3.
2. Insert the controller through the panel cut-out.
3. Spring the upper and lower panel retaining clips into place. Secure the controller in position by holding it level and pushing both retaining clips forward.
4. Peel off the plastic film protecting the front of the indicator.

Note: If the panel retaining clips subsequently need removing, in order to extract the controller from the control panel, they can be unhooked from the side with either your fingers or a screwdriver.

Unplugging and plugging-in the controller

If required, the controller can be unplugged from its sleeve by easing the latching ears outwards and pulling it forward out of the sleeve. When plugging the controller back into its sleeve, ensure that the latching ears click into place in order to secure the IP65 sealing.

ELECTRICAL INSTALLATION

This section consists of five topics:

- Rear terminal layout
- Fixed connections
- Plug-in module connections
- Typical wiring diagram
- Motorised valve connections

All electrical connections are made to the screw terminals at the rear of the controller. These screw terminals accept wire sizes from 0.5 to 2.5mm² (14 to 22 awg) and should be tightened to a torque of 0.4 Nm (3.5 lb in). If you wish to use crimp connectors, we recommend AMP part number 16500. These accept wire sizes from 0.5 to 1.5 mm² (16 to 22 AWG).

REAR TERMINAL LAYOUT

The terminals are arranged in three columns at the rear of the controller. Each column is protected by a clear plastic hinged cover to prevent hands or metal making accidental contact with live wires. Viewed from the rear and with the controller upright, the right-hand column carries the connections for the power supply and sensor input. The other two columns carry the connections to the plug-in modules. The connections depend upon the type of module installed, if any. To discover which plug-in modules are installed in your controller, please refer to the ordering code and wiring data on the labels on the sides of the controller. The rear terminal layout is shown below.

Note: The plug-in sleeve supplied with high voltage controllers are keyed to prevent a low voltage unit being inserted into them.

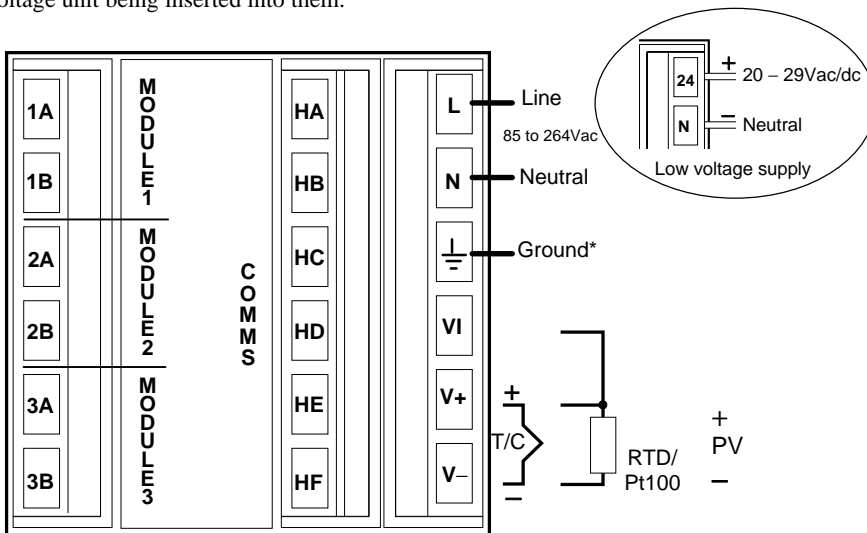


Figure 1-4 Rear terminal layout

*The ground connection is provided as a return for internal EMC filters. It is not required for safety purposes, but must be connected in order to satisfy EMC requirements.

FIXED CONNECTIONS

The *power supply* and *sensor inputs* are always wired to the same fixed positions whatever plug-in modules are installed.

Power supply connections

These are as shown in Figure 1-4.

Sensor input connections

The diagrams below show the connections for the various types of input. The input will have been configured in accordance with the ordering code.

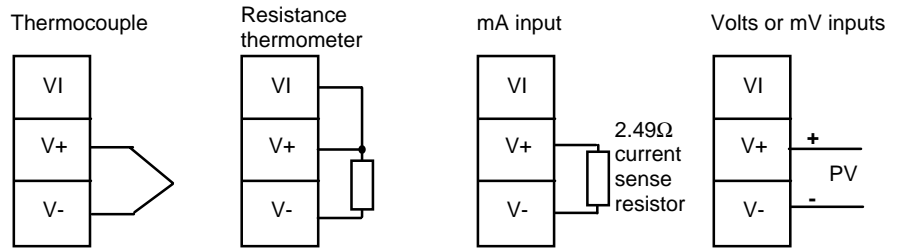


Fig 1-5 Sensor input connections

PLUG-IN MODULE CONNECTIONS

In Figure 1-4, *Modules 1, 2 and 3*, and *Comms* are plug-in modules.

Modules 1, 2 and 3

Module positions 1, 2 and 3 each have two terminals. They will accept four types of module: *Relay*, *Logic (non-isolated)*, *Triac*, and *DC (non-isolated) output*.

Collectively, these can be configured to operate in six different ways:

- Heating control
- Cooling control
- Alarm output
- Program event output
- PDSIO mode 1*, which provides logic heating using a Eurotherm TE10S solid state relay with feedback of a load failure alarm.
- PDSIO mode 2*, which provides logic heating using a Eurotherm TE10S solid state relay, with feedback of the load current reading and two alarms: solid state relay failure and heater circuit failure.

* PDSIO stands for 'Pulse Density Signalling Input/Output'. This is a proprietary technique developed by Eurotherm for bi-directional transmission of analogue and digital data over a simple 2-wire connection.

Snubbers

The relay and triac modules have an internal 15nF/100Ω 'snubber' connected across their output, which is used to prolong contact life and to suppress interference when switching inductive loads, such as mechanical contactors and solenoid valves.

WARNING

When the relay contact is open or the triac is off, the snubber circuit passes 0.6mA at 110Vac and 1.2mA at 240Vac. You must ensure that this current, passing through the snubber, will not hold on low power electrical loads. It is your responsibility as the installer to ensure that this does not happen. If the snubber circuit is not required, it can be removed from the relay module (but not the triac) by breaking the PCB track that runs crosswise adjacent to the edge connectors of the module. Insert the blade of a screwdriver into one of the two slots that bound it, and twist.

The table below shows the module connections and which functions each module can perform. The heating output is normally connected to module 1, the cooling output to module 2 and the alarm output to module 3, although the actual function of each module will depend upon how your controller has been configured.

Note: Module 1 is connected to terminals 1A and 1B
 Module 2 is connected to terminals 2A and 2B
 Module 3 is connected to terminals 3A and 3B.





Module type	Terminal identity		Possible functions
	A	B	
Relay: 2-pin (2A, 264 Vac max.)			Heating, Cooling, or Alarm output Program event output Valve raise or lower
Logic: non-isolated (18Vdc at 20mA)			Heating, Cooling, or Alarm output PDSIO mode 1, PDSIO mode 2, Program event
Triac (1A, 30 to 264Vac)			Heating, Cooling, Program event Valve raise or lower
DC control: non-isolated (10Vdc, 20mA max.)			Heating, Cooling. Retransmission of PV, setpoint or control output

Table 1-1 Module 1, 2 and 3 connections

To check which modules are installed in your particular controller, and which functions they are configured to perform, refer to the ordering code and the wiring information on the controller side labels.

Communications module


The Communications module position will accept any of the modules listed in Table 1-2 below.

The serial communications can be configured for either Modbus, or EI bisynch protocol.

Communications module	Terminal identity (COMMS)					
	HA	HB	HC	HD	HE	HF
2-wire EIA-485 serial communications	-	-	-	Common	A (+)	B (-)
EIA-232 serial communications	-	-	-	Common	Rx	Tx
4-wire EIA-485 serial communications	-	A' (Rx+)	B' (Rx-)	Common	A (Tx+)	B (Tx-)
PDSIO Setpoint retransmission	-	-	-	-	Signal	Common
PDSIO remote setpoint input	--	--	--	--	Signal	Common

Table 1-2 Communications connections

Wiring of 2-wire EIA-485 serial communications link

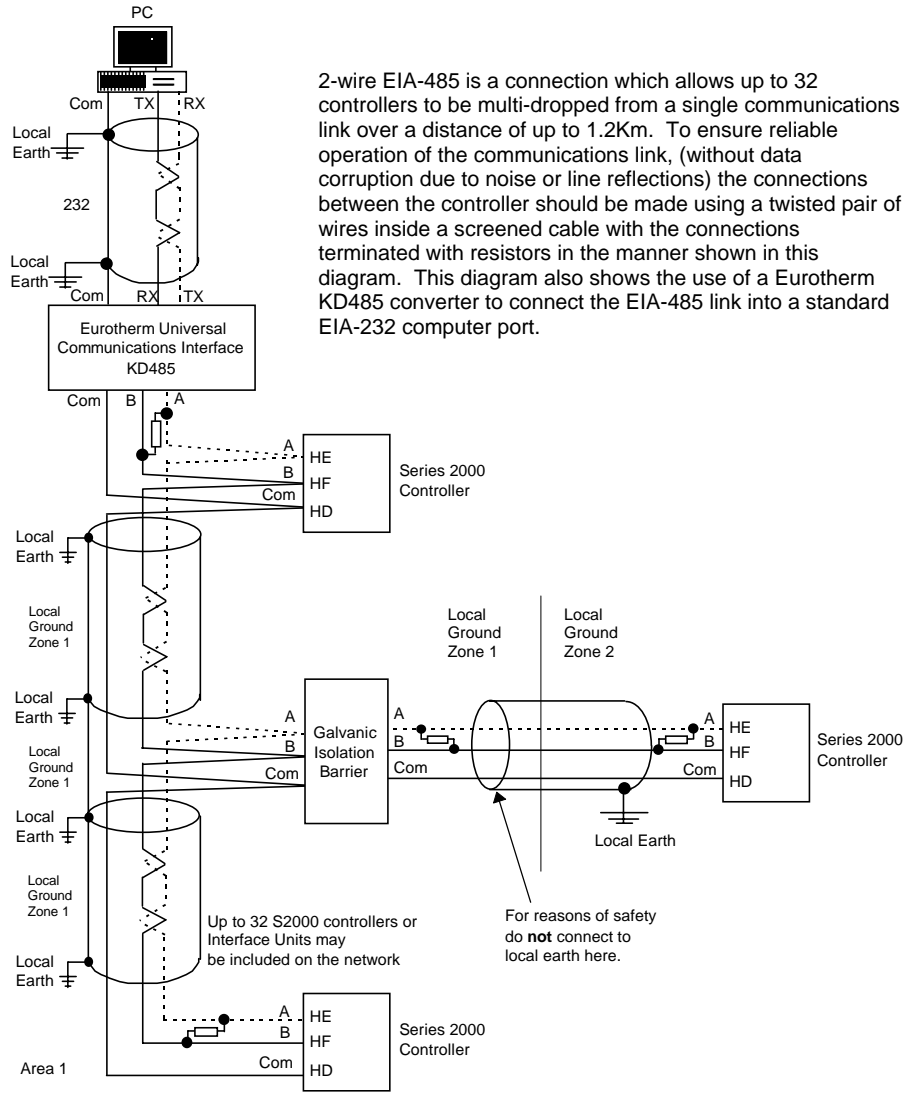

Note:
 All resistors are 220 ohm 1/4W carbon composition.
 Local grounds are at equipotential. Where equipotential is not available wire into separate zones using a galvanic isolator.
 Use a repeater (KD845) for more than 32 units.

Figure 1-6 EIA-485 wiring

TYPICAL WIRING DIAGRAM

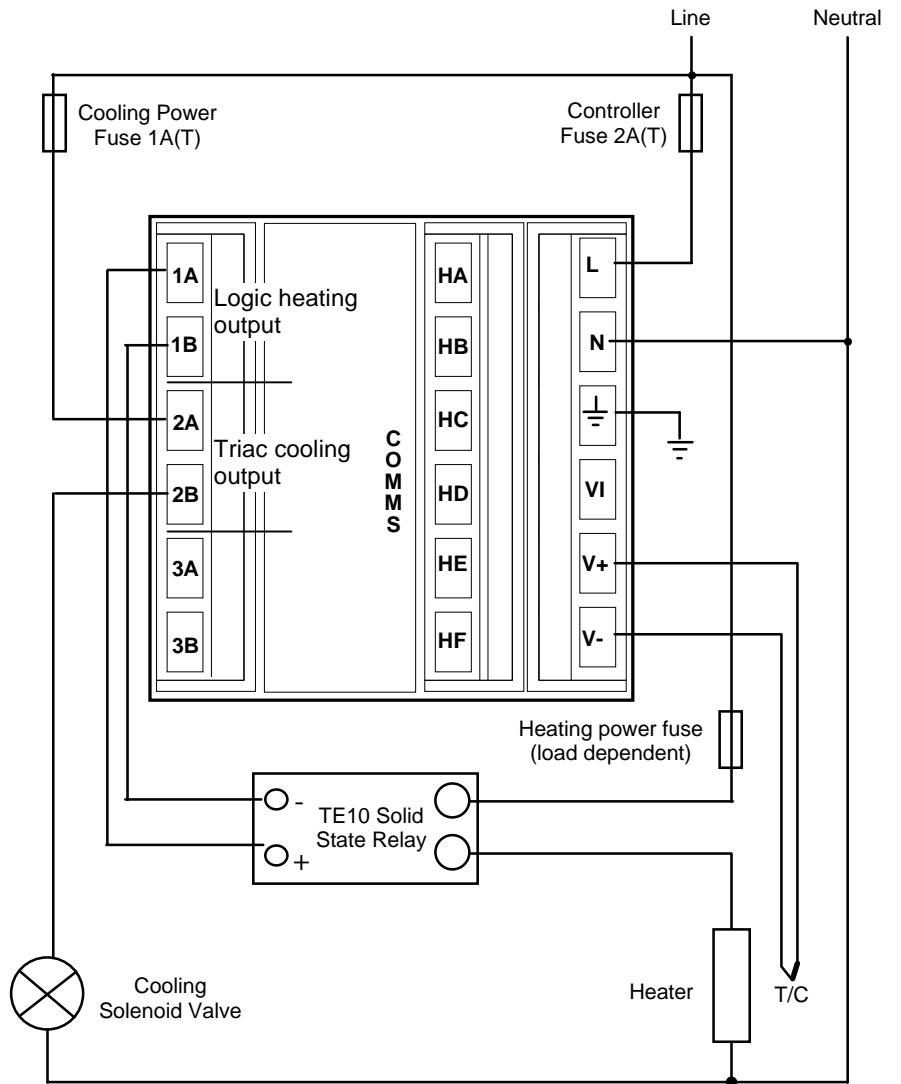


Fig 1-7 Typical wiring diagram, Model 2416 Controller

MOTORISED VALVE CONNECTIONS

Motorised valves are wired to relay, or triac, outputs installed in module positions 1 and 2. The convention is to configure Output 1 as the RAISE output and Output 2 as the LOWER output. The controller does not require a position feedback potentiometer.

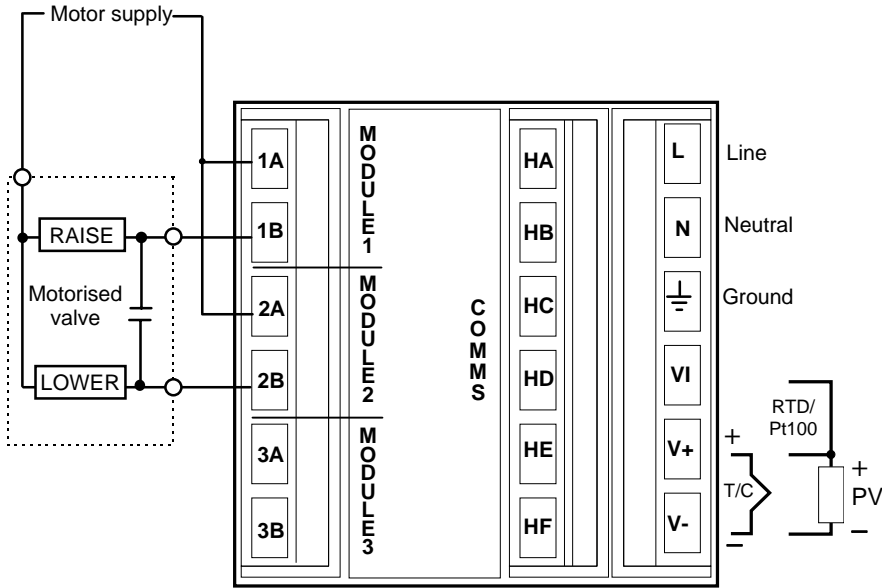


Fig 1-8 Motorised valve connections

Chapter 2 OPERATION

This chapter has nine topics:

- FRONT PANEL LAYOUT
- BASIC OPERATION
- OPERATING MODES
- AUTOMATIC MODE
- MANUAL MODE
- PARAMETERS AND HOW TO ACCESS THEM
- NAVIGATION DIAGRAM
- PARAMETER TABLES
- ALARM MESSAGES

FRONT PANEL LAYOUT

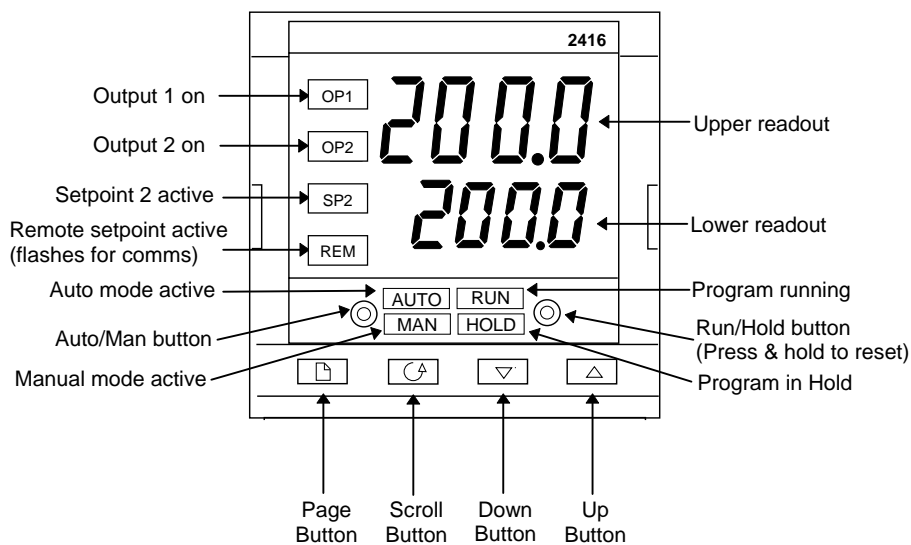


Figure 2-1 Front panel layout







Button or indicator	Name		Explanation
OP1	Output 1	If a DC output is installed OP1 & OP2 will not light	When lit, it indicates that the output installed in module position 1 is on. This is normally the heating output on a temperature controller.
OP2	Output 2		When lit, it indicates that the output installed in module position 2 is on. This is normally the cooling output on a temperature controller.
SP2	Setpoint 2		When lit, this indicates that setpoint 2, (or a setpoint 3-16) has been selected.
REM	Remote setpoint		When lit, this indicates that a remote setpoint input has been selected. 'REM' will also flash when communications is active.
	Auto/Manual button		When pressed, this toggles between automatic and manual mode: <ul style="list-style-type: none"> • If the controller is in automatic mode the AUTO light will be lit. • If the controller is in manual mode, the MAN light will be lit. The Auto/Manual button can be disabled in configuration level.
	Run/Hold button		<ul style="list-style-type: none"> • Press once to start a program (RUN light on.) • Press again to hold a program (HOLD light on) • Press again to cancel hold and continue running (HOLD light off and RUN light ON) • Press and hold in for two seconds to reset a program (RUN and HOLD lights off) The RUN light will flash at the end of a program. The HOLD light will flash during holdback.
	Page button		Press to select a new list of parameters.
	Scroll button		Press to select a new parameter in a list.
	Down button		Press to decrease a value in the lower readout.
	Up button		Press to increase a value in lower readout.

Figure 2-2 Controller buttons and indicators

BASIC OPERATION

Switch on the power to the controller. It runs through a self-test sequence for about three seconds and then shows the temperature, or process value, in the upper readout and the setpoint in the lower readout. This is called the Home display. It is the one that you will use most often.

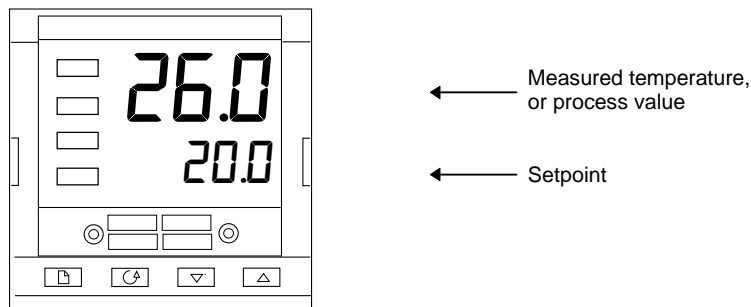






Figure 2-3 Home display

On this display you can adjust the setpoint by pressing the  or  buttons. Two seconds after releasing either button, the display blinks to show that the controller has accepted the new value.

Note: You can get back to the Home display at any time by pressing  and  together. Alternatively you will always be returned to the Home display if no button is pressed for 45 seconds, or whenever the power is turned on. If, however, a flashing alarm message is present the controller reverts to the Home display after 10 seconds.

Alarms

If the controller detects an alarm condition, it flashes an alarm message in the Home display. For a list of all the alarm messages, their meaning and what to do about them, see *Alarms* at the end of this chapter.

OPERATING MODES

The controller has two basic modes of operation:

- **Automatic mode** in which the output power is automatically adjusted to maintain the temperature or process value at the setpoint.
- **Manual mode** in which you can adjust the output power independently of the setpoint.


You toggle between the modes by pressing the AUTO/MAN button. The displays which appear in each of these modes are explained in this chapter.

Two other modes are also available:

- **Remote Setpoint mode** in which the setpoint is generated from an external source. In this mode the REM light will be on.
- **Programmer mode** which is explained in Chapter 5, *Programmer Operation*.

AUTOMATIC MODE

You will normally work with the controller in automatic mode. If the MAN light is on, press the AUTO/MAN button to select automatic mode. The AUTO light will come on.

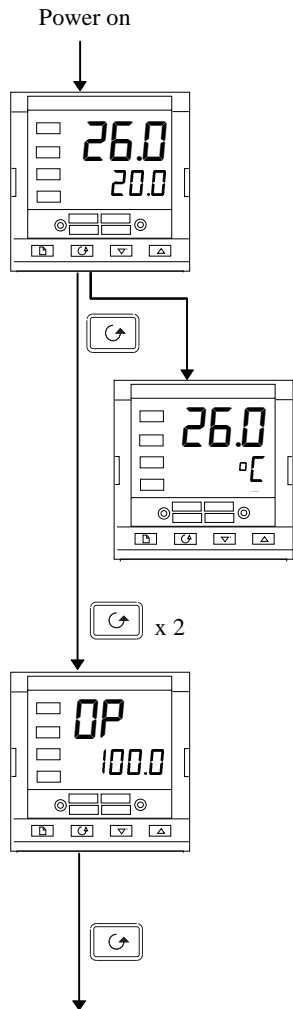

The Home display

Check that the AUTO light is on.

The upper readout shows the measured temperature, or process value. The lower readout shows the setpoint.

To adjust the setpoint up or down, press or .

(Note: If Setpoint Rate Limit has been enabled, then the lower readout will show the active setpoint. If or is pressed, it will change to show and allow adjustment of the target setpoint.)

Press once

Display units

A single press of the button will flash the display units for 0.5 seconds, after which you will be returned to the **Home** display.

Flashing of the display units may have been disabled in configuration, in which case a single press will take you straight to the display shown below.

Press twice

% Output power demand

The % output power demand is displayed in the lower readout. This is a read-only value. You cannot adjust it.

Press and together to return to the **Home** display.


If the controller is configured as Valve Position and Manual is selected the Output Power is displayed as **UPDS**. This is the inferred position of the valve

Press

Pressing from the Output Power display may access further parameters. These may be in this scroll list if the 'Promote' feature has been used (see Chapter 3, *Edit Level*). When you reach the end of this scroll list, pressing will return you to the **Home** display.

MANUAL MODE

If the AUTO light is on, press the AUTO/MAN button to select manual mode. The MAN light will come on.

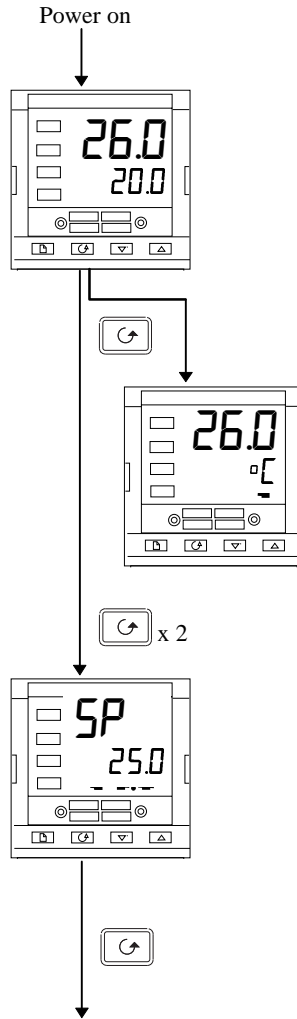

The Home display

Check that the MAN light is on. The upper readout shows the measured temperature or process value. The lower readout shows the % output. To adjust the output, press or . (Note: If Output Rate Limit has been enabled, then the lower readout will show the working output. If or is pressed, it will change to show and allow adjustment of the target output.)

Press once

Display units

A single press of will flash the display units for 0.5 seconds, after which you will be returned to the Home display. Flashing of the display units may have been disabled in configuration in which case you a single press will take you straight to the display shown below.

Press twice

Setpoint

To adjust the setpoint value, press or .

Press

Pressing from the Output Power display may access further parameters. Other parameters may be in this scroll list if the 'Promote' feature has been used (see Chapter 3, *Edit Level*). When you reach the end of this scroll list, pressing will return you to the **Home** display.

PARAMETERS AND HOW TO ACCESS THEM

Parameters are settings within the controller that determine how it will operate. For example, alarm setpoints are parameters that set the points at which alarms will occur. For ease of access, the parameters are arranged in lists as shown in the navigation diagram on the following page. The names of these lists are called the *list headers*. The lists are:

- | | | |
|------------------------|----------------------|----------------------------|
| <i>Home list</i> | <i>PID list</i> | <i>Communications list</i> |
| <i>Run list</i> | <i>Motor list</i> | <i>Information list</i> |
| <i>Programmer list</i> | <i>Setpoint list</i> | <i>Access list.</i> |
| <i>Alarm list</i> | <i>Input list</i> | |
| <i>Autotune list</i> | <i>Output list</i> | |

Each list has a 'List Header' display.

List header displays

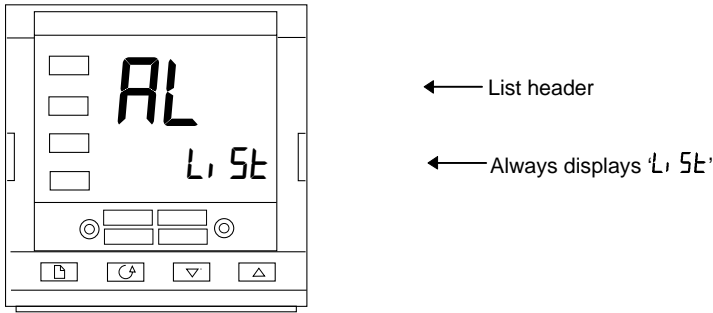







Figure 2-4 Typical list header display

A list header can be recognised by the fact that it always shows 'L, St' in the lower readout. The upper readout is the name of the list. In the above example, AL indicates that it is the Alarm list header. List header displays are read-only.

To step through the list headers press . Depending upon how your controller has been configured, a single press may momentarily flash the display units. In this case, a double press will be necessary to take you to the first list header. Continued pressing of  will step through the list headers eventually returning you to the **Home** display.

To step through the parameters within a particular list, press . When you reach the end of the list, you will return to the list header. From within a list you can return to the list header at any time can by pressing . To step to the next list header, press  once again.

Parameter names

In the navigation diagram, (Fig2-6) each box depicts the display for a selected parameter. The upper readout shows the name of the parameter and the lower readout its value. The Operator parameter tables later in this chapter list all the parameter names and their meaning.

The navigation diagram shows all the parameters that can, *potentially*, be present in the controller. In practice, only those associated with a particular configuration will appear.

The shaded boxes in the diagram indicate parameters that are hidden in normal operation. To see all the available parameters, you must select Full access level. For more information about this, see Chapter 3, *Access Levels*.

Parameter displays

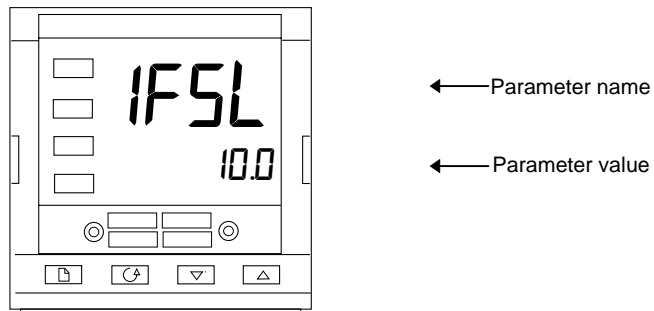




Figure 2-5 Typical parameter display

Parameter displays show the controller's current settings. The layout of parameter displays is always the same: the upper readout shows the parameter name and the lower readout its value. Alterable parameters can be changed using  or . In the above example, the parameter mnemonic is *IFSL* (indicating *Alarm 1, full scale low*), and the parameter value is *10.0*.

To change the value of a parameter

First, select the required parameter. The parameter name is shown in the upper readout and the parameter value in the lower readout.

To change the parameter value, press either  or . During adjustment, single presses change the value by one digit.

Keeping the button pressed speeds up the rate of change.

Two seconds after releasing either button, the display blinks to show that the controller has accepted the new value.

NAVIGATION DIAGRAM (PART A)

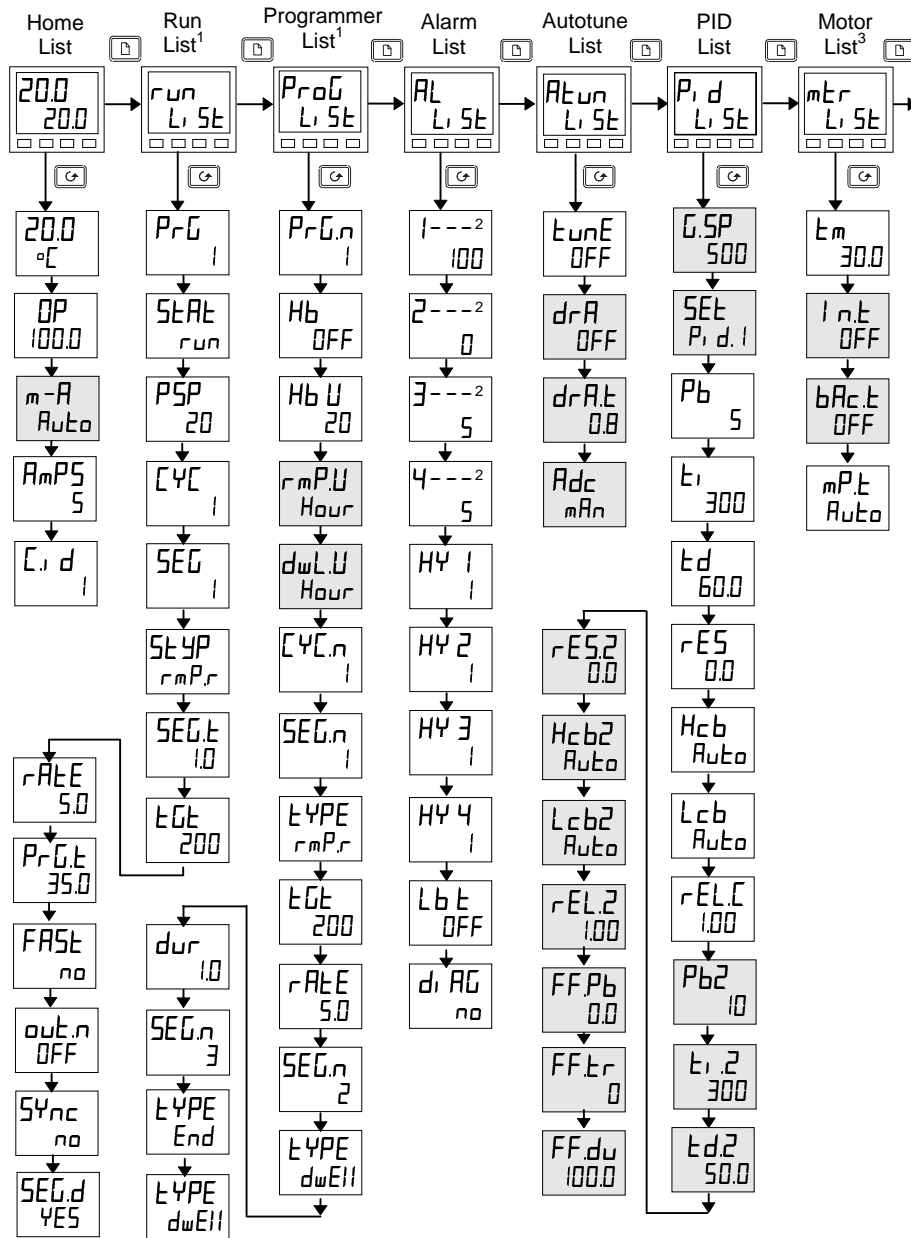


Figure 2-6a Navigation diagram (Part A)

NAVIGATION DIAGRAM (PART B)

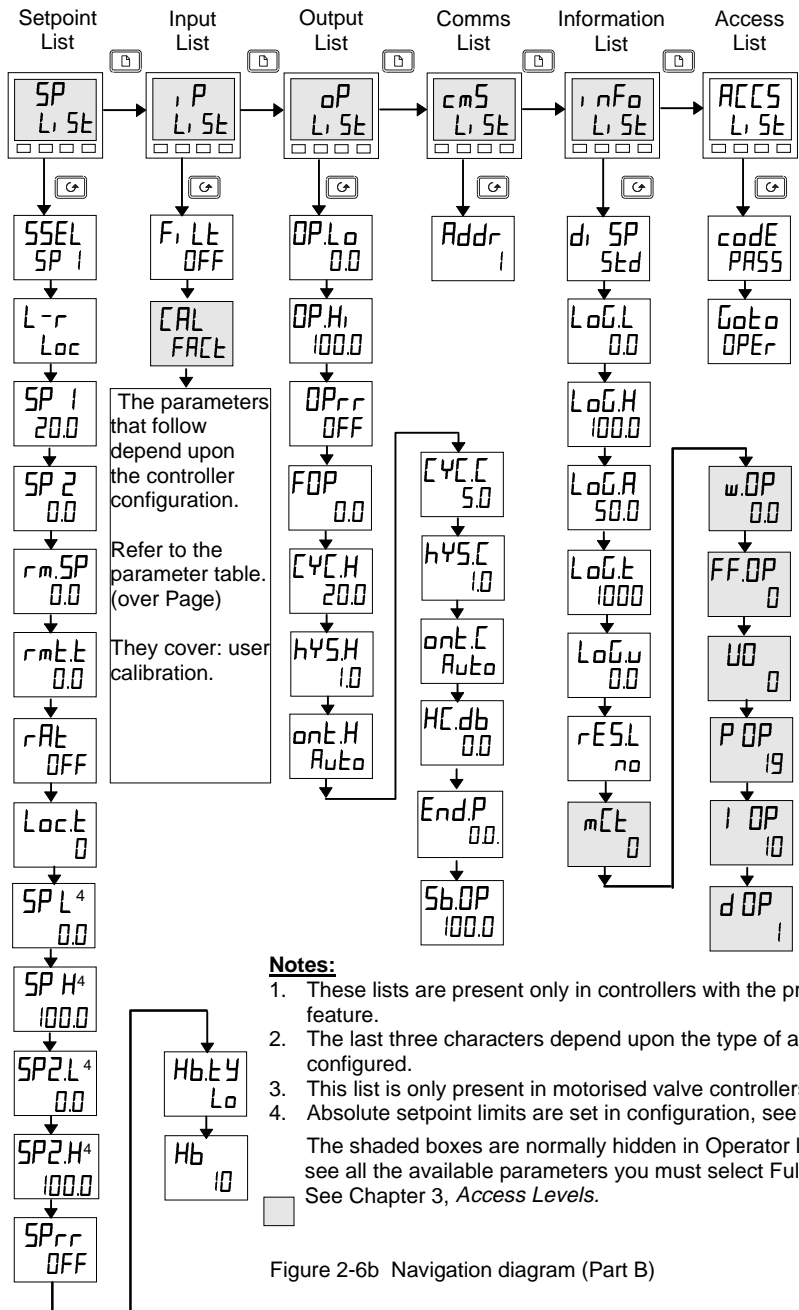


Figure 2-6b Navigation diagram (Part B)

PARAMETER TABLES

Name	Description
	Home list <i>Extra parameters may be present if promote feature has been used.</i>
Home	Measured value and Setpoint
OP	% Output level
SP	Target setpoint (if in Manual mode)
m-A	Auto-man select
AmPS	Heater current (With PDSIO mode 2)
Cid	Customer defined identification number

run	Program run list – <i>Present only in setpoint programming controllers</i>
PrG	Active program number (Only on 4 program versions)
Stat	Program status (OFF, run, hold, HbAc, End)
PSp	Programmer setpoint
CYC	Number of cycles remaining in the program
SEG	Active segment number
SEYP	Active segment type
SEEt	Segment time remaining in the segment units
TEt	Target setpoint
rRtE	Ramp rate (if a rate segment)
PrGt	Program time remaining in hours
FRSt	Fast run through program (no / YES)
out.n	Event output states (OFF / on) (not 8-segment programmer)
SYnc	Not operational in 2416. Set to no.
SEGd	* Flash active segment type in the lower readout of the home display (no / YES)

PrdG	Program edit list – <i>Present only in setpoint programming controllers</i>
PrGn	Select program number (Only on 4 program versions)
Hb	Holdback type (OFF, Lo, Hi, or bAnd)
HbU	Holdback value (in display units)
rmpU	Ramp units (SEc, mi n, or Hour) [for both rmpR and rmpT type segments]
dwLU	Dwell units (SEc, mi n, or Hour)
CYCn	Number of program cycles (1 to 999, or 'cont')
SEEn	Segment number
TYPE	Segment type: (End) (rmpR=ramp rate) (rmpT=ramp time) (dwEl) (SEEP) (cALL)

* This parameter can only be changed when the program is in reset

Continued on next page:

Continued from previous page:

The following parameters depend on the TYPE selected, as shown below.

	End	rmpR	rmpL	dwELL	SEEP	cALL	
Hb		✓	✓	✓	✓		Holdback type: OFF, Lo Hi or bAnd
EGt		✓	✓		✓		Target setpoint for a 'rmpR' or 'SEEP' segment
rRtE		✓					Ramp rate for a 'rmpR' segment
dur			✓	✓			'dwELL' time / time to target for a 'rmpL' segment
PrGn						✓	cALLED Program number
cYcn						✓	No. of cycles of cALLED program
outn	✓	✓	✓	✓	✓		Event output: OFF/on (not 8-segment programmer)
SYnc		✓	✓	✓	✓		Not operational in 2416. Set to no.
End.t	✓						End of prog – dwELL, SEEP, S OP

Name	Description
------	-------------

Alarm list	
1 - - -	Alarm 1 setpoint value
2 - - -	Alarm 2 setpoint value
3 - - -	Alarm 3 setpoint value
4 - - -	Alarm 4 setpoint value
<p><i>In place of dashes, the last three characters indicate the alarm type as follows:</i></p> <p><i>Note: It is possible to indicate only up to four alarm conditions (known as soft alarms). They can be "wired" to operate relays within the limitations of the number of output modules available. For more information see Configuration - Chapter 6.</i></p>	

Name	Description
------	-------------

-FSL	PV Full scale low alarm
-FSH	PV Full scale high alarm
-dEu	PV Deviation band alarm
-dHi	PV Deviation high alarm
-dLo	PV Deviation low alarm
-LCr	Load Current low alarm
-HCr	Load Current high alarm
-FL2	Not available in 2416
-FH2	Not available in 2416
-LOP	Working Output low alarm
-HOP	Working Output high alarm
-LSP	Working Setpoint low alarm
-HSP	Working Setpoint high alarm
4rRt	Rate of change alarm (AL 4 only)
HY 1	Alarm 1 Hysteresis (display units)
HY 2	Alarm 2 Hysteresis (display units)
HY 3	Alarm 3 Hysteresis (display units)
HY 4	Alarm 4 Hysteresis (display units)
Lb t	Loop Break Time in minutes
di AG	Enable Diagnostic alarms 'no' / 'YES'

Name	Description
Autun	Autotune list
EunE	One-shot autotune enable
drA	Adaptive tune enable
drA.t	Adaptive tune trigger level in display units. Range = 1 to 9999
Adc	Automatic Droop Compensation (PD control only)

Name	Description
mlr	Motor list - see Table 4-3
tm	Valve travel time in seconds
int	Valve inertia time in secs
bA.t	Valve backlash time in secs
mP.t	Minimum ON time of output pulse
U.br	Not available in 2416

P, d	PID list
G.SP	If Gain Scheduling has been enabled (see Chapter 4), this parameter sets the PV below which 'P, d, 1' is active and above which 'P, d, 2' is active.
SEt	'P, d, 1' or 'P, d, 2' selected
Pb	Proportional Band (SEt 1) (in display units)
t_i	Integral Time in secs (SEt 1)
t_d	Derivative Time in secs (SEt 1)
rES	Manual Reset (%) (SEt 1)
Hcb	Cutback High (SEt 1)
Lcb	Cutback Low (SEt 1)
rEL	Relative Cool Gain (SEt 1)
Pb2	Proportional Band (SEt 2)
t_i 2	Integral Time in secs (SEt 2)
t_d 2	Derivative Time in secs (SEt 2)
rES2	Manual Reset (%) (SEt 2)
Hcb2	Cutback High (SEt 2)
Lcb2	Cutback Low (SEt 2)
rEL2	Relative Cool Gain (SEt 2)
<i>The following three parameters are used for cascade control. If this facility is not being used, then they can be ignored.</i>	
FFPb	SP, or PV, feedforward propband
FFtr	Feedforward trim %
FFdu	PID feedforward limits ± %

SP	Setpoint list	
SEEL	Select SP 1 to SP 16, depending on configuration	
L-r	Local (Loc) or remote (rmt) setpoint select	
SP 1	Setpoint one value	
SP 2	Setpoint two value	
rmt.SP	Remote setpoint value	
rmt.t	Remote setpoint trim	
rA.t	Ratio setpoint	
Loc.t	Local setpoint trim	
SP L	Setpoint 1 low limit	
SP H	Setpoint 1 high limit	
SP2.L	Setpoint 2 low limit	
SP2.H	Setpoint 2 high limit	
Loc.L	Local trim low	These parameters only appear if PDSIO is fitted and Loc.t (remote setpoint + local trim) in SP Config list is selected
Loc.H	Local trim high	
SPrr	Setpoint Rate Limit	
Hb.tY	Holdback Type for setpoint rate limit (OFF, Lo, Hi, or bAnd)	
Hb	Holdback Value for setpoint rate limit in display units. (Hb.tY ≠ OFF)	

Name	Description
------	-------------

IP	Input list
FILT	IP filter time constant (0.0 - 999.9 seconds).
Emis	Emmissivity - when the input is configured for a pyrometer
<i>The next 3 parameters appear only if User Calibration has been enabled. (Refer to Chapter 7.) By default they are hidden when in Operator level. To prevent unauthorised adjustment, we recommend that they are only made available in FULL access level.</i>	
CAL	'FACT' - reinstates the factory calibration and disables User calibration. Next 2 parameters will not appear. 'USER' - reinstates any previously set User calibration. All parameters below now appear.
CALS	Selected calibration point – 'none', 'PIL', 'PIH'
Adj *	User calibration adjust, if CALS = 'PIL', 'PIH'
DFS.1	IP calibration offset
mV.1	IP measured value (at terminals)
CJC.1	IP Cold Junction Compensation
L.1	IP Linearised Value
PVSL	PV Select. Not operational in 2416

** Do not make adjustments using the Adj parameter unless you wish to change the controller calibration.*

Name	Description
------	-------------

OP	Output list
<i>Does not appear if Motorised Valve control configured.</i>	
OPLo	Low power limit (%)
OPHi	High power limit (%)
OPRr	Output Rate Limit (% per sec)
FOP	Forced output level (%)
CYCH	Heat cycle time (0.2S to 999.9S)
HYSH	Heat hysteresis (display units)
onEH	Heat output min. on-time (secs) Auto (0.05S), or 0.1 - 999.9S
CYCL	Cool cycle time (0.2S to 999.9S)
HYSL	Cool hysteresis (display units)
onEL	Cool output min. on-time (secs) Auto (0.05S), or 0.1 - 999.9S
HCdb	Heat/cool deadband (display units)
EndP	Power level in programmer in end segment. This is a single parameter for all programs
SbOP	Sensor Break Output Power (%)

Name	Description
------	-------------

Comms list	
Addr	Communications Address

Information list	
di SP	Configure lower readout of Home display to: none, Std, Lcur, OP, SEtE, PrGt
LoG.L	PV minimum
LoG.H	PV maximum
LoG.A	PV mean value
LoG.t	Time PV above Threshold level
LoG.u	PV Threshold for Timer Log
rES.L	Logging Reset - 'YES/no'
<i>The following set of parameters is for diagnostic purposes.</i>	
mCt	Processor utilisation factor
wOP	Working output
FF.OP	Feedforward component of output
UO	PID output to motorised valve
P OP	Proportional component of output
I OP	Integral component of output
d OP	Derivative component of output



Access List	
codE	Access password
Goto	Goto level - OPEr, FuLL, Edi t or conF
ConF	Configuration password

ALARMS

Alarm annunciation

Alarms are flashed as messages in the Home display. A new alarm is displayed as a double flash followed by a pause, old (acknowledged) alarms as a single flash followed by a pause. If there is more than one alarm condition, the display cycles through all the relevant alarm messages. Table 2-1 and Table 2-2 list all of the possible alarm messages and their meanings.

Alarm acknowledgement and resetting

Pressing both  and  at the same time will acknowledge any new alarms and reset any latched alarms.

Alarm modes

Alarms will have been set up to operate in one of several modes, either:

- **Non-latching**, which means that the alarm will reset automatically when the Process Value is no longer in the alarm condition.
- **Latching**, which means that the alarm message will continue to flash even if the alarm condition no longer exists and will only clear when reset.
- **Blocking**, which means that the alarm will only become active after it has first entered a safe state on power-up.

Alarm types

There are two types of alarm: **Process alarms** and **Diagnostic alarms**.

Process alarms

These warn that there is a problem with the process which the controller is trying to control.

Alarm Display	What it means
<u>F</u> SL*	PV Full Scale Low alarm
<u>F</u> SH*	PV Full Scale High alarm
<u>d</u> Eu*	PV Deviation Band alarm
<u>d</u> Hi *	PV Deviation High alarm
<u>d</u> Lo*	PV Deviation Low alarm
<u>L</u> Cr*	Load Current Low alarm
<u>H</u> Cr*	Load Current High alarm

Alarm Display	What it means
<u>F</u> L2*	<i>Not available in 2416</i>
<u>F</u> H2*	<i>Not available in 2416</i>
<u>L</u> OP*	Working Output Low alarm
<u>H</u> OP*	Working Output High alarm
<u>L</u> SP*	Working Setpoint Low alarm
<u>H</u> SP*	Working Setpoint High alarm
<u>4</u> rRt	PV Rate of change alarm <i>Always assigned to Alarm 4</i>

* In place of the dash, the first character will indicate the alarm number.

Table 2-1 Process alarms

Diagnostic alarms

These indicate that a fault exists in either the controller or the connected devices.

Display shows	What it means	What to do about it
EEEr	<i>Electrically Erasable Memory Error:</i> The value of an operator, or configuration, parameter has been corrupted.	This fault will automatically take you into Configuration level. Check all of the configuration parameters before returning to Operator level. Once in Operator level, check all of the operator parameters before resuming normal operation. If the fault persists, or occurs frequently, contact Eurotherm Controls.
Sbr	<i>Sensor Break:</i> Input sensor is unreliable or the input signal is out of range.	Check that the sensor is correctly connected.
Lbr	<i>Loop Break</i> The feedback loop is open circuit.	Check that the heating and cooling circuits are working properly.
LdF	<i>Load failure</i> Indication that there is a fault in the heating circuit or the solid state relay.	This is an alarm generated by feedback from a Eurotherm TE10S solid state relay (SSR) operating in PDSIO mode 1 - see Chapter 1, <i>Electrical Installation</i> . It indicates either an open or short circuit SSR, blown fuse, missing supply or open circuit heater.
SSrF	<i>Solid state relay failure</i> Indication that there is a fault in the solid state relay.	This is an alarm generated by feedback from a Eurotherm TE10S solid state relay (SSR) operating in PDSIO mode 2 - see Chapter 1, <i>Electrical Installation</i> . It indicates either an open or short circuit condition in the SSR.
HtrF	<i>Heater failure</i> Indication that there is a fault in heating circuit.	This is an alarm generated by feedback from a Eurotherm TE10S solid state relay (SSR) operating in PDSIO mode 2 - see Chapter 1, <i>Electrical Installation</i> . It indicates either a blown fuse, missing supply, or open circuit heater.
HwEr	<i>Hardware error</i> Indication that a module is of the wrong type, missing, or faulty.	Check that the correct modules are fitted.
no. o	<i>No I/O</i> None of the expected I/O modules are fitted.	This error message normally occurs when pre-configuring a controller without installing any of the required I/O modules.

Table 2-2a Diagnostic alarms - *continued on the next page*

Diagnostic alarms (continued)

These indicate that a fault exists in either the controller, or the connected devices.

Display shows	What it means	What to do about it
<i>r m t F</i>	<i>Remote input failure.</i> Either the PDSIO input, or the remote DC input, is open or short circuit	Check for open, or short circuit wiring on the PDSIO, or remote DC, input.
<i>LLLL</i>	<i>Out of range low reading</i>	Check the value of the input.
<i>HHHH</i>	<i>Out of range high reading</i>	Check the value of the input.
<i>Err 1</i>	<i>Error 1: ROM self-test fail</i>	Return the controller for repair.
<i>Err 2</i>	<i>Error 2: RAM self-test fail</i>	Return the controller for repair.
<i>Err 3</i>	<i>Error 3: Watchdog fail</i>	Return the controller for repair.
<i>Err 4</i>	<i>Error 4: Keyboard failure</i> Stuck button, or a button was pressed during power up.	Switch the power off and then on, without touching any of the controller buttons.
<i>Err 5</i>	<i>Error 5: Faulty internal communications.</i>	Check printed circuit board interconnections. If the fault cannot be cleared, return the controller for repair.
<i>Err 6</i>	Fault in 'Digital Filter Chip'	Check connections to the cross board. This is the PCB that the plug in modules are connected to.
<i>Pbr</i>	<i>Pot break</i>	Check connections on VP feedback potentiometer
<i>no. o</i>	Missing input/output hardware	Check the correct modules are fitted
<i>tUEr</i>	Tune Error If any one stage of the tuning process exceeds 2 hours the tune error alarm appears	Check response time of process: check that the sensor has not failed: check that the loop is not broken. Acknowledge by pressing 'page' key and 'scroll' key together

Table 2-2b Diagnostic alarms

Chapter 3 ACCESS LEVELS

This chapter describes the different levels of access to the operating parameters within the controller.

There are three topics:

- THE DIFFERENT ACCESS LEVELS
- SELECTING AN ACCESS LEVEL
- EDIT LEVEL

THE DIFFERENT ACCESS LEVELS

There are four access levels:

- **Operator level**, which you will normally use to operate the controller.
- **Full level**, which is used to commission the controller and the process being controlled.
- **Edit level**, which is used to set up the parameters that you want an operator to be able to see and adjust when in Operator level.
- **Configuration level**, which is used to set up the fundamental characteristics of the controller.



Access level	Display shows	What you can do	Password Protection
Operator	<i>OPER</i>	In this level, operators can view and adjust the value of parameters defined in Edit level (see below).	No
Full	<i>FULL</i>	In this level, all the parameters relevant to a particular configuration are visible. All alterable parameters may be adjusted.	Yes
Edit	<i>EDIT</i>	In this level, you can determine which parameters an operator is able to view and adjust in Operator level. You can hide, or reveal, complete lists, individual parameters within each list and you can make parameters read-only or alterable. (See <i>Edit level</i> at the end of this chapter).	Yes
Configuration	<i>CONF</i>	This special level allows access to set up the fundamental characteristics of the controller.	Yes

Figure 3-1 Access levels


SELECTING AN ACCESS LEVEL


Access to Full, Edit or Configuration levels is protected by a password to prevent unauthorised access.

If you need to change the password, see Chapter 6, *Configuration*.

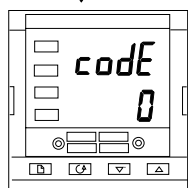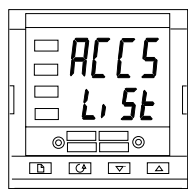



Access list header

Press  until you reach the access list header 'ACCESS'.

Press .


Password entry


The password is entered from the 'code' display.

Enter the password using  or . Once the correct password has been entered, there is a two second delay after which the lower readout will change to show 'PASS' indicating that access is now unlocked.





The pass number is set to '1' when the controller is shipped from the factory.


Note; A special case exists if the password has been set to '0'. In this case access will be permanently unlocked and the lower readout will always show 'PASS'.

Press  to proceed to the 'Go to' page.

(If an *incorrect* password has been entered and the controller is still 'locked' then pressing  returns you to the 'ACCESS' list header.)

Access to Read-only Configuration

From this display, pressing  and  together will take you into Read-Only Configuration without entering a password. This will allow you to view all of the configuration parameters, but not adjust them. If no button is pressed for ten seconds, you will be returned to the Home display. Alternatively, pressing  and  together takes you immediately back to the Home display.

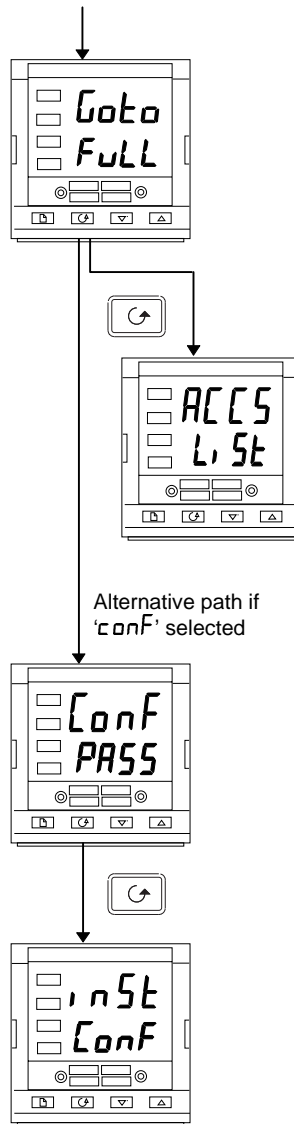

Level selection

The 'Goto' display allows you to select the required access level.

Use and to select from the following display codes:

- `OPER`: Operator level
- `FULL`: Full level
- `Edi t`: Edit level
- `conf`: Configuration level

Press

If you selected either 'OPER', 'FULL' or 'Edi t' level you will be returned to the 'ACCESS' list header in the level that you chose. If you selected 'conf', you will get a display showing 'CONF' in the upper readout (see below).

Configuration password

When the 'CONF' display appears, you must enter the Configuration password in order to gain access to this level. Do this by repeating the password entry procedure described in the previous section.

The configuration password is set to '2' when the controller is shipped from the factory. If you need to change the configuration password, see Chapter 6, *Configuration*.

Press

Configuration level

The first display of configuration is shown. See Chapter 6, *Configuration*, for details of the configuration parameters.

For instructions on leaving configuration level, see Chapter 6, *Configuration*.

Returning to Operator Level

To return to operator level from either 'FULL' or 'Edi t' level, repeat entry of the password and select 'OPER' on the 'Goto' display.

In 'Edi t' level, the controller will automatically return to operator level if no button is pressed for 45 seconds.

EDIT LEVEL

Edit level is used to set which parameters you can view and adjust in Operator level. It also gives access to the ‘Promote’ feature, which allows you to select and add (‘Promote’) up to twelve parameters into the Home display list, thereby giving simple access to commonly used parameters.

Setting operator access to a parameter

First you must select **Edi t** level, as shown on the previous page.

Once in **Edi t** level, you select a list, or a parameter within a list, in the same way as you would in Operator, or Full, level – that is to say, you move from list header to list header by pressing **[B]**, and from parameter to parameter within each list using **[C]**.


However, in Edit level what is displayed is not the value of a selected parameter, but a code representing that parameter’s availability in Operator level.

When you have selected the required parameter, use **[▲]** and **[▼]** buttons to set its availability in Operator level.

There are four codes:

- ALt r** Makes a parameter alterable in Operator level.
- Pr 0** Promotes a parameter into the Home display list.
- rEAd** Makes a parameter, or list header, read-only (*it can be viewed but not altered*).
- Hi dE** Hides a parameter, or list header.

For example:

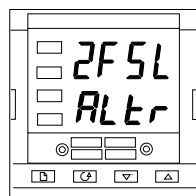

The parameter selected is Alarm 2, Full Scale Low

It is alterable in Operator level

Hiding or revealing a complete list

To hide a complete list of parameters, all you have to do is hide the list header. If a list header is selected, only two selections are available: **rEAd** and **Hi dE**.

(It is not possible to hide the ‘**ALCS**’ list, which always displays the code: ‘**L, St**’.)

Promoting a parameter

Scroll through the lists to the required parameter and choose the ‘**Pr 0**’ code. The parameter is then automatically added (promoted) into the Home display list. (The parameter will also be accessible, as normal, from the standard lists.) A maximum of twelve parameters can be promoted. Promoted parameters are automatically ‘alterable’.

Please note, in the ‘**Pr 0 L, St**’, the parameters from segment number (**SEG.n**) onwards *cannot* be promoted.

Chapter 4 TUNING

Before tuning please read Chapter 2, *Operation*, to learn how to select and change a parameter.

This chapter has five main topics:

- WHAT IS TUNING?
- AUTOMATIC TUNING
- MANUAL TUNING
- COMMISSIONING OF MOTORISED VALVE CONTROLLERS
- GAIN SCHEDULING

WHAT IS TUNING?

In tuning, you match the characteristics of the controller to that of the process being controlled in order to obtain good control. Good control means:

- Stable 'straight-line' control of the temperature at setpoint without fluctuation
- No overshoot, or undershoot, of the temperature setpoint
- Quick response to deviations from the setpoint caused by external disturbances, thereby restoring the temperature rapidly to the setpoint value.

Tuning involves calculating and setting the value of the parameters listed in Table 4-1. These parameters appear in the '*P, d*' list.

Parameter	Code	Meaning or Function
Proportional band	P_b	The bandwidth, in display units, over which the output power is proportioned between minimum and maximum.
Integral time	t_i	Determines the time taken by the controller to remove steady-state error signals.
Derivative time	t_d	Determines how strongly the controller will react to the rate-of-change of the measured value.
High Cutback	H_{cb}	The number of display units, above setpoint, at which the controller will increase the output power, in order to prevent undershoot on cool down.
Low cutback	L_{cb}	The number of display units, below setpoint, at which the controller will cutback the output power, in order to prevent overshoot on heat up.
Relative cool gain	r_{EL}	Only present if cooling has been configured and a module is fitted. Sets the cooling proportional band, which equals the P_b value divided by the r_{EL} value.

Table 4-1 Tuning parameters

AUTOMATIC TUNING

Two automatic tuning procedures are provided in the 2416:

- **A one-shot tuner** which automatically sets up the initial values of the parameters listed in Table 4-1 on the previous page.
- **Adaptive tuning** which continuously monitors the error from setpoint and modifies the PID values if necessary.

The 'one-shot' tuner works by switching the output on and off to induce an oscillation in the measured value. From the amplitude and period of the oscillation, it calculates the tuning parameter values.

If the process cannot tolerate full heating or cooling being applied during tuning, then the level of heating or cooling can be restricted by setting the heating and cooling power limits in the 'OP' list. However, the measured value *must* oscillate to some degree for the tuner to be able to calculate values.

A One-shot Tune can be performed at any time, but normally it is performed only once during the initial commissioning of the process. However, if the process under control subsequently becomes unstable (because its characteristics have changed), you can re-tune again for the new conditions.


It is best to start tuning with the process at ambient temperature. This allows the tuner to calculate more accurately the low cutback and high cutback values which restrict the amount of overshoot, or undershoot.

How to tune

1. Set the setpoint to the value at which you will normally operate the process.
2. In the 'MENU' list, select 'TUNE' and set it to 'ON'.
3. Press the Page and Scroll buttons together to return to the Home display. The display will flash 'TUNE' to indicate that tuning is in progress.
4. The controller induces an oscillation in the temperature by first turning the heating on, and then off. The first cycle is not complete until the measured value has reached the required setpoint.
5. After two cycles of oscillation the tuning is completed and the tuner switches itself off.
6. The controller then calculates the tuning parameters listed in Table 4-1 and resumes normal control action.

If you want 'Proportional only', 'PD', or 'PI' control, you should set the 'P', 'd' or 'd' parameters to OFF before commencing the tuning cycle. The tuner will leave them off and will not calculate a value for them.

Typical automatic tuning cycle

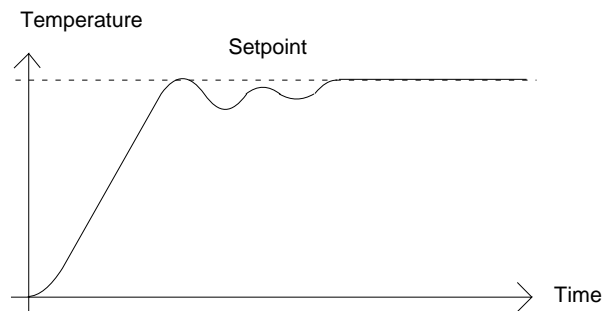

Calculation of the cutback values

Low cutback and *High cutback* are values that restrict the amount of overshoot or undershoot that occurs during large step changes in temperature (for example, under start-up conditions). If either low cutback, or high cutback, is set to 'Auto' the values are fixed at three times the proportional band, and are not changed during automatic tuning.

Adaptive tune

Adaptive tuning is a background algorithm, which continuously monitors the error from setpoint and analyses the control response during process disturbances. If the algorithm recognises an oscillatory, or under-damped, response it recalculates the PB , t_i and t_d values.

Adaptive tune is triggered whenever the error from setpoint exceeds a trigger level. This trigger level is set in the parameter 'dRAE', which is found in the Autotune list. The value is in display units. It is automatically set by the controller, but can also be manually re-adjusted.

Adaptive tune should be used with:

1. Processes whose characteristics change as a result of changes in the load, or setpoint.
2. Processes that cannot tolerate the oscillation induced by a One-shot tune.

Adaptive tune should not be used:

1. Where the process is subjected to regular external disturbances that could mislead the adaptive tuner.
2. On highly interactive multiloop applications. However, moderately interactive loops, such as multi-zone extruders, should not give a problem.

MANUAL TUNING

If for any reason automatic tuning gives unsatisfactory results, you can tune the controller manually. There are a number of standard methods for manual tuning. The one described here is the Ziegler-Nichols method.

With the process at its normal running temperature:

1. Set the Integral Time ' t_i ' and the Derivative Time ' t_d ' to **OFF**.
2. Set High Cutback and Low Cutback, ' Hcb ' and ' Lcb ', to '**Auto**'.
3. Ignore the fact that the temperature may not settle precisely at the setpoint.
4. If the temperature is stable, reduce the proportional band ' Pb ' so that the temperature just starts to oscillate. If the temperature is already oscillating, increase the proportional band until it just stops oscillating. Allow enough time between each adjustment for the loop to stabilise. Make a note of the proportional band value ' B ' and the period of oscillation ' T '.
5. Set the Pb , t_i and t_d parameter values according to the calculations given in Table 4-2.

Type of control	Proportional band ' Pb '	Integral time ' t_i '	Derivative time ' t_d '
Proportional only	2xB	OFF	OFF
P + I control	2.2xB	0.8xT	OFF
P + I + D control	1.7xB	0.5xT	0.12xT

Table 4-2 Tuning values

Setting the cutback values


The above procedure sets up the parameters for optimum steady state control. If unacceptable levels of overshoot or undershoot occur during start-up, or for large step changes in temperature, then manually set the cutback parameters ' L_{cb} ' and ' H_{cb} '.

Proceed as follows:


1. Set the low and high cutback values to three proportional bandwidths (that is to say, $L_{cb} = H_{cb} = 3 \times P_b$).
2. Note the level of overshoot, or undershoot, that occurs for large temperature changes (see the diagrams below).

In example (a) increase ' L_{cb} ' by the overshoot value. In example (b) reduce ' L_{cb} ' by the undershoot value.

Example (a)

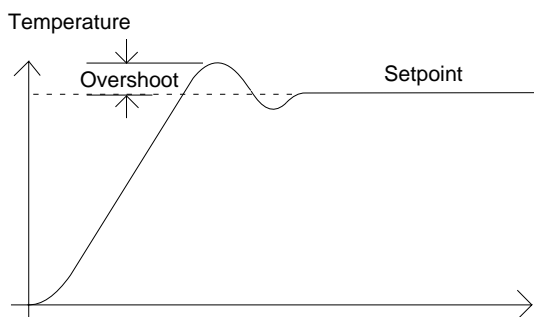

Example (b)

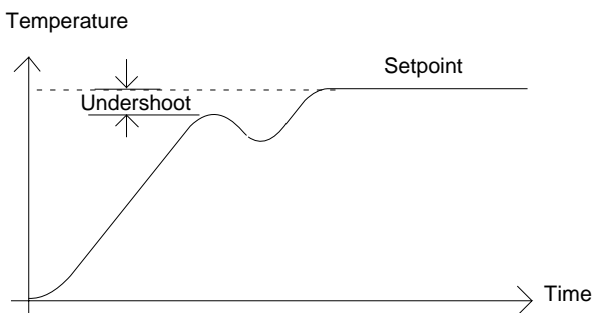

Where the temperature approaches setpoint from above, you can set ' H_{cb} ' in a similar manner.

Integral action and manual reset

In a full three-term controller (that is, a PID controller), the integral term ' I ' automatically removes steady state errors from the setpoint. If the controller is set up to work in two-term mode (that is, PD mode), the integral term will be set to ' OFF '. Under these conditions the measured value may not settle precisely at setpoint. When the integral term is set to ' OFF ' the parameter *manual reset* (code ' rES ') appears in the ' P, D, I, S, E ' in ' $FULL$ ' level. This parameter represents the value of the power output that will be delivered when the error is zero. You must set this value manually in order to remove the steady state error.

Automatic droop compensation (Adc)

The steady state error from the setpoint, which occurs when the integral term is set to ' OFF ', is sometimes referred to as 'droop'. ' Adc ' automatically calculates the manual reset value in order to remove this droop. To use this facility, you must first allow the temperature to stabilise. Then, in the autotune parameter list, you must set ' Adc ' to $CALC$. The controller will then calculate a new value for manual reset, and switch ' Adc ' to ' MAN '.

' Adc ' can be repeated as often as you require, but between each adjustment you must allow time for the temperature to stabilise.

Tune Error

If any one stage of the automatic tuning process is not completed within two hours a diagnostic alarm will occur. The display shows $TUNE$ - Tune Error.

This alarm could occur if:

1. The process to be tuned has a very slow response time
2. The sensor has failed or is incorrectly aligned
3. The loop is broken or not responding correctly

MOTORISED VALVE CONTROL

The 2416 can be configured for motorised valve control as an alternative to the standard PID control algorithm. This algorithm is designed specifically for positioning motorised valves. These are ordered, pre-configured, as Model numbers:

- 2416/VC motorised valve controllers
- 2416/VP motorised valve controllers with a single setpoint programmer
- 2416/V4 motorised valve controllers storing four setpoint programs.

Figure 1-8 in Chapter 1 shows how to connect a motorised valve controller. The control is performed by delivering open, or close, pulses in response to the control demand signal.

The motorised valve algorithm operates in the so-called *boundless* mode, which does not require a position feedback potentiometer for control purposes.

The desired control mode is selected in the 'i nSt' list in configuration level.

The following parameter list will appear in the navigation diagram shown in Chapter 2, if your controller is configured for motorised valve control.

Name	Description	Values		
mtr	Motor list	Min	Max	Default
t_m	Valve travel time in seconds. This is the time taken for the valve to travel from its fully closed position to its fully open position.	0.1	240.0	30.0
i n.t	Valve inertia time in seconds. This is the time taken for the valve to stop moving after the output pulse is switched off.	OFF	20.0	OFF
bA.c.t	Valve backlash time in seconds. This is the minimum on-time required to reverse the direction of the valve. i.e. the time to overcome the mechanical backlash.	OFF	20.0	OFF
mP.t	Output pulse minimum on-time, in seconds.	Auto	100.0	Auto
U.br	Valve sensor break strategy.	rEST, uP, dwn		rEST

Table 4-3 Motorised valve parameter list

COMMISSIONING THE MOTORISED VALVE CONTROLLER

The commissioning procedure for bounded control mode is as follows:

1. Measure the time taken for the valve to be raised from its fully closed to its fully open position and enter this as the value in seconds into the '**t_m**' parameter.
2. Set all the other parameters to the default values shown in Table 4-3.

The controller can then be tuned using any of the automatic, or manual, tuning procedures described earlier in this chapter. As before, the tuning process, either automatic or manual, involves setting the values of the parameters in Table 4-1.

Adjusting the minimum on-time '**mP.t**'

The default value of 0.2 seconds is satisfactory for most processes. If, however, after tuning the process, the valve activity is excessively high, with constant oscillation between raise and lower pulses, the minimum on-time can be increased.

The minimum on-time determines how accurately the valve can be positioned and therefore the control accuracy. The shorter the time, the more precise the control. However, if the time is set too short, process noise will cause an excessively busy valve.

Inertia and backlash settings

The default values are satisfactory for most processes, i.e. '**OFF**'.

Inertia is the time taken for the valve to stop after the output pulse is turned off. If this causes a control problem, the inertia time needs to be determined and then entered into the parameter, '**i n.t**'. The inertia time is subtracted from the raise and lower output pulse times, so that the valve moves the correct distance for each pulse.

Backlash is the output pulse time required to reverse the direction of the valve, i.e. the time taken to overcome the mechanical backlash of the linkages. If the backlash is sufficient to cause a control problem, then the backlash time needs to be determined and then entered into the parameter, '**bA.c.t**'.


The above two values are not part of the automatic tuning procedure and must be entered manually.

GAIN SCHEDULING

Gain scheduling is the automatic transfer of control between one set of PID values and another. In the case of the 2416 controller, this is done at a presettable process value. It is used for the more difficult to control processes which exhibit large changes in their response time or sensitivity at, for example, high and low temperatures, or when heating or cooling.


The 2416 has two sets of PID values. You can select the active set from either a parameter in the PID list, or you can transfer automatically in gain scheduling mode. The transfer is bumpless and will not disturb the process being controlled.

To use gain scheduling, follow the steps below:

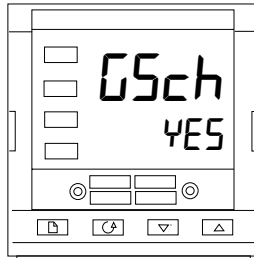

Step 1: Enable in configuration level

Gain scheduling must first be enabled in Configuration level. Goto the *INSE CONF* list, select the parameter *G.Sch*, and set it to *YES*.

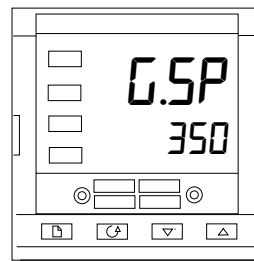

Step 2: Set the transfer point

Once gain scheduling has been enabled, the parameter *G.SP* will appear at the top of the *PID* list in *FULL* access level. This sets the value at which transfer occurs. *PID1* will be active when the process value is below this setting and *PID2* when the process value is above it. The best point of transfer depends on the characteristics of the process. Set a value between the control regions that exhibit the greatest change.

Step 3: Tuning

You must now set up the two sets of PID values. The values can be manually set, or automatically tuned as described earlier in this chapter. When tuning automatically you must tune twice, once above the switching point *G.SP* and again below the switching point. When tuning, if the process value is below the transfer point *G.SP* the calculated values will automatically be inserted into *PID1* set and if the process value is above *G.SP*, the calculated values will automatically be inserted into *PID2* set.

Chapter 5 PROGRAMMER OPERATION

This chapter deals with the setpoint programming option. All 2416 instruments have a basic 8-segment programmer built-in as standard. This facility must be enabled by the user, as explained in the section, *Configuring the Programmer*.

Other programmer versions are listed below, and have 16-segments in each program.

Standard controller with:

a single program:	Model 2416/CP.
four stored programs:	Model 2416/P4.

Motorised valve controller with:

a single program:	Model 2416/VP.
four stored programs:	Model 2416/V4.

The 8-segment programmer differs from the other programmers in that it will not provide event outputs. Otherwise they all operate in the same way.

There are seven topics:

- WHAT IS SETPOINT PROGRAMMING?
- PROGRAMMER STATES
- RUNNING A PROGRAM FROM THE RUN LIST
- RUNNING A PROGRAM USING THE RUN/HOLD BUTTON
- AUTOMATIC BEHAVIOUR
- CONFIGURING THE PROGRAMMER
- CREATING A NEW PROGRAM, OR MODIFYING AN EXISTING PROGRAM.

To understand how to select and change parameters in this chapter you will need to have read Chapter 2, *Operation* and Chapter 3, *Access Levels*.

WHAT IS SETPOINT PROGRAMMING?

Many applications need to vary temperature, or process value, with time. Such applications need a controller which varies a setpoint as a function of time. All 2416 programmer models will do this.

The setpoint is varied by using a *setpoint program*. Within each 2416 controller there is a software module, called *the programmer*, which stores one, or more, such programs and drives the setpoint according to the selected program. The program is stored as a series of 'ramp' and 'dwell' segments, as shown below.

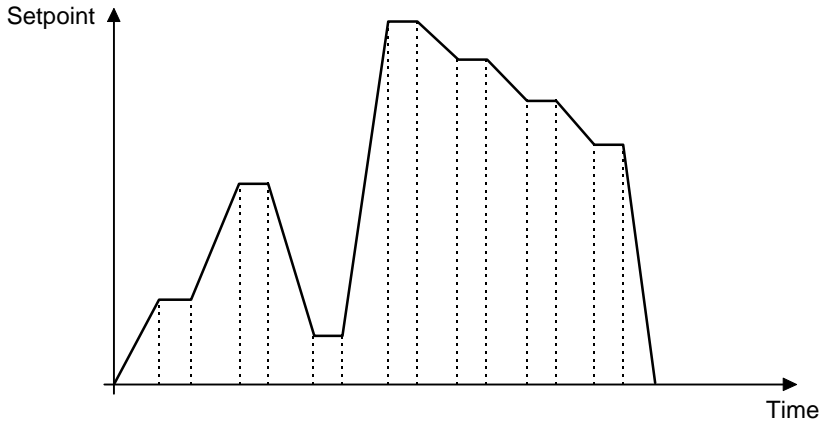


Fig 5-1 Setpoint profile

(If the 8-segment programmer is being used, then the information in the next paragraph does **not** apply.)

In each segment you can define the state of up to two outputs, each of which can be used to trigger external events. These are called *event outputs* and can drive either relay, logic, or triac outputs, depending on the modules installed.

A program is executed either, once, repeated a set number of times, or repeated continuously. If repeated a set number of times, then the number of cycles must be specified as part of the program.

There are five different types of segment:

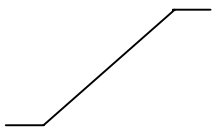




Ramp		<p>The setpoint ramps linearly, from its current value to a new value, either at a set rate (called <i>ramp-rate programming</i>), or in a set time (called <i>time-to-target programming</i>). You must specify the ramp rate, or the ramp time, and the target setpoint, when creating or modifying a program.</p>
Dwell		<p>The setpoint remains constant for a specified period.</p>
Step		<p>The setpoint steps instantaneously from its current value to a new value.</p>
Call		<p>The main program calls another program as a subroutine. The called program then drives the setpoint until it returns control to the main program. This facility is only available on those controllers capable of storing 4 programs.</p>
End		<p>A program either ends in this segment, or repeats. You specify which is the case when you create, or modify, a program (see the final topic in this chapter). When a program ends, the programmer is put into either, a continuous Dwell state with all outputs staying unchanged, or the Reset state.</p>

Table 5-1 Segment Types


PROGRAMMER STATES

Programs has five states:— *Reset, Run, Hold, Holdback* and *End*.

State	Description	Indication
Reset	In Reset, the programmer is inactive and the controller behaves as a standard controller, with the setpoint determined by the value set in the lower readout.	Both the RUN and HOLD lights will be off
Run	In Run, the programmer varies the setpoint according to the active program.	RUN light on
Hold	In Hold, the program is frozen at its current point. In this state you can make temporary changes to any program parameter (for example, a target setpoint, a dwell time, or the time remaining in the current segment). Such changes only remain effective until the program is reset and run again, when they are overwritten by the stored program values. Note: When a program is running, you <u>cannot</u> alter a CALLed program until it becomes active within that program.	HOLD light on
Holdback	Holdback indicates that the measured value is deviating from the setpoint by more than a pre-set amount and that the program is in Hold, waiting for the process to catch up. See <i>Holdback</i> in the section on Automatic behaviour later this Chapter.	HOLD light flashes
	A master controller can re-transmit a setpoint value to a number of slave units using PDSIO setpoint retransmission. Any of the slave units can generate a holdback signal which will also flash the HOLD light. Holdback will also occur if the PDSIO output is open circuit. This can be disabled in configuration by selecting the <i>PdS</i> output as <i>SP.nH</i> - 'setpoint retransmission without holdback'	HOLD light flashes
End	The program is complete.	RUN light flashes

Table 5-2 Program States

RUNNING A PROGRAM FROM THE RUN LIST

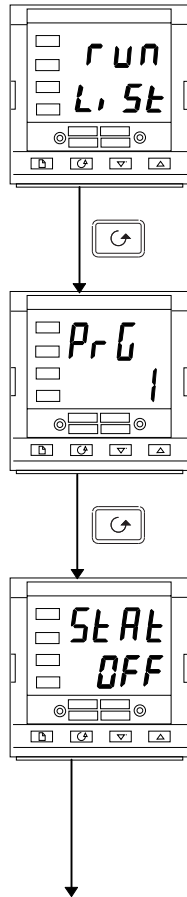

The Run List

From the Home display, press until you reach the 'run' list header.

Press

Program number

This display will only appear on controllers that can hold more than one program (Models 2416/P4 & 2416/V4). Use or to select the required program number, from 1 to 4.

Press

Status selection

Use or to select:

- **run** Run program.
- **hold** Hold program.
- **OFF** Program reset.

After two seconds, the lower readout blinks and the chosen state is now active.

To return to the Home display press and together.

Other parameters

To access the other parameters in the 'run' list, continue to press . These parameters are shown in the 'Program run list' in Chapter 2, Parameter Tables. They show the current status of the active program.


Temporary changes

Temporary changes can be made to the parameters in this 'run' list, (for example a setpoint, ramp rate, or an unelapsed time), by first placing the programmer into 'hold'. Such changes will remain active only for the duration of the segment; the segment parameters will revert to their original (stored) values whenever the segment is re-executed.

RUNNING A PROGRAM USING THE RUN/HOLD BUTTON

If you are using a four (4) program version of the controller, you must first select the number of the program that you want to run. . Do this in the 'r u n' list - see the previous topic, *Running a program from the Run list*.

Then:

	<p>RUN / HOLD button</p>	<p>Press once to run a program (RUN light on) Press again to hold a program (HOLD light on) Press again to cancel hold and continue running (HOLD light off, RUN light on) Press and hold in for two seconds to reset a program (RUN and HOLD lights off).</p>
---	------------------------------	--

Note: The RUN/HOLD button can be disabled, either when ordering the controller, or subsequently in configuration. This will force you to operate the program from the 'r u n' list all the time. The main advantage of this method is that it will reduce the chance of accidentally changing the state of a program.

AUTOMATIC BEHAVIOUR

The preceding topics explain how to operate the programmer manually.

The following topics cover aspects of its automatic behaviour: *Servo*, *Holdback* and *Power Failure*.

Servo

When a program is RUN, the setpoint can start either from the initial controller setpoint, or from the process value. Whichever it is, the starting point is called the 'servo' point and you set it up in configuration. When the program starts, the transition of the setpoint to its starting point is called 'servoing'.

The normal method is to servo to the process value, because this will produce a smooth and bumpless start to the program. However, if you want to guarantee the time period of the first segment, you should set the controller to servo to its setpoint.

Holdback

As the setpoint ramps up, or down (or dwells), the measured value may lag behind, or deviate from, the setpoint by an undesirable amount. 'Holdback' is available to freeze the program at its current state, should this occur. The action of Holdback is the same as a deviation alarm. It can be enabled, or disabled. Holdback has **two** parameters - a *value* and a *type*. If the error from the setpoint exceeds the set 'holdback' value, then the Holdback feature, if enabled, will automatically freeze the program at its current point and flash the HOLD light. When the error comes within the holdback value, the program will resume normal running.

There are *four* different Holdback types. The choice of type is made by setting a parameter when creating a program, and may be one of the following:--
'OFF' - **Disables Holdback** - therefore no action is taken.

- '**L**' – **Deviation Low Holdback** holds the program back when the process variable deviates *below* the setpoint by more than the holdback value.
- '**H**' – **Deviation High Holdback** holds the program back when the process variable deviates *above* the setpoint by more than the holdback value.
- '**band**' – **Deviation Band Holdback** is a combination of the two. It holds the program back when the process variable deviates *either above, or below*, the setpoint by more than the holdback value.

There is a single Holdback Value which applies to the whole program. However, the Holdback type and whether or not it is enabled, can be applied to the program as a whole, or individually in each segment.

Power failure

If power is lost and then restored, while a program is running, the behaviour of the programmer is determined by the setting of the parameter '**Pwr.F**' *Power fail strategy* in Programmer configuration. This can have one of three settings:– **cont** (Continue), **rmP.b** (Ramp from PV), or **rSEt** (Reset).

If 'cont' is selected, then when power is restored the program continues from where it was interrupted when power was lost. All parameters, such as the setpoint and time remaining in the active segment, will be restored to their power-down values. For applications that need to bring the measured process value to the setpoint as soon as possible, this is the best strategy.

If 'rmP.b' is selected, then when power is restored the setpoint starts at ('servos to') the current measured value, and then ramps to the target setpoint of the active segment at the last ramp rate used by the program. This strategy provides a smoother recovery. The two diagrams below illustrate the respective responses, Fig5-2 if power fails during a dwell segment and Fig5-3 if it fails during a ramp segment.

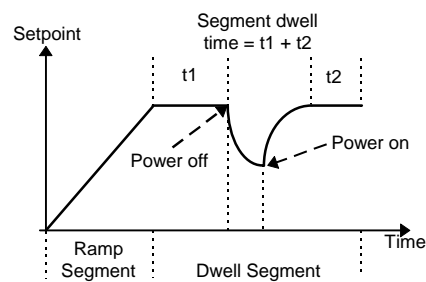


Figure 5-2 Continue after a power fail

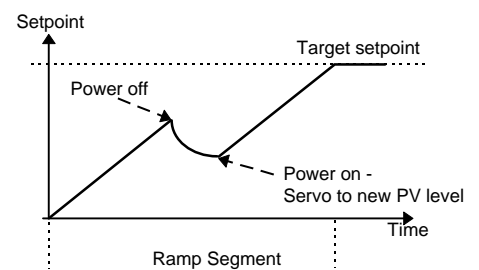


Figure 5-3 Ramp back after a power fail

If 'rSEt' is selected, then when power is restored the program terminates.


CONFIGURING THE PROGRAMMER

Configuration defines:

- the number of stored programs (not 8-segment programmer)
- the holdback strategy
- the power fail strategy
- the servo type
- if event outputs are available. (not 8-segment programmer)

When first installing a programmer, you should check that the configuration conforms to your requirement.


To check or change the configuration, select Configuration level. See Chapter 6.

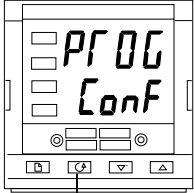

Programmer list header

After selecting Configuration mode, press until the **PFG** **CONF** header is displayed.

Press

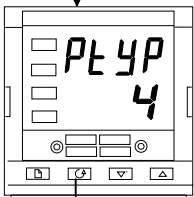

Number of programs

Use or to select:

- none: Disable built-in 8-segment programmer
- 1: Enable built-in 8-segment programmer

For 16-segment programmers:

- none: no programs
- 1: One stored program
- 4: Four stored programs

Press




Holdback Strategy

Use or to select:

- SEG: Holdback type to be set in each segment
- Prog: Holdback type to be set for the whole program

Press

Continued on the next page.

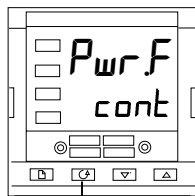


Power fail strategy

Use or to select:

- **cont**: Continue from last setpoint
- **rmp.b**: Ramp from PV to setpoint at last ramp rate
- **rSEt**: Reset the program

Press

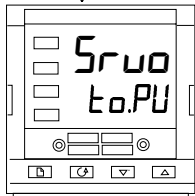


Servo type

Use or to select:

- **to.PU** Servo to PV
- **to.SP** Servo to SP

Press

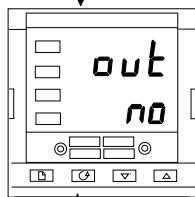


Event Outputs *(not in 8-segment programmer)*

Use or to select:

- **no**: Event outputs disabled
- **YES**: Event outputs enabled


Note: The term **SYnc** appears on 2416 but is not operational and should be set to **no**. It appears in order to maintain software consistency with 2408 and 2404 controllers.

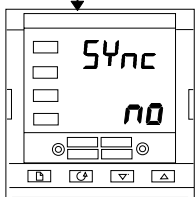

Press to return to the list header


CREATING A NEW PROGRAM OR MODIFYING AN EXISTING ONE

The only difference between creating a new program and modifying an existing one, is that a new program starts with all its segments set to 'End' in the 'TYPE' parameter. The procedure for both consists of setting up the parameters in the 'Prog' list of the Operation Navigation Diagram shown in Chapter 2. As explained earlier, under 'Programmer States', temporary changes can be made to these parameters while in the HOLD state, but permanent changes (to the stored values) can only be made when the programmer is in the Reset state. So, before modifying a stored program first make sure that it is in Reset and then follow the procedure below:

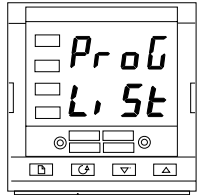

Program edit list


From the Home display press until you reach the 'Prog List' header.

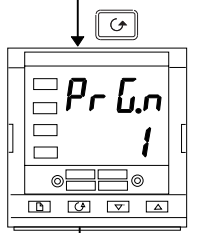

Press

Program number

This display only appears on the four-program controllers. Use or to select the number of the program which you wish to modify (from 1 to 4).

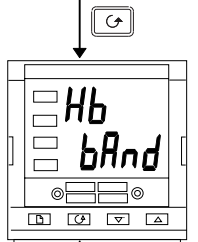


Press

Holdback type

[Only appears when Holdback has been selected for the whole program.]

Use or to select:

- **OFF** Holdback disabled
- **Lo** Deviation Low Holdback
- **Hi** Deviation High Holdback.
- **bAnd** Deviation Band Holdback

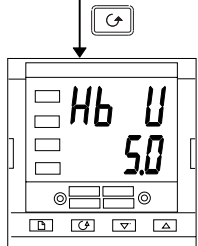


Press

Holdback value

Use or to set a value.

Press

(Continued on the next page.)

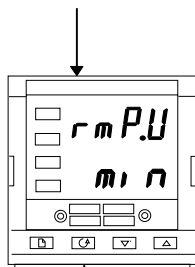


Ramp units

Use ▲ or ▼ to select:

- SEc
- m i n
- Hour



Press

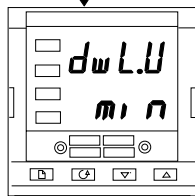


Dwell units

Use ▲ or ▼ to select:

- SEc
- m i n
- Hour



Press

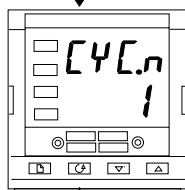


Number of program cycles

Use ▲ or ▼ to set the number of program cycles required from 1 to 999, or 'cont' for continuous cycling.



Press

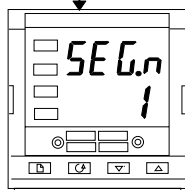

Segment number


Use ▲ or ▼ to select the number, [1 to 8 (8-seg programmer)], or 1 to 16.

The parameters that follow 'SEG.n' set up the characteristics of the individually-selected segment number. By defining the characteristics of each segment of the program, you define the whole program.



Press

Continued on the next page.

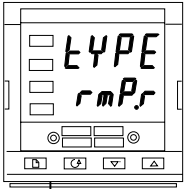

Segment type

Select the segment type using or .

- **rmp,r** Ramp to a new setpoint at a set rate
- **rmp,t** Ramp to a new setpoint in a set time
- **dwEll** Dwell for a set time
- **StEP** Step to a new setpoint
- **cALL** Call another program as a subroutine
(only available in 4-program controllers)
- **End** Make this segment end of program.




Press

The parameters that follow 'TYPE' depend on the type of segment selected.

Parameter	Segment type selected					
	rmp,r	rmp,t	dwEll	StEP	cALL	End
Hb	✓	✓	✓	✓		
tGt	✓	✓		✓		
rAtE	✓					
dur		✓	✓			
PrG,n					✓	
outn	✓	✓	✓	✓		✓
cYc,n					✓	
dwEll						✓
End,t						✓
Pwr						✓

Table 5-3 Parameters that follow segment TYPE

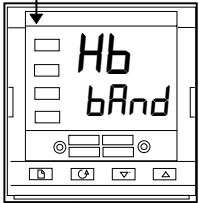

Holdback type

[Only appears when Holdback per segment has been selected.]

Use or to select:

- **OFF:** Holdback disabled
- **Lo:** Deviation Low Holdback
- **Hi:** Deviation High Holdback
- **bAnd:** Deviation Band Holdback

Press


Target setpoint





Target setpoint for 'rmp,r', 'rmp,t' or 'StEP' segments.

Set the target setpoint using or .

Press

Continued on the next page.

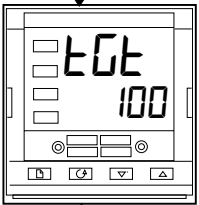

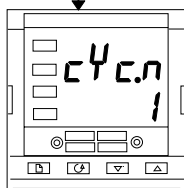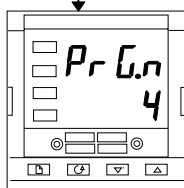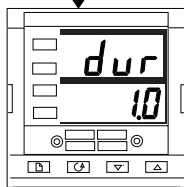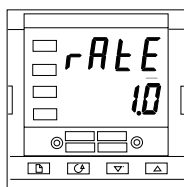

Ramp rate

Ramp rate for 'rALE' segments.
Using ▲ or ▼, set a value for the ramp rate, ranging from 0.00 to 999.9 (the units will be the ramp units ('r mP.U') set earlier in this sequence).

Press 

Duration time

Time for a 'dwEl!' segment, or time to target for a 'r mP.t' segment.
Set the time using ▲ or ▼. You have set the units earlier in this sequence.

Press 

Called program number

Only appears for 'cALL' segments. (4-program controllers only)
Set a called program number from 1 to 4, using ▲ or ▼.


Press 

Number of cycles of the called program

Only appears for 'cALL' segments. (4-program controllers only)
Set the number of cycles of the cALLED program from 1 to 999, using ▲ or ▼.

Press 

Continued on the next page.

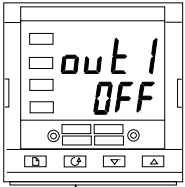


Event output 1 *(not 8-segment programmer)*

Appears in all segments, except 'cALL' segments.

Use ▲ or ▼ to set output 1:

- OFF Off in the current segment
- on On the current segment.

Press ↻

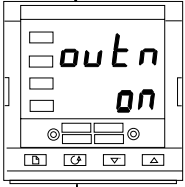

Further event outputs *(not 8-segment programmer)*


Up to eight (8) event outputs may appear in this list where 'n' = event number .

Pressing ↻ will step through all the remaining event outputs. **In practice**, the 2416 has a **maximum of three physical outputs**, although more than one event can be combined onto a single physical output. See Chapter 6, *Configuration*.

Use ▲ or ▼ to set:

- OFF Off in the current segment
- on On the current segment.

Press ↻

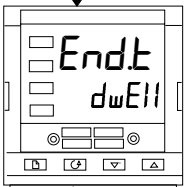


End segment type

Use ▲ or ▼ to select:

- dwEll An indefinite dwell
- rSEt Reset
- S OP End Segment Output Power Level

Press ↻

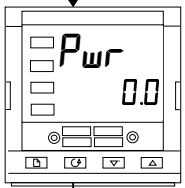

Power Value [End Segment]

Use ▲ or ▼ to set the power value in the range ±100.0%.

This power level is clipped by the parameters 'OP.Hi' and 'OP.Lo' before being applied to the process.

Note: In programmer/controller software versions 3.56 onwards, this parameter has been replaced by a parameter **End.P** which appears at the end of the output list, see Chapter 2.

Press ↻ to return to the PRoG-L, St header.

Chapter 6 CONFIGURATION

This chapter consists of six topics:

- SELECTING CONFIGURATION LEVEL
- SELECTING A CONFIGURATION PARAMETER
- LEAVING CONFIGURATION LEVEL
- CHANGING THE PASSWORDS
- NAVIGATION DIAGRAM
- CONFIGURATION PARAMETER TABLES.

In configuration level you set up the fundamental characteristics of the controller. These are:



- The type of control (e.g. reverse or direct acting)
- The Input type and range
- The Setpoint configuration
- The Alarms configuration
- The Programmer configuration
- The Communications configuration
- The Modules 1, 2 & 3 configuration
- Calibration
- The Passwords




WARNING

Configuration is protected by a password and should only be carried out by a qualified person, authorised to do so. Incorrect configuration could result in damage to the process being controlled and/or personal injury. It is the responsibility of the person commissioning the process to ensure that the configuration is correct.

SELECTING CONFIGURATION LEVEL



There are two alternative methods of selecting Configuration level:

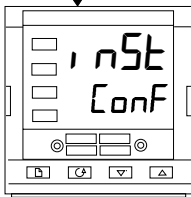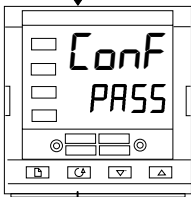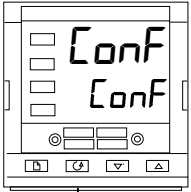- If you have already powered up, then follow the access instructions given in Chapter 3, *Access levels*.
- Alternatively, press  and  together when powering up the controller. This will take you directly to the 'CONF' password display.




Password entry



When the 'CONF' display appears, you must enter the Configuration password (which is a number) in order to gain access to Configuration level.

Enter the password using the  or  buttons. The configuration password is set to '2' when the controller is shipped from the factory.

Once the correct password has been entered, there is a two second delay, after which the lower readout will change to 'PASS', indicating that access is now unlocked.

Note: A special case exists if the password has been set to '0'. In this situation, access is permanently unlocked and the lower readout will always show 'PASS'.

Press  to enter configuration.


(If an incorrect password has been entered and the controller is still 'locked' then pressing  at this point will take you to the 'Inst' display with 'nop' in the lower readout. Simply press  to return to the 'CONF' display.)


You will obtain the first display of configuration.

SELECTING A CONFIGURATION PARAMETER



The configuration parameters are arranged in lists as shown in the navigation diagram in Figure 6.1.

To step through the list headers, press the Page  button.

To step through the parameters within a particular list press the Scroll  button. When you reach the end of the list you will return to the list header.

You can return directly to the list header at any time by pressing the Page  button.

Parameter names

Each box in the navigation diagram shows the display for a particular parameter. The upper readout shows the name of the parameter and the lower readout its value. For a definition of each parameter, see the Configuration Parameter Tables at the end of this chapter. To change the value of a selected parameter, use the  and  buttons.

The navigation diagram shows all the lists headers and parameters that can, potentially, be present in the controller. In practice, those actually present will vary according to the particular configuration choices you make.


CHANGING THE PASSWORDS



There are TWO passwords. These are stored in the Password configuration list and can be selected and changed in the same manner as any other configuration parameter.


The password names are:



'*ACC.P*', which protects access to Full level and Edit level
'*CONF.P*', which protects access to Configuration level.

LEAVING CONFIGURATION LEVEL

To leave the Configuration level and return to Operator level Press  until the 'E I t' display appears.

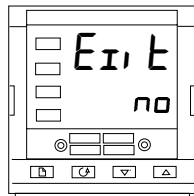Alternatively, pressing  and  together will take you directly to the 'E I t' display.



Use  or  to select 'YES'. After a two-second delay, the display will blank then revert to the Home display in Operator level.

NAVIGATION DIAGRAM (PART A)


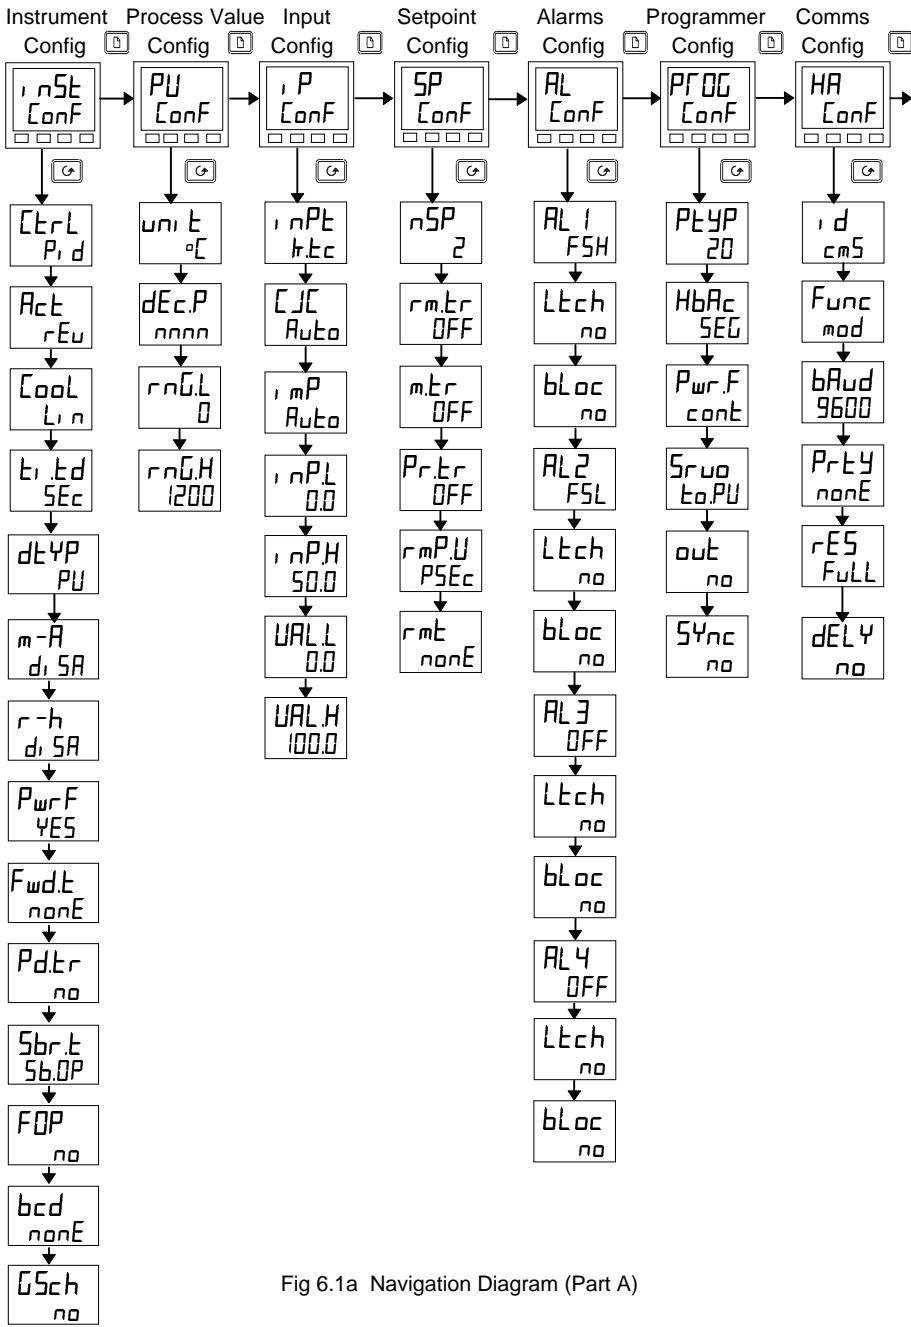


Fig 6.1a Navigation Diagram (Part A)

NAVIGATION DIAGRAM (PART B)

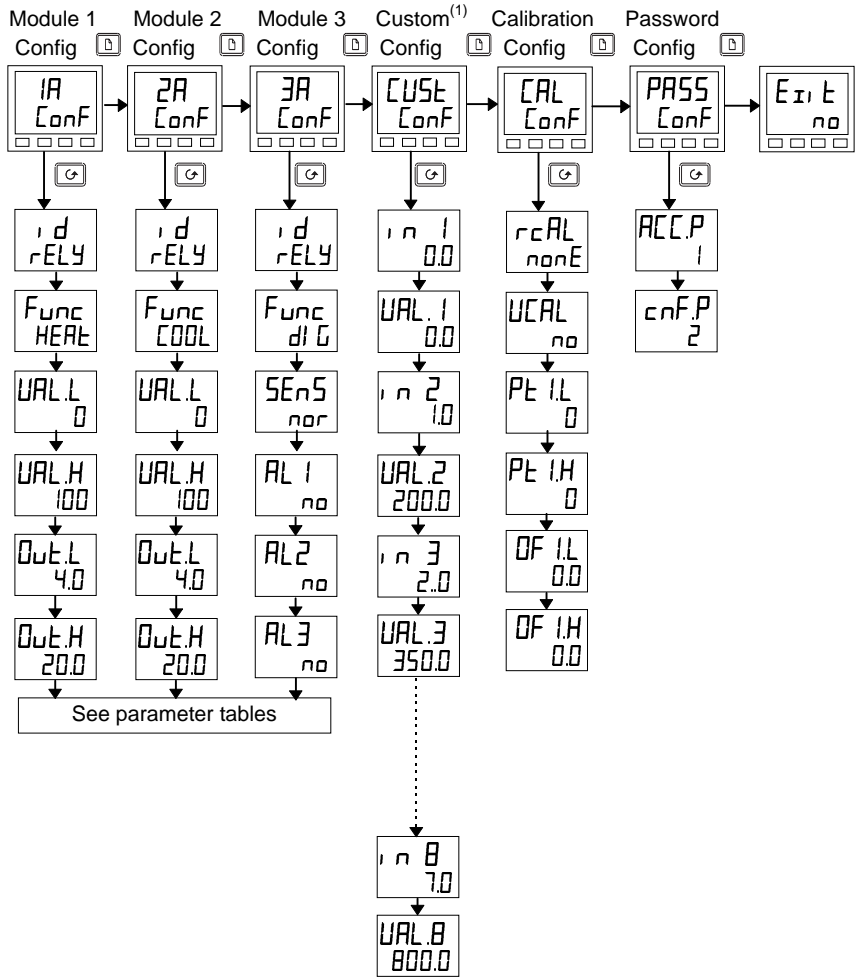

Note:

1. 8-point custom linearisation. Only appears when 'P-Conf' has 'nPt' = 'mUL', or 'mAL', or 'UL'.
2. The navigation diagram shows typical parameters, but is dependant upon the exact configuration of the instrument. The following sheets show the full list of parameters.

Fig 6.1b Navigation Diagram (Part B)

CONFIGURATION PARAMETER TABLES

Name	Description	Values	Meaning
Inst	Instrument configuration		
Ctrl	Control type	PID ONOFF UP UPb	PID control On/off control Boundless motorised valve control - <i>no feedback required</i> Bounded motorised valve control - <i>feedback required</i>
Act	Control action	REU DIR	Reverse acting Direct acting
Cool	Type of cooling	LIN OIL H2O FAN ONOFF	Linear Oil (50mS minimum on-time) Water (non-linear) Fan (0.5S minimum on-time) On/off cooling
Intd	Integral & derivative time units	SEC MIN	Seconds, OFF to 9999 Minutes, OFF to 999.9
dtYP	Derivative type	PU ERR	Operates on rate of change of PV Operates on rate of change of error
m-A	Front panel Auto/Man button	ENAB DISA	Enabled Disabled
r-h	Front panel Run/Hold button	ENAB DISA	Enabled Disabled
PwrF	Power feedback	ON OFF	On Off
Fwdt	Feed forward type	none FEED SPFF PUFF	None Normal feed forward Setpoint feed forward PV feed forward
Pdtr	Manual/Auto transfer when using PD control	no YES	Non-bumpless transfer Bumpless transfer - (<i>Pre-loads Manual Reset value</i>)
Sbrt	Sensor break output	SbOP HoLd	Go to pre-set value Freeze output
FOP	Forced manual output	no ErAc STEP	Bumpless Auto/Manual transfer Returns to the Manual value that was set when last in Manual mode Steps to forced output level. Value set in 'FOP' of 'oP-Lt St' in Operator Level
bcd	BCD input function	none PrOU SP	Not used <i>Only functional in Models 2408 & 2404. Set 'bcd' to 'none'</i> Select setpoint number
Gsch	Gain Schedule Enable	no YES	Disabled Enabled

Name	Description	Values	Meaning
PU	Process value config		
<i>units</i>	Inststrument units	<i>C</i> <i>F</i> <i>K</i> <i>none</i>	Celsius Fahrenheit Kelvin Display units blanked
<i>decP</i>	Decimal places in the displayed value	<i>none</i> <i>one</i> <i>two</i>	None One Two
<i>rngL</i>	Range low		Low range limit. Also setpoint limit for alarms and programmers
<i>rngH</i>	Range high		High range limit. Also setpoint limit for alarms and programmers

Notes:**1. Pyrometer Emmissivity**

Controllers which are specifically supplied for pyrometer inputs (not Exergen K80), have the curve downloaded in the Custom Input. The parameter, *Emi 5*, Pyrometer Emmissivity, appears in the Input List on page 2-15. This parameter is also now correctly adjusted.

2. Range

If a decimal point was configured, negative display and setpoint ranges were limited to -99.9 in previous software versions. The range has been increased to -199.9 by combining the negative sign with the figure one. This allows Setpoints, Process Variables, Alarm Setpoints and Programmers to be set to -199.9.

Name	Description	Values	Meaning
I P	Input configuration		
I nPt	Input type * See 'CUSE' List.	J.t.c K.t.c L.t.c R.t.c B.t.c N.t.c T.t.c S.t.c PL 2 C.t.c r.t.d mV v.o.l.t mA S.r.V S.r.A mV.C V.C mA.C	J thermocouple K thermocouple L thermocouple R thermocouple (Pt/Pt13%Rh) B thermocouple (Pt30%Rh/Pt6%Rh) N thermocouple T thermocouple S thermocouple (Pt/Pt10%Rh) PL 2 thermocouple Custom downloaded t/c (default = type C) 100Ω platinum resistance thermometer Linear millivolt Linear voltage Linear milliamps Square root volts Square root milliamps 8-point millivolt custom linearisation* 8-point Voltage custom linearisation* 8-point milliamp custom linearisation*
CJC	Cold Junction Compensation	OFF Auto 0°C 45°C 50°C	No cold junction compensation Automatic internal compensation 0°C external reference 45°C external reference 50°C external reference
I mP	Sensor Break Impedance	OFF Auto Hi Hi, Hi	Disabled (applies to any input) Caution: If sensor break is disabled the controller will not detect open circuit faults Factory set Impedance of input > 15KΩ Impedance of input > 30KΩ
Linear Input Scaling – The next four parameters only appear if a linear input is chosen.			
I nPL		Input value low	
I nPH		Input value high	
URL.L		Display reading low	
URL.H		Display reading high	

Name	Description	Values	Meaning
SP	Setpoint configuration		
nSP	Number of setpoints	2, 4, 16	Select number of setpoints available
r.m.tr	Remote Tracking	OFF trAc	Disable Local setpoint tracks remote setpoint
m.tr	Manual Track	OFF trAc	Disable Local setpoint tracks PV when in manual
Pr.tr	Programmer Track	OFF trAc	Disable Local setpoint tracks programmer SP
r.mP.U	Setpoint rate limit units	PSEc Pm,n PHr	Per second Per minute Per hour
r.m.t	Remote setpoint configuration	nonE SP Loc.t r.m.t.t	Disable Remote setpoint Remote setpoint + local trim Remote trim + local setpoint

AL	Alarm configuration	Values
<i>The controller contains four 'soft' alarms, (indication only) which are configured in this list. Once configured, they can be attached to a physical output in module positions 1A, 2A or 3A.</i>		
AL1	Alarm 1 Type	see Table A
Ltch	Latching	no/YES/Eunt/mAn*
bLoc	Blocking	no/YES
AL2	Alarm 2 Type	see Table A
Ltch	Latching	no/YES/Eunt/mAn*
bLoc	Blocking	no/YES
AL3	Alarm 3 Type	see Table A
Ltch	Latching	no/YES/Eunt/mAn*
bLoc	Blocking	no/YES
AL4	Alarm 4 Type	see Table A
Ltch	Latching	no/YES/Eunt/mAn*
bLoc	Blocking (not if AL4 = 'rAt')	no/YES

Table A - Alarm types	
Value	Alarm type
OFF	No alarm
FSL	PV Full scale low
F5H	PV Full scale high
dEu	PV Deviation band
dHi	PV Deviation high
dLo	PV Deviation low
LCr	Load Current low
HCr	Load Current high
FL2	<i>Not usable on 2416</i>
FH2	<i>Not usable on 2416</i>
LDP	Working Output low
HDP	Working Output high
LSP	Working Setpoint low
HSP	Working Setpoint high
rAt	PV Rate of change <i>AL4 only</i>

*** Alarm Modes**

'no' means that the alarm will be non-latching.

'YES' means that the alarm will be latched, with automatic resetting. Automatic resetting means that if a reset is actioned before the alarm has cleared, then it will automatically reset when it clears.

'Eunt' means that the alarm is used to trip an external event. If this option is selected the front panel alarm message will not appear.

'mAn' means that the alarm will be latched, and can only be reset after it has first cleared (called 'manual reset mode').

The following parameters apply if the standard 8-segment programmer is to be configured.

PARAMETER	Programmer configuration	Values	Meaning
PRG	Programmer type	nonE I	Programmer disabled (<i>factory setting</i>) 8-segment programmer enabled
HBR	Holdback	SEG PRG	Holdback is individually selectable in each segment. Holdback is applied across the whole Program.
PRF	Power fail recovery	cont rampb rset	Continue from last setpoint (SP) Ramp from PV to SP at last ramp rate Reset the program
SRO	Starting setpoint of a program (Servo point)	toPV toSP	From the Process Value (PV) From the setpoint

The following parameters apply if a 16-segment programmer is to be configured.

PARAMETER	Programmer configuration	Values	Meaning
PRG	Programmer type	nonE I 4	Programmer disabled Single program Four programs
HBR	Holdback	SEG PRG	Holdback is individually selectable in each segment. Holdback is applied across the whole Program.
PRF	Power fail recovery	cont rampb rset	Continue from last setpoint (SP) Ramp from PV to SP at last ramp rate Reset the program
SRO	Starting setpoint of a program (Servo point)	toPV toSP	From the Process Value (PV) From the setpoint
OUT	Programmable event outputs	no YES	Disabled Enabled
SYNC	Synchronisation of programs of several programmers Not usable in Model 2416	no YES →	Disabled Enabled Select 'no'

Name	Description	Values	Meaning
HR	Comms 1 module config		
id	Identity of the module installed	cm5 Pd5 Pd5i	EIA-232, or 2-wire EIA-485, or 4-wire EIA-485 comms PDSIO retransmission PDSIO input

For 'id' = 'cm5' use this parameter table:

Func	Function	mod E1.b	Modbus protocol Eurotherm Bisynch protocol
baud	Baud Rate	1200, 2400, 4800, 9600, 1920(19,200)	
dELY	Delay - quiet period, required by some comms adaptors	no YES	No delay Delay active - 10mS
<i>The following parameters only appear if the function chosen is Modbus protocol.</i>			
Prty	Comms Parity	nonE EuEn Odd	No parity Even parity Odd parity
rES	Comms Resolution	FuLL Int	Full resolution Integer resolution
dELY	Delay - quiet period, required by some comms adaptors	no YES	No delay Delay active - 10mS

For 'id' = 'Pd5' use this parameter table:

Func	Function	nonE SP.OP PV.OP Er.OP OP.OP	No PDSIO function PDSIO setpoint retransmission PDSIO PV retransmission PDSIO error signal retransmission PDSIO output power retransmission
VAL.L		Retransmitted Value Low	
VAL.H		Retransmitted Value High	

Name	Description	Values	Meaning
For 'd' = 'PDS', use this parameter table:			
<i>F_{UNC}</i>	Function	<i>SP, P</i>	PDSIO setpoint input
<i>URL.L</i>			Setpoint Displayed Value - Low
<i>URL.H</i>			Setpoint Displayed Value - High

Name	Description	Values	Meaning
IA	Module 1 configuration		
<i>i d</i>	Identity of module installed	<i>rELY</i> <i>dCOP</i> <i>LoG</i> <i>SSr</i>	Relay output Non-isolated DC output Logic/PDSIO output Triac output

For ' <i>i d</i> ' = ' <i>rELY</i> ', ' <i>LoG</i> ', or ' <i>SSr</i> ' use this parameter table:			
<i>Func</i>	Function	<i>nonE</i>	Function disabled
		<i>dIG</i>	Digital output function
		<i>HEAT</i>	Heating output
		<i>COOL</i>	Cooling output
		<i>uP</i>	Open motorised valve
		<i>dwn</i>	Close motorised valve
		<i>SSr.1</i> (Only if ' <i>i d</i> ' = ' <i>LoG</i> ') <i>SSr.2</i> (Only if ' <i>i d</i> ' = ' <i>LoG</i> ')	PDSIO mode 1 heating PDSIO mode 2 heating
<i>VAL.L</i>		% PID demand signal giving minimum output – ' <i>Out.L</i> '	
<i>VAL.H</i>		% PID demand signal giving maximum output – ' <i>Out.H</i> '	
<i>Out.L</i>		Minimum average power	
<i>Out.H</i>		Maximum average power	
<i>SEN5</i>	Sense of output (Only if ' <i>Func</i> ' = ' <i>dIG</i> ')	<i>nor</i> <i>inu</i>	Normal (output energises when TRUE, e.g program events) Inverted (output de-energises when TRUE, e.g. alarms)
When ' <i>SEN5</i> ' appears, then further parameters are available. See the table on the next page.			

Name	Description	Values	Meaning
<i>The following digital events appear after 'SEnS'. Any one, or more, of the events can be combined on to the output (see Fig. 6-2) by selecting 'YES' in the lower readout.</i>			
1 - - -	Alarm 1 active	YES / nO	(- - -) = alarm type (e.g. F5L). If an alarm has not been configured in 'AL ConF' list, then display will differ:- e.g. Alarm 1 = 'AL 1'.
2 - - -	Alarm 2 active	YES / nO	
3 - - -	Alarm 3 active	YES / nO	
4 - - -	Alarm 4 active	YES / nO	
mAn	* Controller in manual mode	YES / nO	
Sbr	* Sensor break	YES / nO	
SPAn	* PV out of range	YES / nO	
Lbr	* Loop break	YES / nO	
LdF	* Load failure alarm	YES / nO	
tunE	* Tuning in progress	YES / nO	
dc.F	* Voltage output open circuit, or mA output open circuit	YES / nO	
rmt.F	* PDSIO module connection open circuit	YES / nO	
IP1F	* Input 1 fail (not usable on 2416)	YES/nO	
nwAL	* New Alarm has occurred	YES / nO	
End	* End of setpoint rate limit, or end of program	YES / nO	
SYnc	* Program Synchronisation active	YES / nO	(Not available in 2416 - set to 'nO')
PrG.n	* Programmer event output active, where 'n' = event number from 1 to 8. (Not available with 8-segment programmer.)	YES / nO	

* These alarms are always non-latching. Process alarms 1, 2, 3 and 4 are configurable as alarm latching or non-latching, see the 'AL' List

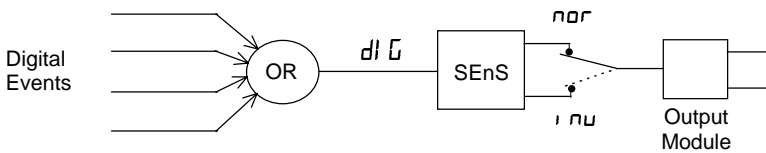


Figure 6-2 Combining several digital events on to one output

Name	Description	Values	Meaning
------	-------------	--------	---------

For 'd' = 'dC.OP', use this parameter table:

Func	Function	nonE	Function disabled
		HEAT	Heating output
		COOL	Cooling output
		PV	Retransmission of PV
		wSP	Retransmission of setpoint
		Err	Retransmission of error signal
		OP	Retransmission of OP power
URLL	<p>The graph shows a linear relationship between Electrical Output (x-axis, ranging from Out.L to Out.H) and %PID, or Retransmission Value (y-axis, ranging from VAL.L to VAL.H). A straight line connects the points (Out.L, VAL.L) and (Out.H, VAL.H).</p>		% PID, or Retrans'n Value, giving minimum output
URLH			% PID, or Retrans'n Value, giving maximum output
unit			volt = Volts, mA = milliamps
OutL			Minimum electrical output
OutH			Maximum electrical output

2R	Module 2 configuration		
As per module 1 configuration, but excluding the 'SSr.1', 'SSr.2' options on a logic output.			

3R	Module 3 configuration		
As per module 2 configuration.			

CUSE	8-point Custom Linearisation ⁽¹⁾		
in 1	<p>The graph shows a custom non-linear curve for 8-point linearisation. The x-axis is Electrical Input (ranging from in 1 to in 8) and the y-axis is Displayed Value (ranging from URL.1 to URL.8). The curve starts at (in 1, URL.1) and ends at (in 8, URL.8), passing through intermediate points (in 3, URL.3) and (in 5, URL.5).</p>	Custom input 1	
URL.1		Linearisation Value representing in 1	
⋮		⋮	
in 8		Custom input 8	
URL.8		Linearisation Value representing in 8	

Note:

1. Custom Linearisation is only available when 'P-CONF' list has 'nPt' set to 'mV', or 'mA', or 'V'.
2. Custom curves must be continuously increasing or decreasing in value and input.

Name	Description	Values	Meaning	
CAL	Calibration			
<p><i>In this mode you can</i></p> <ol style="list-style-type: none"> 1. Calibrate the instrument using a mV source - <i>rCAL</i> or ref source cal. 2. Offset the calibration to account for errors in actual sensor measurement and a ref sensor - <i>ULCAL</i> or user calibration 3. Return to factory set calibration - <i>FAL</i> or factory set calibration. 				
<i>rCAL</i>	Calibration point	<i>nonE</i>	No calibration	Goto User calibration table- See also chapter 7
		<i>PU</i>	Calibrate main Process Value input.	
		<i>PU2</i>	Calibrate DC input, or PV 2.(not 2416)	
		<i>1RH1</i>	Calibrate DC output high - Module 1	Go to DC Output Calibration table
		<i>1RL0</i>	Calibrate DC output low - Module 1	
		<i>2RH1</i>	Calibrate DC output high - Module 2	
		<i>2RL0</i>	Calibrate DC output low - Module 2	
		<i>3RH1</i>	Calibrate DC output high - Module 3	
		<i>3RL0</i>	Calibrate DC output low - Module 3	

INPUT CALIBRATION			
<p>For '<i>CAL</i>' = '<i>PU</i>', or '<i>PU2</i>'; the following parameters apply.</p>			
<i>PU</i>	PV Calibration Value	<i>Idle</i>	Idle
		<i>mUL</i>	Select 0mV as the calibration point
		<i>mUH</i>	Select 50mV as the calibration point
		<i>U0</i>	Select 0Volt as the calibration point
		<i>U10</i>	Select 10V as the calibration point
		<i>CJC</i>	Select 0°C CJC calibration point
		<i>rEd</i>	Select 400Ω as the calibration point
		<i>HI 0</i>	High impedance: 0Volt cal'n point
		<i>HI 1.0</i>	High impedance: 1.0 Volt cal'n point
		<i>FAL</i>	Restore factory calibration
<i>00</i>	<p>Start calibration</p> <p>Select 'YES' with <input type="button" value="▲"/> or <input type="button" value="▼"/></p> <p>Wait for calibration to complete.</p> <p>See Note below.</p>	<i>no</i>	Waiting to calibrate PV point
		<i>YES</i>	Start calibration
		<i>busy</i>	Busy calibrating
		<i>done</i>	PV input calibration completed
		<i>FAIL</i>	Calibration failed

Name	Description	Values	Meaning
DC Output Calibration			
<i>The following parameters apply to DC output modules ie for rCAL = 1A.Hi to 3A.Lo</i>			
cAL.H	Output Calibration High	0	0 = Factory set calibration. Trim value until output = 9V, or 18mA
cAL.L	Output Calibration Low	0	0 = Factory set calibration. Trim value until output = 1V, or 2mA

User calibration		
UCAL	User calibration enable	Yes/no
PE 1.L	Low calibration point for Input 1	The factory calibration point at which the low point offset was performed.
PE 1.H	High calibration point for Input 1	The factory calibration point at which the high point offset was performed.
OF 1.L	Offset Low for Input 1	Calculated offset, in display units.
OF 1.H	Offset High for Input 1	Calculated offset, in display units.

Name	Description	Values	Meaning
PASS	Password configuration		
ACC.P	FuLL or Edit level password		
cnFP	Configuration level password		
EXIT	Exit configuration	no/YES	

Chapter 7 USER CALIBRATION

This chapter has five topics:

- WHAT IS THE PURPOSE OF USER CALIBRATION?
- USER CALIBRATION ENABLE
- OFFSET CALIBRATION
- TWO POINT CALIBRATION
- CALIBRATION POINTS AND CALIBRATION OFFSETS

To understand how to select and change parameters in this chapter you will need to have read Chapter 2 - *Operation*, Chapter 3- *Access Levels* and Chapter 6 - *Configuration*.

WHAT IS THE PURPOSE OF USER CALIBRATION?

The basic calibration of the controller is highly stable and set for life. User calibration allows you to offset the 'permanent' factory calibration to either:

1. Calibrate the controller to your reference standards.
2. Match the calibration of the controller to that of a particular transducer or sensor input.
3. Calibrate the controller to suit the characteristics of a particular installation.
4. Remove long term drift in the factory set calibration.


User calibration works by introducing a single point, or two-point, offset onto the factory set calibration.



USER CALIBRATION ENABLE


The User calibration facility must first be enabled in configuration level by setting the parameter 'UCAL' in the CAL CONF list to 'YES'. This will make the User calibration parameters visible in Operator 'FULL' level. This procedure is described in Chapter 6, *Configuration*, but for convenience is summarised below:

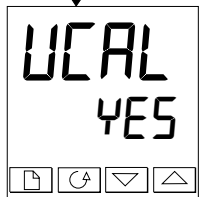


 x2




 + 

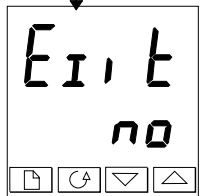

The Calibration Configuration List



Press  until you reach the 'CAL-CONF' list.

Press  until you reach 'UCAL'.



User Calibration Enable

Use  or  to select:

- YES: Calibration enable
- no: Calibration disabled


Press  and  together to go to the EXIT display.

Exit configuration

Use  or  to select 'YES' to return to Operator level.

OFFSET CALIBRATION


Offset calibration is used to apply a single fixed offset over the full display range of the controller.

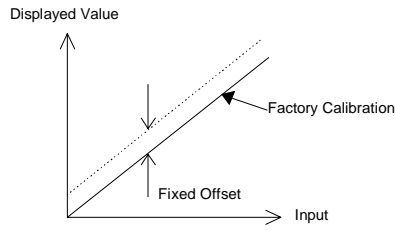

To calibrate, proceed as follows:

1. Connect the input of the controller to the source device to which you wish to calibrate.
2. Set the source to the desired calibration value.
3. The controller will display the current measurement of the value.
4. If the displayed value is correct, then the controller is correctly calibrated and no further action is necessary. If it is incorrect, then follow the steps shown below.

Select 'FULL' access level, as described in Chapter 3.

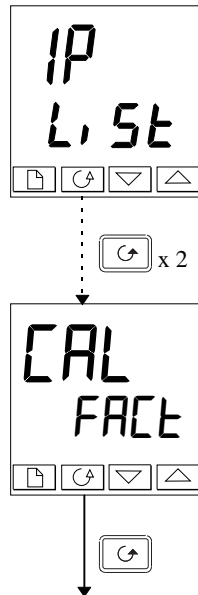

Input list header

Press until you reach the input list header.

Press x 2 until you reach the 'CAL' display.

Calibration type

- **FACT:** Factory Calibration
- **USER:** User Calibration

Use or to select 'FACT'.


Selecting 'FACT' reinstates the factory calibration and allows the application of a single fixed offset.

Press

continued on the next page



See table on the right for additional parameters

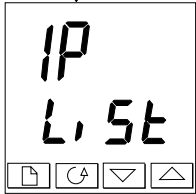

Set Offset 1

Use or to set the offset value of Process Value 1 (PV1).

The offset value is in display units.

Press

The table below shows the parameters which appear after 'OFS. 1'. These are all read only values and are for information.

Press to step through them.


mU. 1	IP1 measured value (at terminals)
CJC. 1	IP1 Cold Junction Compensation
L. 1	IP1 Linearised Value
PU.5L	Not available in Model 2416

If you do not want to look at these parameters, then press and this returns you to the 'P-L, 5t' header.

To protect the calibration against unauthorised adjustment, return to Operator level and make sure that the calibration parameters are hidden. Parameters are hidden using the 'Edit' facility described in Chapter 3, *Access Levels*.


TWO-POINT CALIBRATION

The previous section described how to apply an offset, or trim, calibration, which applies a fixed offset over the full display range of the controller. A two-point calibration is used to calibrate the controller at two points and applies a straight line between them. Any readings above, or below, the two calibration points will be an extension of this straight line. For this reason it is best to calibrate with the two points as far apart as possible.

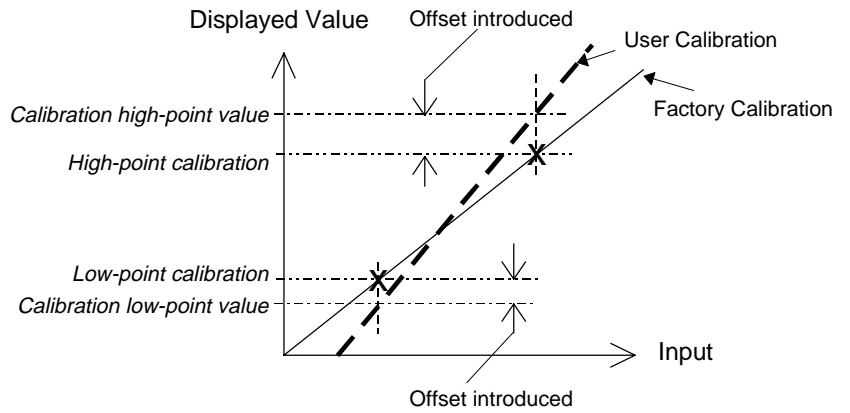

Proceed as follows:

1. Decide upon the low and high points at which you wish to calibrate.
2. Perform a two point calibration in the manner described below.

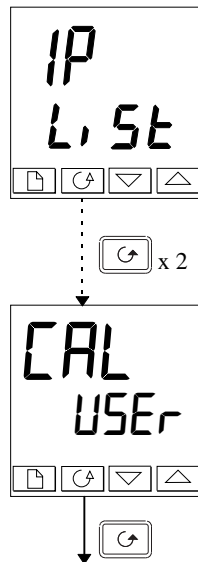

Input list header

Press until you reach the input list header, 'PLSt'.

Press until you reach the 'CAL' display.

Calibration type


- **FACt**: Factory Calibration
- **USEr**: User Calibration

Use or to select 'USEr'.

Selecting 'USEr' enables two-point calibration.

[If two-point calibration is unsatisfactory, select 'FACt' to return to the factory set calibration.]

Press

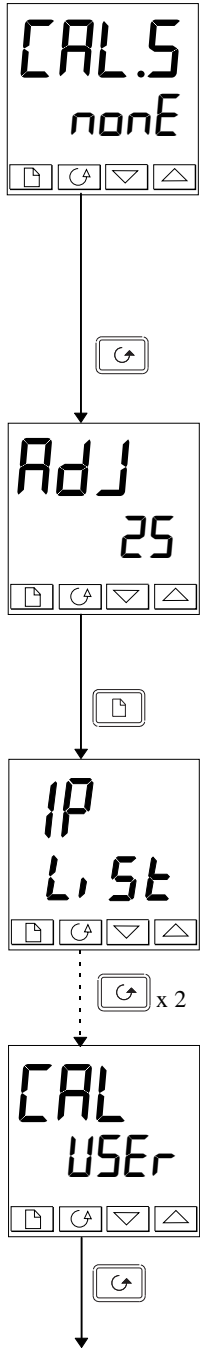

Select Low-point Calibration

This is the Calibration Status display. This display shows that no input is selected for calibration.

- none: No selection. If none selected go to page 7-4
- i P i.L: Input 1 (PV1) calibration low-point selected
- i P i.H: Input 1 (PV1) calibration high-point selected
- i P 2.L: Not available in Model 2416
- i P 2.H: Not available in Model 2416

Use to select the parameter for the Low Calibration point of Input 1, 'i P i.L' & follow route shown on this page.

Press

Adjust low-point calibration

This is the display for adjusting the Low Calibration point of Input 1. The lower readout is a live reading of the process value, which changes as the input changes.

Make sure that the calibration source is connected to the terminals of Input 1, switched on and feeding a signal to the controller. It should be set to the desired low-point calibration value. If the lower readout does not show this value, then use to adjust the reading to the required value.

Press to return to the 'i P-L i St' header.


To perform the High-point Calibration, repeat the above procedure, selecting 'i P i.H' in the 'CAL.S' display for adjustment.

Press twice.

Calibration type

'USEr' was selected for the Low-point Calibration, and has remained selected.

Press

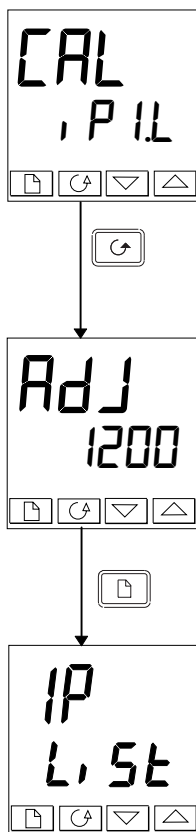

Select High-point Calibration

This is the Calibration Status display, again.

Use / to select the parameter for the High-point Calibration of Input 1, 'PIL'.

Press

Adjust High-point Calibration

This is the display for adjusting the High Calibration point of Input 1. The lower readout is a live reading of the process value, which changes as the input changes.

Feed the desired high-point calibration signal to the controller, from the calibration source. If the lower readout does not show this value, then use / to adjust the reading to the required value.

Press to return to the 'PIL St' header.



To protect the calibration against unauthorised adjustment return to Operator level and make sure that the calibration parameters are hidden. Parameters are hidden using the 'Edit' facility described in Chapter 3.

CALIBRATION POINTS AND CALIBRATION OFFSETS

If you wish to see the points at which the User calibration was performed and the value of the offsets introduced, then these are shown in Configuration, in 'CAL-CONF'.

The parameters are:

Name	Parameter description	Meaning
PE I,L	Low calibration point for Input 1	The factory calibration point at which the low point offset was performed.
PE I,H	High calibration point for Input 1	The factory calibration point at which the high point offset was performed.
OF I,L	Offset Low for Input 1	Calculated offset, in display units.
OF I,H	Offset High for Input 1	Calculated offset, in display units.


Note: The value of each of the parameters in the above table may also be altered by using the /  buttons.

Appendix A

UNDERSTANDING THE ORDERING CODE

The 2416 controller has a modular hardware construction, which accepts up to three plug-in Input/Output modules and one communications module, to satisfy a wide range of control requirements.

The ordering code is in two parts. The hardware coding and an optional configuration coding. The hardware coding specifies the basic build of the controller and the plug-in modules that are fitted.

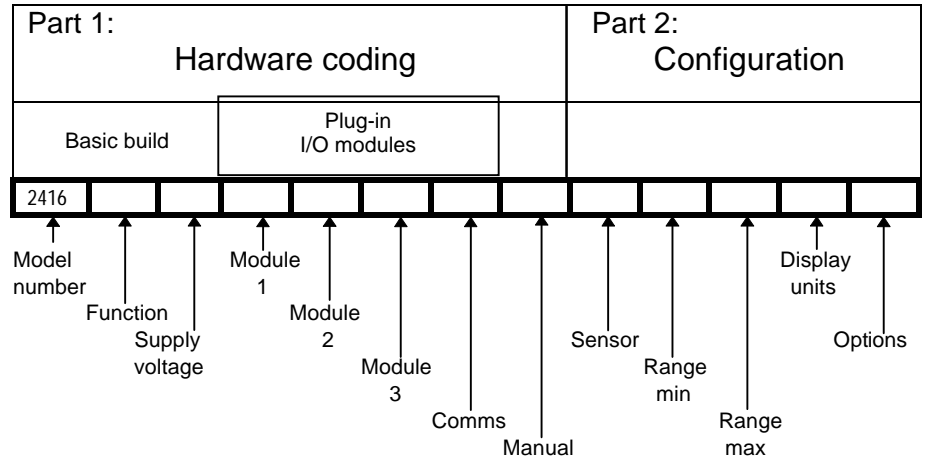

The controller may have been ordered with just the hardware build specified, or with configuration included. This is indicated by the ordering code on the side of the controller.

Part 1A: Hardware coding			
Model number	Function	Supply voltage	Module 1
2416	CC	VH	LH



Continue next page

Function	
CC	Controller/8-seg Programmer
CP	Single 16-segment Programmer
P4	Four Program 16-segment
VC	Valve positioner (VP) /8 segment Prog.
VP	VP/Single Prog. 16-segment
V4	VP/Four Program. 16-segment

Supply voltage	
VH	85 to 264Vac
VL	20 to 29Vac/dc

Module 1	
XX	None
Relay: 2-pin	
R2	Fitted unconfigured
RH	PID heating
RU	Valve raise output
<i>Or Alarm 1: select from table A</i>	
Logic non-isolated	
L2	Fitted unconfigured
LH	PID heating
M1	PDSIO mode 1 ⁽¹⁾
M2	PDSIO mode 2 ⁽¹⁾
Triac	
T2	Fitted unconfigured
TH	PID heating
TU	Valve raise output
DC control non-isolated	
D2	Unconfigured
H1	0-20mA heating
H2	4-20mA heating
H3	0-5Vdc heating
H4	1-5Vdc heating
H5	0-10Vdc heating

Table A : Alarm relay functions

FH	High alarm
FL	Low alarm
DB	Deviation band
DL	Low dev. alarm
DH	High dev alarm

continued



Part 1B: Hardware coding			
Plug-in modules			
Module 2	Module 3	Comms 1	Manual
RC	RH	MB	ENG

Module 2	
XX	None
Relay: 2-pin	
R2	Fitted unconfigured
RC	PID cooling
RW	Valve lower output
PO	Program event output 1
<i>Or Alarm 2: select from table A</i>	
Logic non-isolated	
L2	Fitted unconfigured
LC	PID cooling
Triac	
T2	Fitted unconfigured
TC	PID cooling
TW	Valve lower output
DC control non-isolated	
D2	Unconfigured
C1	0-20mA cooling
C2	4-20mA cooling
C3	0-5Vdc cooling
C4	1-5Vdc cooling
C5	0-10Vdc cooling

Module 3	
XX	None
Relay: 2-pin	
R2	Fitted unconfigured
PO	Program event 2
LF	PDSIO load failure
HF	PDSIO heater failure
SF	PDSIO SSR failure
<i>Or Alarm 4 select from table A</i>	
Other modules	
L2	Logic unconfigured non-isolated
T2	Triac unconfigured
D2	DC unconfigured non- Isolated
<i>First character</i>	
V-	PV retransmission
S-	Setpoint retransmission
O-	Output retransmission
Z-	Error retransmission
<i>Second character</i>	
-1	0 to 20mA
-2	4 to 20mA
-3	0 to 5V
-4	1 to 5V
-5	0 to 10V

Manual	
XXX	No manual
ENG	English
FRA	French
GER	German
ITA	Italian

Comms	
XX	None
EIA-485 (2 wire)	
Y2	Fitted unconfigured
YM	Modbus protocol
YE	EI Bisynch protocol
EIA-232	
A2	Fitted unconfigured
AM	Modbus protocol
AE	EI Bisynch protocol
EIA-485 (4 wire)	
F2	Fitted unconfigured
FM	Modbus protocol
FE	EI Bisynch protocol
PDSIO input	
M6	Fitted unconfigured
RS	Setpoint input
PDSIO output	
M7	Fitted unconfigured
PT	PV retransmission
TS	Setpoint retrans
OT	Output retrans

Hardware coding	Part 2: Configuration				
	Sensor input	Range min	Range max	Units	Options
	K	0	1000	C	CF

Sensor input	Range min & max	
Standard sensor inputs	°C	°F
J J thermocouple	-210 to 1200	-340 to 2192
K K thermocouple	-200 to 1372	-325 to 2500
T T thermocouple	-200 to 400	-325 to 750
L L thermocouple	-200 to 900	-325 to 650
N N thermocouple	-250 to 1300	-418 to 2370
R Type R - Pt13%Ph/Pt	-50 to 1768	-58 to 3200
S Type S - Pt10%Rh/Pt	-50 to 1768	-58 to 3200
B Type B - Pt30%Rh/Pt6%Rh	0 to 1820	32 to 3308
P Platine II	0 to 1369	32 to 2496
C *Type C W5%Re/W26%Re (Hoskins)*	0 to 2319	32 to 4200
Z RTD/PT100	-200 to 850	-325 to 1562
Process inputs		
F -9.99 to + 80mV	0 to 9999	
Y 0-20 mA Linear	0 to 9999	
A 4-20 mA Linear	0 to 9999	
W 0-5V DC Linear	0 to 9999	
G 1-5V DC Linear	0 to 9999	
V 0-10V DC Linear	0 to 9999	
Custom Sensor inputs (* replaces type C thermocouple)		
D Type D - W3%Re/W25%Re	0 to 2399	32 to 4350
E E thermocouple	-270 to 1000	-450 to 1830
1 Ni/Ni18%Mo	0 to 1399	32 to 2550
2 Pt20%Rh/Pt40%Rh	0 to 1870	32 to 3398
3 W/W26%Re (Englehard)	0 to 2000	32 to 3632
4 W/W26%Re (Hoskins)	0 to 2010	32 to 3650
5 W5%Re/W26%Re (Englehard)	10 to 2300	50 to 4172
6 W5%Re/W26%Re (Bucose)	0 to 2000	32 to 3632
7 Pt10%Rh/Pt40%Rh	200 to 1800	392 to 3272

Units	
C	Centigrade
F	Fahrenheit
K	Kelvin
X	Blank

Options	
Add as many options as required	
Control options	
NF	On/Off control
DP	Direct acting PID control
PD	Power feedback disabled
Cooling options	
CF	Fan cooling
CW	Water cooling
CL	Oil cooling
Front panel buttons	
MD	Auto/man button disabled
RD	Run/hold button disabled
Programmer options	
HD	Dwell time in hours
HR	Ramp rate in units/hour (minutes is standard)

Notes:

1. **PDSIO** is a proprietary technique developed by Eurotherm for bi-directional transmission of analogue and digital data between instruments.
Mode 1: provides logic heating to a Eurotherm TE10S solid state relay with feedback of a general load fault alarm.
Mode 2: provides logic heating to a Eurotherm TE10S solid state relay with feedback of load current and two alarms: solid state relay failure and heater circuit failure.
2. **Range min and Range max:** Thermocouple and RTD sensor inputs will always display over the full operating range shown in Sensor input table. For these inputs, the values entered here are the low and high setpoint limits. For process inputs, the values are the display scaling, corresponding to the minimum and maximum input values.

SAFETY and EMC INFORMATION

Please read this section carefully before installing the controller

This controller is intended for industrial temperature and process control applications when it will meet the requirements of the European Directives on Safety and EMC. Use in other applications, or failure to observe the installation instructions of this handbook may impair the safety or EMC protection provided by the controller. It is the responsibility of the installer to ensure the safety and EMC of any particular installation.

Safety

This controller complies with the European Low Voltage Directive 73/23/EEC, amended by 93/68/EEC, by the application of the safety standard EN 61010.

Electromagnetic compatibility

This controller conforms with the essential protection requirements of the EMC Directive 89/336/EEC, amended by 93/68/EEC, by the application of a Technical Construction File. This instrument satisfies the general requirements of an industrial environment as described by EN 50081-2 and EN 50082-2. For more information on product compliance refer to the Technical Construction File.

SERVICE AND REPAIR

This controller has no user serviceable parts. Contact your nearest Eurotherm Controls agent for repair.

Caution: Charged capacitors

Before removing an instrument from its sleeve, disconnect the supply and wait at least two minutes to allow capacitors to discharge. Failure to observe this precaution will expose capacitors that may be charged with hazardous voltages. In any case, avoid touching the exposed electronics of an instrument when withdrawing it from the sleeve.

Electrostatic discharge precautions

When the controller is removed from its sleeve, some of the exposed electronic components are vulnerable to damage by electrostatic discharge from someone handling the controller. To avoid this, before handling the unplugged controller discharge yourself to ground.


Cleaning

Do not use water or water based products to clean labels or they will become illegible. Isopropyl alcohol may be used to clean labels. A mild soap solution may be used to clean other exterior surfaces of the product.

INSTALLATION SAFETY REQUIREMENTS

Safety Symbols

Various symbols are used on the instrument, they have the following meaning:



The functional earth connection is not required for safety purposes but to ground RFI filters.

Personnel

Installation must only be carried out by qualified personnel.

Enclosure of live parts

To prevent hands or metal tools touching parts that may be electrically live, the controller must be installed in an enclosure.

Caution: Live sensors

All isolated inputs and outputs have reinforced insulation to provide protection against electric shock. The non-isolated dc, logic and PDSIO outputs are all electrically connected to the main process variable input, (thermocouple etc.). If the temperature sensor is connected directly to an electrical heating element then these non-isolated inputs and outputs will also be live. The controller is designed to operate under these conditions. However you must ensure that this will not damage other equipment connected to these inputs and outputs and that service personnel do not touch connections to these i/o while they are live. With a live sensor, all cables, connectors and switches for connecting the sensor and non-isolated inputs and outputs must be mains rated.

Wiring

It is important to connect the controller in accordance with the wiring data given in this handbook. Take particular care not to connect AC supplies to the low voltage sensor input or DC or logic inputs and output. Only use copper conductors for connections (except thermocouple inputs) and ensure that the wiring installations comply with all local wiring regulations. For example in the UK use the latest version of the IEE wiring regulations, (BS7671). In the USA use NEC Class 1 wiring methods.

Power Isolation

The installation must include a power isolating switch or circuit breaker. This device should be in close proximity to the controller, within easy reach of the operator and marked as the disconnecting device for the instrument.

Earth leakage current

Due to RFI Filtering there is an earth leakage current of less than 0.5mA. This may affect the design of an installation of multiple controllers protected by Residual Current Device, (RCD) or Ground Fault Detector, (GFD) type circuit breakers.

Overcurrent protection

To protect the internal PCB tracking within the controller against excess currents, the AC power supply to the controller and power outputs must be wired through the fuse or circuit breaker specified in the technical specification.

Voltage rating

The maximum continuous voltage applied between any of the following terminals must not exceed 264Vac:

- line or neutral to any other connection;
- relay output to logic or dc sensor connections;
- any connection to ground.

The controller should not be wired to a three phase supply with an unearthed star connection. Under fault conditions such a supply could rise above 264Vac with respect to ground and the product would not be safe.

Voltage transients across the power supply connections, and between the power supply and ground, must not exceed 2.5kV. Where occasional voltage transients over 2.5kV are expected or measured, the power installation to both the instrument supply and load circuits should include a transient limiting device.

These units will typically include gas discharge tubes and metal oxide varistors that limit and control voltage transients on the supply line due to lightning strikes or inductive load switching. Devices are available in a range of energy ratings and should be selected to suit conditions at the installation.

Conductive pollution

Electrically conductive pollution must be excluded from the cabinet in which the controller is mounted. For example, carbon dust is a form of electrically conductive pollution. To secure a suitable atmosphere in conditions of conductive pollution, fit an air filter to the air intake of the cabinet. Where condensation is likely, for example at low temperatures, include a thermostatically controlled heater in the cabinet.

Over-temperature protection

When designing any control system it is essential to consider what will happen if any part of the system should fail. In temperature control applications the primary danger is that the heating will remain constantly on. Apart from spoiling the product, this could damage any process machinery being controlled, or even cause a fire.

Reasons why the heating might remain constantly on include:

- the temperature sensor becoming detached from the process;
- thermocouple wiring becoming short circuit;
- the controller failing with its heating output constantly on;
- an external valve or contactor sticking in the heating condition;
- the controller setpoint set too high.

Where damage or injury is possible, we recommend fitting a separate over-temperature protection unit, with an independent temperature sensor, which will isolate the heating circuit.

Please note that the alarm relays within the controller will not give protection under all failure conditions.

Grounding of the temperature sensor shield

In some installations it is common practice to replace the temperature sensor while the controller is still powered up. Under these conditions, as additional protection against electric shock, we recommend that the shield of the temperature sensor is grounded. Do not rely on grounding through the framework of the machine.

INSTALLATION REQUIREMENTS FOR EMC

To ensure compliance with the European EMC directive certain installation precautions are necessary as follows:

- For general guidance refer to Eurotherm Controls EMC Installation Guide, HA025464.
- When using relay or triac outputs it may be necessary to fit a filter suitable for suppressing the emissions. The filter requirements will depend on the type of load. For typical applications we recommend Schaffner FN321 or FN612.
- If the unit is used in table top equipment which is plugged into a standard power socket, then it is likely that compliance to the commercial and light industrial emissions standard is required. In this case to meet the conducted emissions requirement, a suitable mains filter should be installed. We recommend Schaffner types FN321 and FN612.

Routing of wires

To minimise the pick-up of electrical noise, the wiring for low voltage dc and particularly the sensor input should be routed away from high-current power cables. Where it is impractical to do this, use shielded cables with the shield grounded at both ends.

TECHNICAL SPECIFICATION**Input**

Range	$\pm 100\text{mV}$ and 0 to 10Vdc (auto ranging)
Sample Rate	9Hz (110mS)
Resolution	$< 1\mu\text{V}$ for $\pm 100\text{mV}$ range, $< 0.2\text{mV}$ for 10Vdc range
Linearity	Better than 0.2°C
Calibration accuracy	The greater of 0.25% of reading or $\pm 1^\circ\text{C}$ or $\pm 1\text{LSD}$
User calibration	Low and high offsets can be applied
Input filter	Off to 999.9 secs
Thermocouple types	Refer to the ordering code sensor input table
Cold junction compensation	> 30 to 1 rejection of ambient temperature changes in automatic mode. Uses INSTANT ACCURACY™ cold junction sensing technology to eliminate warm up drift and to respond quickly to ambient temperature changes. External references 0, 45, and 50°C
RTD/PT100 input	3-wire, Pt100 DIN43750. Bulb current 0.3mA. Up to 22Ω in each lead without error

Digital Outputs

Relay rating	Min: 12V, 100mA dc. Max: 2A, 264Vac resistive Application: heating, cooling, alarms or program event
Single logic output	18Vdc, 20mA. This output is not isolated from the main process value input. Application: heating, cooling, alarms or program event
Digital o/p functions	As per the ordering code
Triac rating	1A, 30 to 264Vac resistive (isolated)

Analogue outputs

Range	Scaleable between 0-10Vdc 0-20mA (non-isolated)
Analogue output functions	Refer to ordering code

Control functions

Control modes	PID or PI with overshoot inhibition, PD, PI, P, or On/Off, or motorised valve control
Cooling algorithms	Linear, water (non-linear), fan (min on time), oil
Tuning	One shot (automatic tune of PID and overshoot inhibition parameters) and continuous adaptive tuning. Automatic calculation of manual reset value when using PD control.
Auto/manual control	Bumpless transfer or forced manual output
Setpoint rate limit	0.00 to 999.9 display units per second, minutes or hour

Alarms

Number of alarms	Four
Alarm types	Absolute high or low. Deviation band, deviation high, deviation low. Rate of change
Alarm modes	Latching or non-latching. Blocking. Energised or de-energised in alarm

Setpoint programming

Number of programs	One or four
Segments per program	16
Event outputs	Up to two

Communications (all modules are isolated)

Modbus ®	RS232,2-wire,RS 485 and 4 wire RS485 modules
Baud rate	1200, 2400, 4800, 9600 and 19,200 baud

PDSIO

Slave input (isolated)	Remote setpoint input with holdback to master
Master output	Isolated from main PV. Retransmission of setpoint, process value or output

General

Display	Dual, 4 digit x 7 segment LED. Up to two decimal places
Supply	85 to 264Vac, 48 to 62 Hz, 10 W max OR 24Vdc or ac -15%, +20%. 10W max
Operating ambient	0 to 55°C and 5 to 90% RH non-condensing
Storage temperature	-10 to +70°C
Panel sealing	IP65
Dimensions	48mm wide x 48mm high x 150mm deep
Weight	250g
EMC standards	EN50081-2 & EN 50082-2 generic standards for industrial environments
Safety standards	Meets EN61010, installation category II (voltage transients must not exceed 2.5kV), pollution degree 2
Atmospheres	Not suitable for use above 2000m or in explosive or corrosive atmospheres. Electrically conductive pollution must be excluded from the cabinet in which this controller is mounted

EUROTHERM CONTROLS LIMITED**UK SALES OFFICE**

Eurotherm Controls Limited

Faraday Close, Durrington

Worthing

West Sussex BN13 3PL

Telephone	Sales: (01903) 695888
	Technical: (01903) 695777
	Service: (01903) 695444
Fax	(01903) 695666

email	http://www.eurotherm.co.uk
-------	---

Sales and support in over 30 countries worldwide
For countries not listed overleaf enquiries/orders to:

Eurotherm Controls Limited

Export Dept.,

Faraday Close, Durrington, Worthing

West Sussex, BN13 3PL

Telephone (01903) 268500

Fax (01903) 265982

Telex 87114 EUROWG G

Appendix E LOAD CURRENT MONITORING AND DIAGNOSTICS

Current flowing in a system of electrical heating elements (the 'Load') can be displayed on the controller by using a Eurotherm TE10 SSR fitted with intelligent current transformer, PDCTX, or an SSR or contactor with an external PDCTX.

Load current monitoring and diagnostics may be used with any time proportioned output, fitted in module position 1A, and uses the logic output wires which drive the SSR to return signals back to the controller. These signals represent the RMS value of the load current during the ON period, or load related alarm conditions. It is not designed for analogue outputs i.e. phase angle control.

It is also designed for single phase operation only.

There are three modes of operation:-

1. Mode 1

Detects if there is a **break in the heater circuit**. This includes heater or SSR open circuit. A single **Load Failure** alarm message is displayed on the lower readout of the controller.

2. Mode 2

Provides the following:-

Display of true RMS load current On the lower readout of the controller	Displays the true RMS current in the ON state to the load.
Low current alarm Analogous to Partial Load Failure (PLF) supplied in some Eurotherm SSRs	Provides advanced warning of failure of one or more heaters in parallel
High current alarm Activated when the heater exceeds a set limit	Typically used where element bunching may occur
SSR short circuit	This will apply full power to the heaters which could result in an over temperature condition. This alarm provides early warning.
Heater failure	Indicates open circuit load conditions

EXAMPLE WIRING DIAGRAM (FOR MODE 1 & 2 OPERATION)

Hardware Required

1. Eurotherm SSR type **TE10/PDS2** OR
 2. Eurotherm intelligent current transformer type **PD/CTX** + **contactor or zero voltage switching SSR**
- 2416 controller configured for PDSIO mode 2 option using logic output. This module must be fitted in module position 1. (order code **M2**).







Figure E.1 Connections for Mode 1 & 2

WARNING!



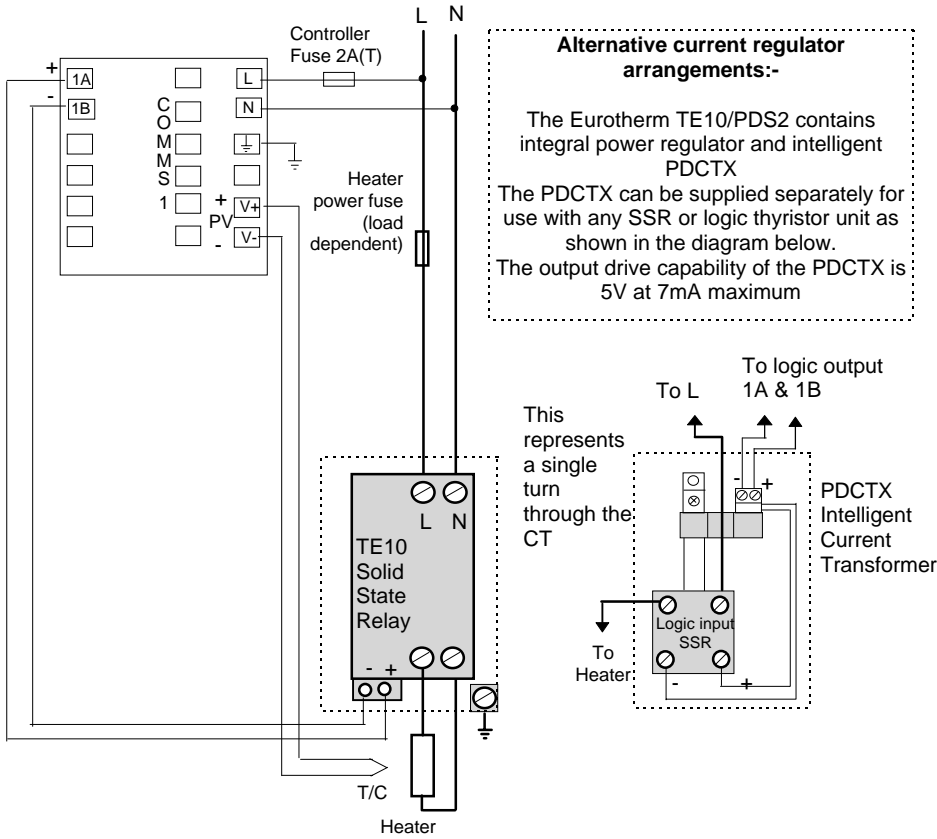

Take care that the controller is correctly wired for the mode of operation which is configured. Failure to do so may be hazardous in some situations.

OPERATION

To Read Load Current (mode 2 only)

Do This	This Is The Display You Should See	Additional Notes
<p>From the 'nFd' list</p> <p>Press  until <i>RmPS</i> is shown in the upper display</p>	<div style="display: flex; flex-direction: column; align-items: center;">   </div> <p>Current will be displayed in the lower readout. See also 'Display Modes' below.</p> <p>This display will be shown if:</p> <ol style="list-style-type: none"> I. The controller is unable to resolve the reading II. The controller is obtaining a reading III. The measurement has timed out i.e. current has not flowed for 15 seconds. 	<p>It will revert to the HOME display after 45 seconds or 10 seconds if an alarm is present</p>

To Display Load Current Continuously in the Lower Readout (mode 2 only)

Do This	This Is The Display You Should See	Additional Notes
<p>From the 'HOME' display, Figure 1.4,</p> <p>Press  until <i>d, SP</i> is shown in the upper display</p> <p>Press  or  until <i>RmPS</i> is displayed in the lower display</p>		<p>Current will be displayed in the lower readout continuously when the controller reverts to the HOME display, see also 'Display Modes' below.</p>


Display Modes

SSR RMS On State Current

This is the default state when high or low current alarms are configured. The load current displayed is the steady state true rms current measured during the ON period.

The minimum on times are:-
 Mode 2 0.1second





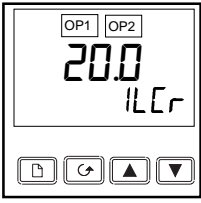
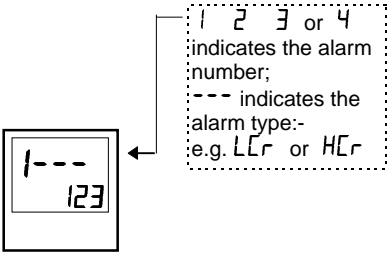
How Heater Alarms Are Displayed

Do This	This Is The Display You Should See	Additional Notes
If an alarm is present it will flash a four character mnemonic in the lower display	<p>Actual Temperature (PV) →</p>  <p>The display shows 'HOME Display' at the top. Below it are two small boxes labeled 'OP1' and 'OP2'. The main display area shows '20.0' in large digits and 'ILLr' in smaller digits below it. At the bottom of the display are four buttons: a square button, a circular arrow button, an up arrow button, and a down arrow button.</p>	If more than one alarm is active, the display will alternate between the alarm messages and the default parameter in the lower display

The Alarm Messages are:-







Mnemonic	Meaning	Description
The following two messages are alarms which are produced as a result of failure within the process. In place of dashes the alarm number will appear i.e 1, 2, 3, or 4		
-L <u>LL</u> r	Alarm number - <u>Low Current</u>	Used for partial load failure detection. To avoid nuisance tripping due to supply voltage variations set to a value at least 15% below the minimum normal operating current
-H <u>LL</u> r	Alarm number - <u>High Current</u>	Used for load overcurrent protection. To avoid nuisance tripping due to supply voltage variations set to a value at least 15% above the maximum normal operating current. Note: This alarm is not intended to provide instantaneous safety protection from short circuit fault conditions
The following message is a diagnostic alarm which appears for mode 1 operation only.		
L <u>LF</u>	<u>Load Fail</u>	This includes failure of the heater circuit or the SSR
The following two messages are diagnostic alarms produced as a result of failure within the equipment or wiring connections. They appear for modes 2 and 5 operation only. They may be enabled using the <i>di AL</i> parameter in the <i>RL L₅E</i> , see 'SHORT CIRCUIT SSR ALARM AND HEATER FAIL ALARM'		
H <u>LF</u>	<u>Heater Fail</u>	No current is being drawn while the controller output demand signal is on
S <u>SR.F</u>	<u>SSR Fail</u>	The load is continuously on while the controller output demand signal is off

TO SET THE ALARM TRIP LEVELS

Do This	This Is The Display You Should See	Additional Notes
From the HOME display press  until the AL L, SE is displayed		To select the Alarm List header
Press  button until the desired alarm number is displayed Press  or  to adjust the alarm trip level		To select the diagnostic alarm parameter found under the Alarm List header The alarm trip level is set to 123

SHORT CIRCUIT SSR ALARM AND HEATER FAIL ALARM

These alarms exist as **Diagnostic Alarms** in the controller. To make the alarm active it is only necessary to turn on the diagnostic alarm feature in the Alarm List in the Operator Level

Do This	This Is The Display You Should See	Reason
From the HOME display press  button until the AL L, SE is displayed		This opens the list which contains the d, AL mnemonic
Press  until d, AL is displayed Press  or  to select YES		This activates the d, AL mnemonic to allow Diagnostic Alarms to be displayed in the lower readout of the HOME display

RELAY OUTPUTS

Any plug in module can be used for alarms provided they are not already being used for another purpose, such as control. Any one or more alarms can be attached to an output, which will operate when an alarm occurs. Contacts are rated at 2A 264Vac for operating external beacons or audible devices.













TO CONFIGURE PDS LOAD CURRENT DIAGNOSTICS

















Configuration of PDS load current diagnostics is in four parts:-

1. Configure the Logic Module for PDSIO Mode 1 or 2 operation.
2. Configure the Low and High Current trip alarms.
3. Attach the alarms to operate an output relay.
4. Set up the Scaling Factor.

First enter Configuration Level. See Chapter 5

TO CONFIGURE THE LOGIC MODULE FOR PDSIO MODES 1 OR 2











Do This	This Is The Display You Should See	Additional Notes
Press  until the IA Conf is displayed		This opens the configuration list associated with module position 1A
Press  to show Id		This shows the identity of the module The module identity is <u>l</u> ogic output
Press  to show Func Press  or  to show SSr 1 or SSr 2 as required.		This shows the <u>f</u> unction of module The module function is set to PDSIO mode 1
Press  to show UALL Press  or  to show 0.0		This is the lower PID demand level To set the minimum PID signal to 0%

<p>Press  to show URL.H)</p> <p>Press  or  to show 100.0</p>		<p>This is the upper PID demand level</p> <p>To set the maximum PID signal to 100%</p>
<p>Press  to show OUT.L</p> <p>Press  or  to show 0.0</p>	<p>Warning! If <i>OUT.L</i> is set to any figure other than 0 the minimum output power will be limited to this level. You must ensure that this does not present an unsafe condition for the process</p> 	<p>This is the minimum output power</p> <p>To set the min output power to 0</p>
<p>Press  to show OUT.H</p> <p>Press  or  to show 100.0</p>		<p>This is the maximum output power</p> <p>To set the max output power to 100</p>
<p>Press  to show SEnS</p> <p>Press  or  to show nor</p>		<p>This sets the output signal to normal for heating control</p>

TO CONFIGURE LOW AND HIGH CURRENT TRIP ALARMS

Alarm 1 will be configured as Load Current Low (LCr)







Alarm 2 will be configured as Load Current High (HCr)


Do This	This Is The Display You Should See	Additional Notes
Press  button until the $AL\ Conf$ is displayed		This opens the configuration list which contains the Alarms
Press  to show $AL\ 1$ (alarm 1) Press  or  to show LCr	 After 0.5 sec the display will blink to show the alarm type has been accepted	To select alarm 1 To make alarm 1 = <u>L</u> ow <u>C</u> urrent
Press  until $AL\ 2$ (alarm 2) appears Press  or  to show HCr	 After 0.5 sec the display will blink to show the alarm type has been accepted	To select alarm 2. To make alarm 2 = <u>H</u> igh <u>C</u> urrent

Note:- The above alarms are known as **SOFT ALARMS** because they are indication only.

TO ATTACH SOFT ALARMS TO A RELAY OUTPUT

Any one alarm indicated above may be attached to an output (normally a relay). Alternatively any combination of alarms may be attached to operate a relay using the procedure below:-

Do This	This Is The Display You Should See	Additional Notes
Press "PAGE" key  as many times as necessary to 3A Conf		Any output module can be configured for an alarm output provided it is not used for any other purpose, eg as a control output. In place of 3A you should select the module required, i.e. 1A or 2A
Press  until 1--- is displayed Press  or  to select YES or Repeat the above step for every alarm to be attached to the output	 1---- denotes alarm 1 followed by three letters which denote the alarm type e.g. LLr	YES means that the selected output will activate when an alarm occurs in normal operation no means the output will not activate

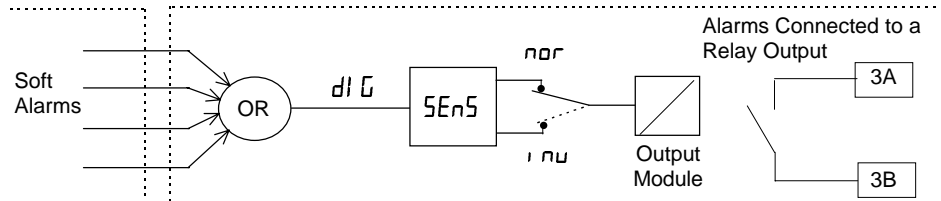







THE SCALING FACTOR

The value of the current displayed on the controller is scaled using the scaling factor. This is found in the `INST CONF` list. It is set, by default, to 100 and assumes a single turn through the current transformer. If two turns are made through the current transformer it will be necessary to adjust the scaling factor to 50 to obtain the same reading.

Under normal conditions you should not need to change the scaling factor.

If, however, you wish to change the sensitivity of the current reading, for example, to read very low currents you may need to change the number of turns through the PDCTX and/or adjust the scaling factor to compensate. See also note 1 below.

TO ADJUST THE SCALING FACTOR

Do This	This Is The Display You Should See	Additional Notes
Press  button until <code>INST CONF</code> is displayed		
Press  until <code>LC.HI</code> is displayed		
Press  or  to change the scaling factor		

Note 1:-

Minimum Resolvable Current

TE10 4A RMS. It is not possible to read currents lower than 4A when using a TE10.

PDCTX 4A RMS for a single turn through the PDCTX

Should you wish to read currents lower than 4A using a PDCTX it is necessary to increase the number of turns through the PDCTX and adjust the scaling factor to compensate.

For example: To read 1.0A wind 4 turns through the PDCTX and adjust the scaling factor to 25 as shown in the table below.

Scalar = 100/N Where N = Turns through PDCTX			
N	Scalar	N	Scalar
1	100	5	20
2	50	10	10
4	25		

Maximum Resolvable Current

TE10 Determined by the maximum range of the SSR

PDCTX 100A (or 100 ampere turns)

Finally Exit configuration level. See Chapter 5.